


Changes for the Better



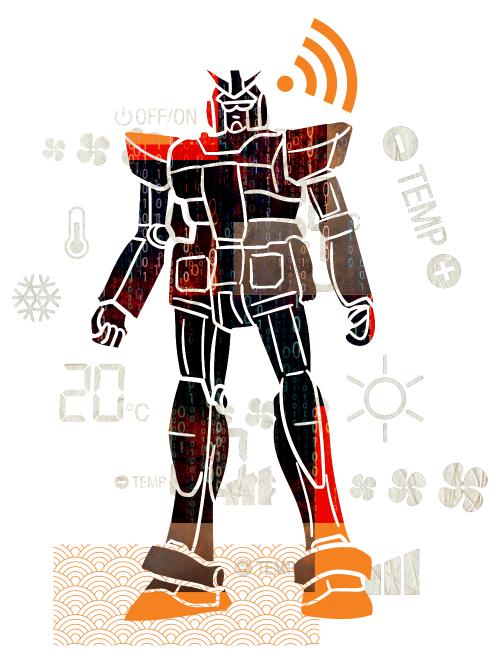

# **Control Systems**

A wide range of control solutions, management, supervision and monitoring fo VRF-HVRF CITY MULTY systems. For high comfort, low consumption and optimized energy efficiency. Quality and technology ready to serve companies and customers.






# **Introduction**

Using an efficient and practical control system plays a crucial role in optimising the performance and reducing the energy consumption of VRF-HVRF CITY MULTI air conditioning, heating and domestic hot water production systems.

Ensuring that a VRF system is controlled correctly will result in superior comfort, lower consumption and better energy efficiency. An incorrectly controlled VRF system will not be able to operate as effectively and efficiently as it is designed to: each degree centigrade variation from the requested operating temperature may increase energy costs by as much as 5%.

Mitsubishi Electric offers an extensive range of technologically advanced remote and centralised control systems to allow integrated control and adjustment, with the same superior reliability and innovation as VRF-HVRF CITY MULTI systems. Using one of the wide choice of controller options available will ensure that the air conditioning system functions both correctly and efficiently, and maximises comfort.

Advanced MELANS (Mitsubishi ELectric's Air-conditioning Network System) control technology offers the same modularity as VRF-HVRF CITY MULTI variable refrigerant flow systems. The advantages and benefits of these systems are clear right from the start: they are extremely simple and foolproof to install, as the connections between the different units and devices in the installation consist of single, non-polarised two-core cables over which all the components in the system exchange data and operating parameters and which also carry all control and setting signals generated by users. These systems are diagnosed using specific software applications and tools developed by Mitsubishi Electric.

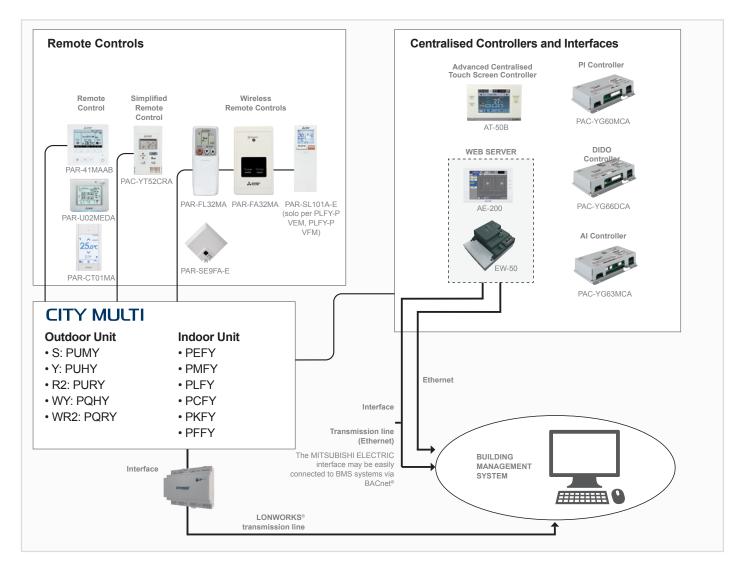



#### Local control and adjustment

The local settings controller is a wired controlled (or infra-red remote controller) installed in the same room served by the associated indoor unit, which allows the user access to the typical functions of a Mitsubishi Electric VRF-HVRF CITY MULTI system. This type of connection may be used for the local control of one or more indoor units (up to 16), and represents the first point of contact and control between the user and the installation. The main functions typically available with this type of controller

are: • ON/OFF


- Select operating mode
- View and set temperature
- View ambient temperature
- Fan speed
- Air flow direction



#### Centralised control and adjustment

In a complex and large system architecture, all the information relative to the installation is routed through and processed by advanced centralised controller and supervisor devices designed to ensure impeccable comfort, minimise energy consumption, automate routine adjustment functions and make personalised adjustment simpler and more intuitive for users, and to do this securely and safely.


All of this is based on a single basic principle: instead of the user having to physically check the installation to make sure that it is operating correctly, all the information relative to the installation is made available to the user, wherever he or she may be, in the most simple and intuitive form possible. One the one hand, individual users must naturally have the freedom to set the air conditioning parameters to suit their own preferences from remote controllers connected to each indoor unit, while on the other, the building administrator must be able to supervise the entire hierarchical structure of the air conditioning installation as if it were a single device. The concept of centralised control over all the devices installed in the field is the answer to these needs, and in this case, the indoor units in the installation share data continuously over the M-Net communication bus.

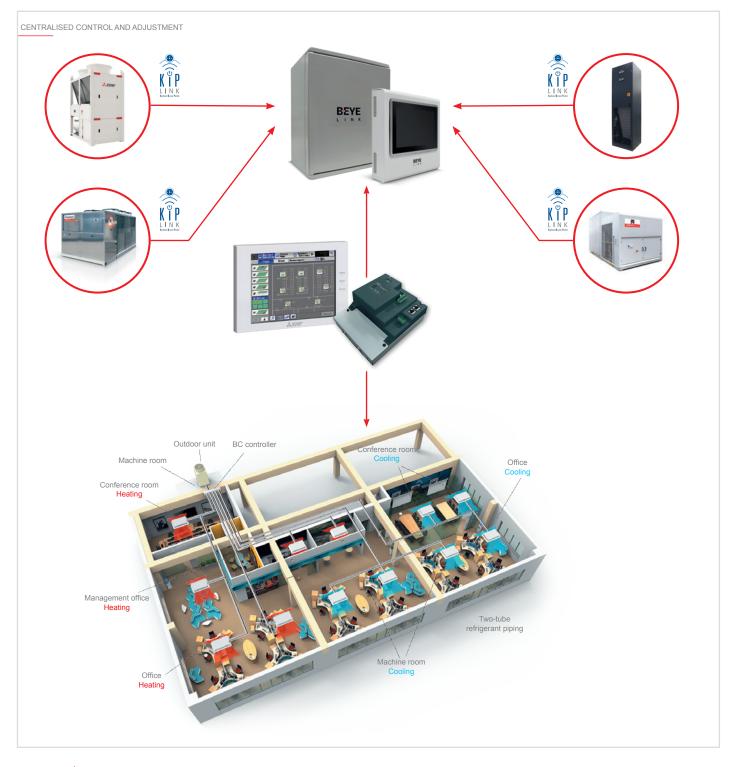


#### **Remote control and adjustment**

Remote control and adjustment means the ability to manage the indoor units of an air conditioning system — both individually and collectively — remotely via the cloud from any internet access point and, therefore, without direct access to the network infrastructure of the building.

This capability brings the flexibility of local control and adjustment — with access to all typical control functions for indoor units and the advanced centralised management functions offered by a centralised controller system to a mobile device such a smartphone, tablet or PC, and also introduces energy monitoring and management functions.

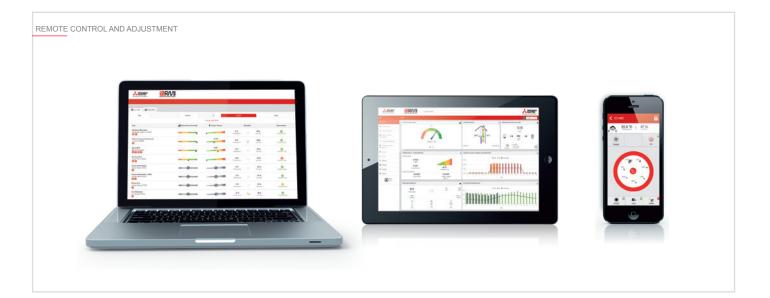

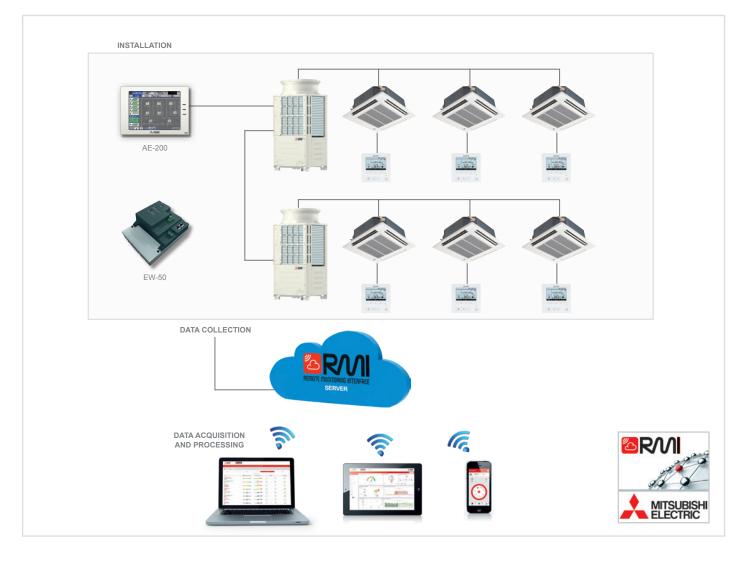

#### **External signal integration**

The ability of a complex system to receive data from components and third party input signals allows for even more advanced management of the system itself.


Integrating measurement signals for different parameters makes it possible to monitor and, therefore, manage the entire system more effectively and efficiently. For instance, variations in temperature may be monitored with a sensor while a consumption meter may be used to measure and bill energy consumption. These input signals may be used to optimise the functions of the system as a whole.



#### **BMS** integration

A building management system (BMS) is capable of managing the main technical installations in a building even if they are from different manufacturers.

For this to be possible, however, the installations must be equipped with interfaces that are compatible with the BMS system. Using a system such as this means that all the technical installations in the building — e.g. lighting, lifts, security and safety systems, energy usage and, of course, air conditioning — may be controlled and managed in concert for maximum efficiency. Another advantage of these systems is that they allow the installations in the building to interact and exchange information with one another over a single communication network, without requiring the installation of complex and costly electrical connections and wiring.

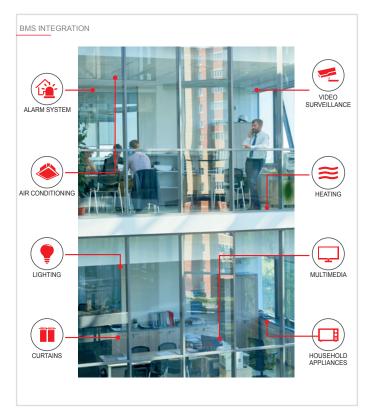







# Standard UNI EN 15232

Standard UNI EN 15232 – Energy performance of buildings -Impact of Building Automation, Controls and Building Management. The European standard EN15232 defines the methods for evaluating the energy savings attainable in buildings in which automated management and control systems are used for technical installations and the electrical power system. The purpose of the standard is to define the impact of building automation on the energy performance of buildings, and applies to existing buildings, new building projects and reconstruction projects.

- Class D "NON ENERGY EFFICIENT": this class includes all conventional installations without automation or control functions, which are not energy efficient;
- Class C "STANDARD": installations with conventional building automation and control systems (BACS), which may be equipped with communication BUS networks but attain significantly less performance than they are effectively capable of;
- Class B "ADVANCED": this class includes installations equipped with advanced building automation and control systems (BACS) which also feature certain technical building management (TBM) functions specifically for the centralised and coordinated management of the individual systems in the building;
- Class A "HIGH ENERGY PERFORMANCE": high energy performance BAC and TBM systems; in other terms, systems with sufficient precision and with comprehensive automated control functions which ensure that the installation operates with the highest possible energy performance.


It is imperative that all electrical and technical installations, whether new or existing, and heating and air conditioning installations in particular, are equipped with adequate devices or systems for their control, adjustment and automation. The purpose of automation systems is to maximise the energy efficiency of the installations in the building in accordance with external ambient conditions and the variable usage and occupancy scenarios possible within the building itself, while also offering the highest possible levels of comfort, safety and quality. Managing the technological systems in a building saves energy, reduces  $CO_2$  emissions and contributes to improving environmental performance in compliance with the most widely applied national and international directives.





#### Mitsubishi Electric solutions for attaining compliance with UNI EN 15232

Mitsubishi Electric offers state of the art solutions to meet today's needs for greater energy efficiency. A choice of different types of control system is available to cater for differing needs which, in addition to responding in full to the requirements of the users, also contribute to reducing energy consumption in compliance with the European standard.

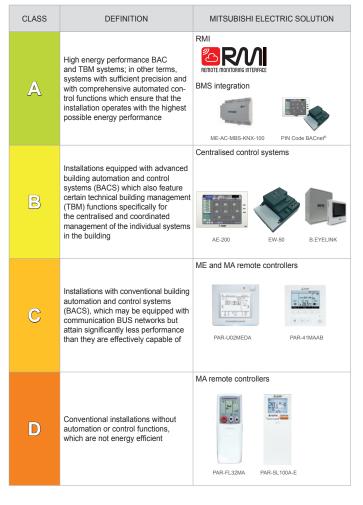





#### M-Net

The Mitsubishi Electric control system uses a proprietary communication protocol denominated M-Net for communication between Mitsubishi Electric devices. The line between connected devices consists of a single, flexible and shielded 2-wire bus cable. M-Net may be interfaced with all open building management protocols (KNX, Modbus, LON, BACnet®).

#### **M-Net address**

All the devices connected to the M-Net data transmission bus are assigned a numerical identifier (address) from 0 to 255. Examples of M-Net devices (City Multi indoor units, ME etc.).

#### Group

A set of indoor devices controlled simultaneously. Blocks and floors consist of groups. The maximum number of units per group is 16.

#### Block

A block consists of multiple groups controlled simultaneously. The maximum number of groups per block is 50.

#### Floor

Floors may also be created, with each floor containing groups. The graphic user interface for floors is different from the interface used for blocks.

#### MA remote controller

The MA remote controller is a control panel which may be used to manage a group containing up to 16 indoor units. The remote controller must be connected to each of the indoor units in the group with a 2-wire non-polarised cable. This remote controller does not have an M-Net address.

Example wired remote controllers: PAC-YT52, PAR-41.

#### ME remote controller

The ME remote controller is a control panel which may be used to manage a group containing up to 16 indoor units. This remote controller is assigned an M-Net address. The M-Net addresses of the indoor units controlled by this device must be set on the controller itself.

The main advantage of this device over an MA remote controller is the ability to reconfigure the group by simply adding and/or removing the M-Net addresses of the indoor units without having to rewire the remotely controlled indoor units. Example remote controller: PAR-U02.

#### **Centralised control**

To manage more than 16 units both collectively and individually from a single central point, or to allow access to advanced setting functions (e-mail notification messages), a centralised controller must be used. The control capabilities over the indoor units controlled depend on the type of controller used. Example centralised control systems: AT-50, EW-50, AE-200.

#### Web server control (AE-200 and EW-50)

With this control solution, a web interface for monitoring and control functions may be accessed from a computer. To do this, the centralised remote controller is connected to a local network and the interface is accessed from the computer via its IP address. IP address: each component in a data network is assigned a numerical identifier (address) consisting of 4 numbers from 0 to 255. In general, in a domestic local network, the IP addresses of the components in the network range from 192.168.1.0 to 192.168.1.255.

This interface is accessed from a web browser such as Internet Explorer, Google Chrome, Mozilla Firefox or Safari. The IP address of the remote controller must be entered in the browser in the form of a url link as follows: https://[IP address of the remote controller]/ it/administrator.html-

# M-NET M-Net Power - Uninterrupted power supply system for VRF indoor units

The exclusive M-Net Power system by Mitsubishi Electric ensures uninterrupted operation of the installation even in the event of power loss or partial malfunction of one or more indoor units.

Exclusive M-Net Power technology by Mitsubishi Electric is extraordinarily reliable and flexible: the M-Net data transmission line and separate power and control circuits ensure the uninterrupted operation of the indoor units of the entire air conditioning system.


Total flexibility in planning and laying out 230V AC power circuits, without the need for shared main lines and without requiring any additional devices to attain compliance with legislation for electrical systems, is a fundamental prerequisite for an air conditioning installation.


This circuit configuration is essential for situations where the system itself is shared by multiple owners or tenants, and where each must be able to electrically isolate their respective indoor terminal sections when required.

Furthermore, this system is also capable of identifying the following conditions automatically:

- indoor unit malfunction.
- power loss to indoor unit.

In the event of one of these conditions, the outdoor unit isolates the malfunctioning indoor unit or indoor unit receiving no power, to ensure the continued electrical and refrigeration functionality of the system with no action from a technician and/or a system administrator.

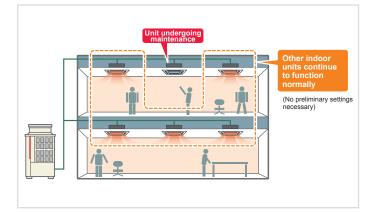

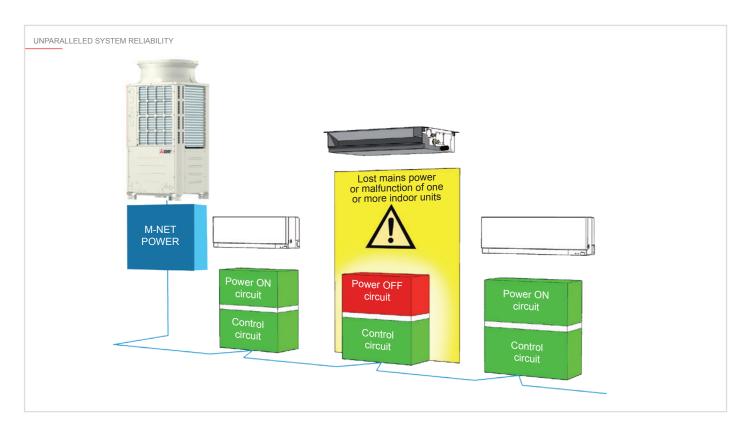


## **Controller types**

#### MA remote controller

Mitsubishi Electric controller systems are primarily subdivided into MA controllers and ME controllers.

MA controllers use automatic addressing technology: when a


physical connection is made via the specific terminal board, the remote controller automatically assigns an address to the indoor unit or group\* of indoor units to be managed.

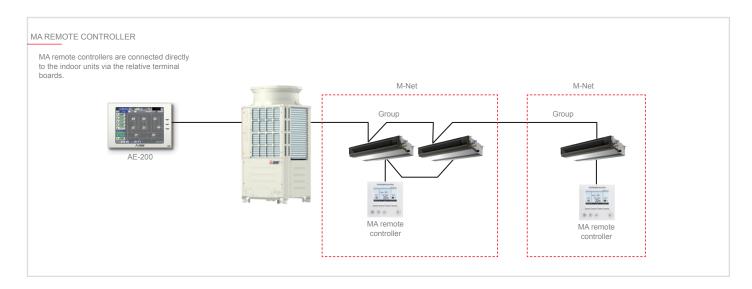

#### ME remote controller

ME controllers feature configurable address technology: when the connected to the M-Net data transmission network is made via the relative terminal board of the indoor unit to be controlled, the

remote control is associated with the indoor unit or group\* of indoor units with logical addressing.

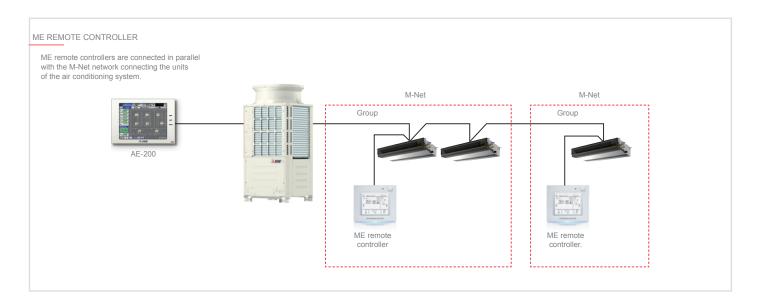




#### The concept of addressing

The exclusive M-NET data transmission system developed specifically by Mitsubishi Electric is used for data exchange between the devices in the installation.


This system allows for data transfer between the different devices over a single, shielded unpolarised cable with two core wires.

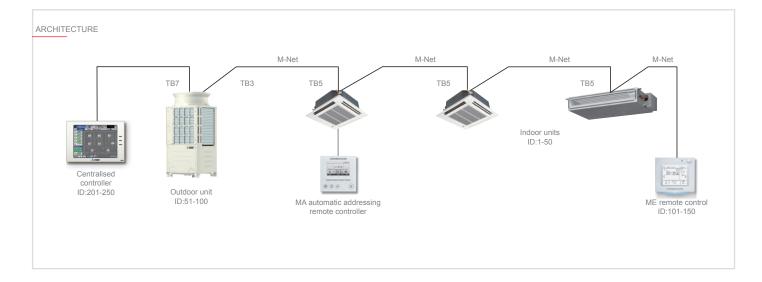

#### The concept of grouping

Indoor units of the same model may be organised in sets called 'groups' for operation in unison (for simultaneous selection of functions such as On/Off, mode, Set Point, fan speed etc. ). All the indoor units must be of the same model to ensure that they all have identical functions.

According to the logic applied, the unit with the lowest M-Net address will be the "Master" for the relative group. Example: Group 1 - Units 1, 2 and 3 = Unit 1 is the Master unit Group 4 - Units 4, 5, 6 and 7 = Unit 4 is the Master unit This is important for integration, as the BMS will address signals to and from the Master unit only. Groups may in turn be organised into logical sets denominated 'blocks'. Blocks may be used for billing and apportioning energy consumption (User Blocks) or for managing other functions (e.g. timer programming). These blocks cannot be viewed or managed via the BMS, and are logical sets utilised solely for the purpose of centralised control.

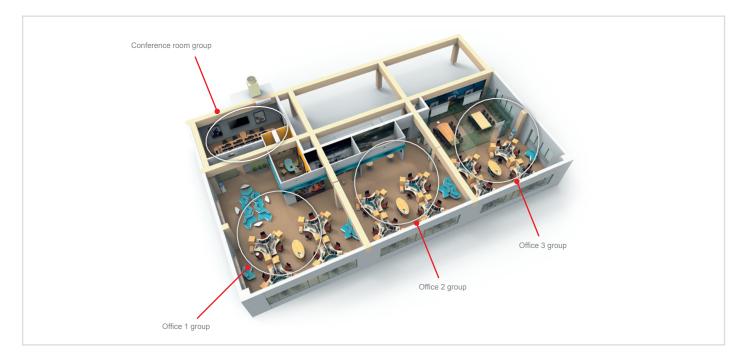

# Key <u>Te</u>chnologies

Mitsubishi Electric applies innovation to develop new functions and technological solutions at the service of comfort and energy efficiency.

# **Functions**

#### ♦ <sup>+0.5 °C</sup> View and set setpoint temperatures in 0.5°C steps

To allow the user precise control for even greater comfort, setpoint temperatures are displayed and set in 0.5°C steps.

#### ] Daily schedule

Timer The daily schedule programming function may be used to switch the unit on and off in accordance with the settings made by the user and is effective only for the current day. The schedule is cancelled automatically at midnight at the end of the day on which the schedule was programmed.



Daily

#### Weekly schedule

The weekly schedule programming function may be used to plan the operation and settings of the

installation for a week. Up to 5 weekly schedules are settable.



#### Annual schedule

The annual schedule programming function lets the user define "special" days, during which the installation is required to operate with different settings than those defined for the current weekly schedule. Up to 52 special days may be set during the year.



14

#### **Refrigerant leak alarm**

This remote control unit supports the R32 refrigerant leak detection system.

# **Energy savings**

**Energy Management** The Energy Management function displays parameters relative to the energy management of the installation (energy consumption, operating times, external temperature etc.) in graph form.

# Dual Setpoint

The new Dual Setpoint function makes it possible to preset setpoint temperatures for cooling and heating mode in a single operation.



# Night Setback — Maintenance

Heating (cooling) mode is activated when, after the monitored group has stopped, the temperature in the room drops below (rises above) the set lower (upper) limit.



#### Occupancy Sensor

The occupancy sensor detects if a room is vacant and enables automatic control of the indoor units to implement energy saving strategies (ON/OFF, fan speed etc.) based on the effective occupancy of each room.



#### Temperature and humidity sensor

The temperature setting is adjustable with a resolution of 0.5°C, while humidity may be monitored and controlled using external devices connected to the system via AHC.



# **Special functions**

#### .ight sensor

The light sensor measures the light levels in the conditioned room and adjusts the brightness of the remote control display accordingly.

#### indicatore di stato LED LED

The LED status indicator indicates the status of active functions on the remote control. Each colour is associated with a status or function: The LED indicator may be temporarily or permanently disabled.



## Touch

LCD Touch screen display.



#### **Bluetooth**®

Bluetooth® Low Energy connectivity lets users connect their smartphones or tablets to the remote controller.



#### Apps

Dedicated apps (User app and Professional app) permit control of the remote controller from a smartphone or tablet.



#### Custom home screen logo

A custom logo may be displayed in the menu home screen. The logo is displayed in the home screen whenever the display backlight is active.



**Custom colour schemes** 

patterns 180 colour schemes (for the fonts and background) are available for the display.

# Connection



#### M-Net Connection

ME M-Net addressing technology.

# **BACnet**<sup>®</sup>

#### **BACnet**<sup>®</sup>

The installation can connect directly to a home automation system using the BACnet® protocol without interfaces.



#### AHC compatible

Compatible with AHC (Advanced HVAC Controller) programmable controller.



#### Web Server

The operating parameters of all the indoor units in the installation may be monitored and managed from any PC on the same local network (LAN or Wi-Fi network of controller) via a web browser.

## Acoustic comfort



#### **Night Mode**

This function further reduces the noise produced by the outdoor unit by reducing the maximum fan speed and compressor frequency in consideration of the reduced demand for thermal power during night time operation.



# <u>Control systems</u>

PAC-SK60SA-E Refrigerant leak detection sensor

#### **Remote Controllers**

| PAC-YT52CRA Design remote controller                                | 32 |
|---|----|
| PAR-41MAAB Deluxe remote controller                                 | 34 |
| PAR-CT01MA Prisma remote controller                                 | 36 |
| PAR-U02MEDA Advanced remote controller                              | 39 |
| PAR-FL32MA Wireless remote controller                               | 42 |
| PAR-SL101A-E Wireless remote controller for four-way cassette units | 43 |
| PAR-W21MAA Remote controllers for hydronic modules                  | 44 |
| PAR-W31MAA Ecodan remote controllers                                | 46 |
| PZ-62DR-EB Lossnay / remote controller                              | 48 |

#### **Centralised controllers**

| AT-50B Centralised system control                                      | 62      |
|--|---------|
| AE-200E Web server centralised controller - 3D Touch Controller        | 68      |
| EW-50E Web server centralised controller - 3D Blind Controller         | 72      |
| 3D PLAN Installation layout map display system for centralised control | lers 76 |

# Remote management and supervisor systems for VRF and HVRF installations

| CLIMASYNC Centralised control and synchronisation system |    |
|--|----|
| MELCOTEL Interface for hotel simplified application      | 82 |
| 3D TABLET CONTROLLER Wi-Fi Management System             | 85 |

# Management and supervision system remote for HVAC systems

B.EYELink Supervision system for HVAC systems

NEW 27

NEW 89

# Management and supervision system CLOUD

| MAC-587 MelCloud Wi-Fi interface                      |     |  |
|---|-----|--|
| MELCLOUD CITY MULTI                                   |     |  |
| Cloud-based remote management and supervisor system   | 98  |  |
| REMOTE MONITORING INTERFACE (RMI) Cloud-based remote  |     |  |
| management and supervisor system for professional use | 100 |  |



# External signal integration

| 110 |
|-----|
| 111 |
| 112 |
| 113 |
| 116 |
| 117 |
| 119 |
|     |
| 120 |
| 127 |
| 128 |
|     |
|     |

## Integrazione Domotica

| A1M Procon Interfaccia MODBUS e BACNet per unità interna      |     |  |
|---|-----|--|
| Intesis ME-AC-MBS-1 BMS interface for Modbus® networks        | 135 |  |
| Intesis ME-AC-KNX -1 BMS interface for KNX® networks          | 136 |  |
| Connection diagrams for indoor units                          | 137 |  |
| Accessories / functions table For home automation integration | 139 |  |

## **BMS** integration

| XML Ethernet based BMS integration                   |     | 141 |
|--|-----|-----|
| PINCODE BACnet® BMS integration for BACnet® networks |     | 142 |
| ME-AC-MBS-KNX-100                                    |     |     |
| BMS interface for Modbus® and KNX® networks          | NEW | 144 |









PAR-FL32MA PAR-SL101A-E WIRELESS REMOTE CONTROLLER



PAC-YT52CRA DESIGN REMOTE CONTROLLER



**PAR-W21MAA** ECODAN REMOTE CONTROLLERS

| <br>_                    | PM 2 | 138 Fri |
|--------------------------|------|---------|
| Roon 28<br>Set 1<br># 28 | .5°C | Arto    |
| 5                        | ~    |         |









PAR-CT01MA PRISMA REMOTE CONTROLLER



PZ-62DR-EB LOSSNAY REMOTE CONTROLLER







AT-50B CENTRALISED SYSTEM CONTROLLER







#### **AE-200E** 3D TOUCH Controller WEB SERVER CENTRALISED CONTROLLER



# **3D TABLET CONTROLLER**

Wi-Fi REMOTE MANAGEMENT SYSTEM



# **EW-50**

3D BLIND Controller WEB SERVER CENTRALISED CONTROLLER



#### B.EYELink SUPERVISION SYSTEM FOR HVAC SYSTEMS



#### **3D PLAN** LAYOUT DISPLAY SYSTEM FOR CENTRALISED CONTROLS



# **CLIMASYNC**

CENTRALISED CONTROL, ADJUSTMENT AND SYNCHRONISATION SYSTEM



#### **MELCOTEL** INTERFACE FOR HOTEL SIMPLIFIED APPLICATION



## **MAC-587** MELCLOUD WI-FI INTERFACE



# **MULTI**

CLOUD-BASED REMOTE MANAGEMENT AND SUPERVISOR SYSTEM





RMI Remote Monitoring Interface

CLOUD-BASED REMOTE MANAGEMENT FOR **PROFESSIONAL USE** 







# PAC-SC36NA

EXTERNAL SIGNAL ADAPTER FOR OUTDOOR UNITS







#### **PAC-SC37SA-E** EXTERNAL SIGNAL ADAPTER FOR

EXTERNAL SIGNAL ADAPTER FOR OUTDOOR UNITS



MAC-497 INTERFACE FOR REMOTE CONTROLLERS



PAC-SE55RA EXTERNAL SIGNAL ADAPTER FOR INDOOR UNITS



MAC-334IF M-NET INTERFACE FOR RESIDENTIAL / COMMERCIAL LINE INDOOR UNITS



PAC-SA88HA EXTERNAL SIGNAL ADAPTER FOR INDOOR UNITS





M-NET INTERFACE FOR DIGITAL IMPULSE CONSUMPTION METERS



**PAC-SH29TC** EXTERNAL SIGNAL ADAPTER FOR PKA SERIES INDOOR UNITS









PAC-YG66MCA M-NET INTERFACE FOR DIGITAL SENSORS



XML

ETHERNET BASED BMS INTEGRATION



PROCON A1M MODBUS AND BACNET INTERFACE FOR INDOOR UNITS



**PIN code BACnet®** 

BMS INTEGRATION FOR BACNET® NETWORKS



ME-AC-MBS-1 BMS INTERFACE FOR MODBUS® NETWORKS



# ME-AC-MBS-KNX-100

BMS INTERFACE FOR MODBUS® AND KNX® NETWORKS



## **ME-AC-KNX-1**

BMS INTERFACE FOR KNX® NETWORKS






# Key Technologies

## **Energy savings**



#### **Dual Setpoint**

Setpoint The new Dual Setpoint function makes it possible to preset setpoint temperatures for cooling and heating mode in a single operation. On Y series heat pump models, this functions means that it is no longer necessary to reset setpoint temperatures each time the operating mode of the unit is switched from Heating to Cooling mode and vice versa. In R2 heat recovery systems, it is also possible for set an "energy saving" temperature band for AUTO mode, within which the system ventilates only and performs no thermal air treatment (thermo off). Setting a broader band increases energy savings, but permits larger temperature variations in the indoor space. Setting the two setpoint temperatures closer together creates a narrower thermo off band, prioritising maximum comfort in the indoor space over energy savings.

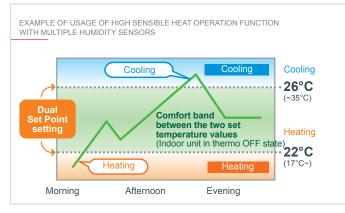

OPERATION WITH SINGLE SET POINT (AUTO MODE) ILLUSTRATED

Figure Below

OPERATION WITH SINGLE SET POINT (AUTO MODE) ILLUSTRATED
Image: Comparison of the set of th






The Night Setback - Maintenance temperature function activates heating mode when, after the monitored group has stopped, the temperature in the room drops below the set lower limit. The function also activates cooling mode when, after the monitored group has stopped, the temperature in the room rises above the set upper limit. This function is not available if the operating mode and temperature setting are modified from the remote control.



#### **Occupancy Sensor**


The occupancy sensor detects if a room is vacant and enables automatic control of the indoor units to implement energy saving strategies based on the effective occupancy of each room. The occupancy sensor enables the following energy saving functions:


- · Switch indoor units ON/OFF based on occupied/vacant state of room;
- · Fan speed control;
- Switch indoor unit from Thermo ON to Thermo OFF state;
- · Configure temperature deviation based on occupied/vacant status.

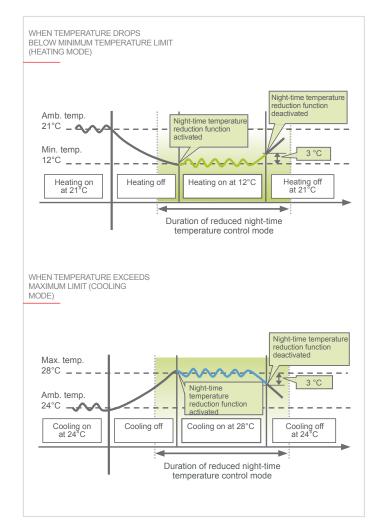

If the ambient temperature is measured in the same position as the indoor unit air intake, the temperature reading will not be precise when the unit is inactive. In this case, install a remote sensor (PAC-SE41TS-E) or use the built-in sensor of the remote control to move the temperature acquisition point.



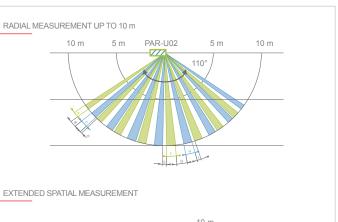

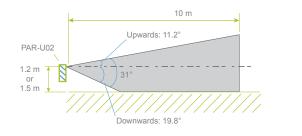


# **Special functions**



#### Light sensor

The light sensor measures the light levels in the conditioned room and adjusts the brightness of the remote control display accordingly. Bright/dark thresholds may be set directly from the remote control over an extended luminosity range (1 to 65535 lx).

The light sensor is also used in low light conditions to confirm the occupied/vacant status of the room.

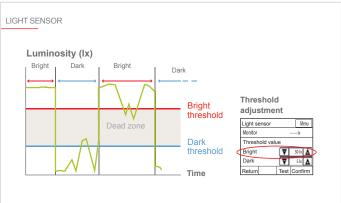




indicatore di stato

#### LED status indicator

The LED status indicator indicates the status of active functions on the remote control. Each colour is associated with a status or function: e.g. Red=Heating, Blue=Cooling, Flashing red=Error. The LED indicator may be temporarily or permanently disabled.

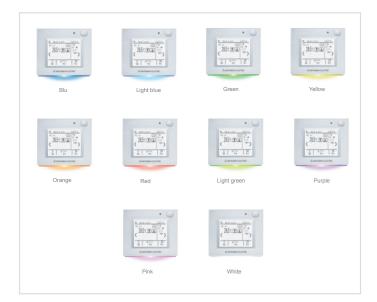


## **Functions**

#### View and set setpoint temperatures in 0.5°C steps

The goal of Mitsubishi Electric is to offer a better quality of life though innovative products. Mitsubishi Electric was the first manufacturer to introduce the capability of viewing and setting setpoint temperatures in 0.5°C increments, for unparalleled comfort calibrated with decimal precision by the user. This function gives the user a greater sense of control and, therefore, comfort, by offering a wider and more precise choice of settable temperatures.


#### Broad operating temperature range

Extended comfort: the new extended temperature range function allows systems supporting the function to be set with maximum set points up to  $35^{\circ}$ C in cooling mode, and minimum set points as low as  $4.5^{\circ}$ C in heating mode.

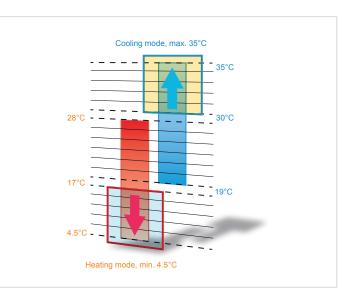

# Defining settable temperature range

The setpoint range may be defined for the remote controls to limit the range of temperatures settable by users. This avoids waste, preventing individual units from being operated with non-optimal settings made erroneously in response to the subjective perception of the ambient temperature, while still ensuring adequate environmental comfort.

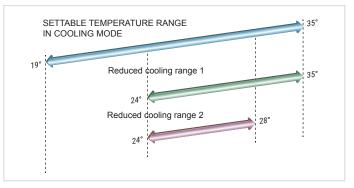



#### **Refrigerant leak alarm**

This remote control unit supports the R32 refrigerant leak detection system and requires configuration of the following operations:

**Main**: functions as a remote controller and as a refrigerant leak alarm for a single indoor unit.

**Supervisor**: monitors refrigerant leaks in the air conditioning system to which this remote control unit is connected. It is presumed that this function will be used in a monitoring site and that the AC units cannot be started from the remote control unit.












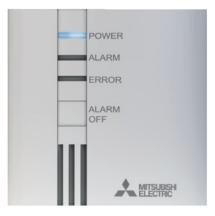

#### **Features**

- Refrigerant leak detection device
- Equipped with a visual and audible alarm (65 dB sound)
- To be used in configuration with Branch Box
- · Can be directly connected to the Branch Box
- Compatible with PUMY SMY/VKM
- Compact (WxHxD: 86x86x34 mm)
- · CABLE not supplied

#### **Operating mode**

- · Functions in two different scenarios: Main and Supervision\*
- Operating mode:
- WHITE LED, standard operation

- Flashing RED LED, if a refrigerant leak is detected, flashing rate varies in accordance with occupied room, supervision room, and audible alarm sounding

- ORANGE LED, in case of an incorrect connection or sensor to be replaced, audible alarm disabled


\*The Supervision alarm is required to protect the room in compliance with IEC60335-2-40



#### **Refrigerant leak operation**

#### **RESIDENTIAL SOLUTION: BRANCH BOX**

- PAC-SK60SA-E detects refrigerant leaks
- PAC-SK60SA-E emits an audible alarm
- OU receives the leak signal via PAC-MMK and activates PUMP-DOWN mode, collecting the refrigerant
- OU closes the shut-off valve.

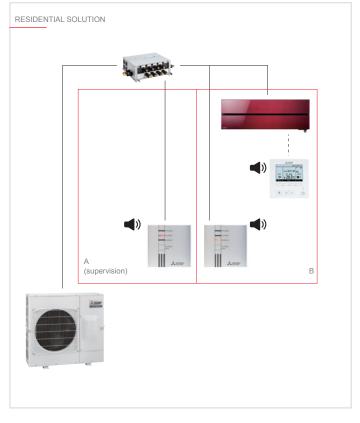







#### **Refrigerant leak operation**

#### COMMERCIAL SOLUTION: CITY MULTI VRF MS\*


- The built-in sensor detects refrigerant leaks
- PAR-41MAAB emits an audible alarm
- OU receives an alarm signal via m-NET and activates PUMP-DOWN mode, collecting the refrigerant
- OU closes the shut-off valve

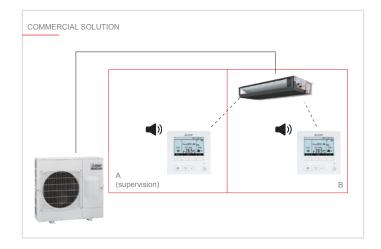



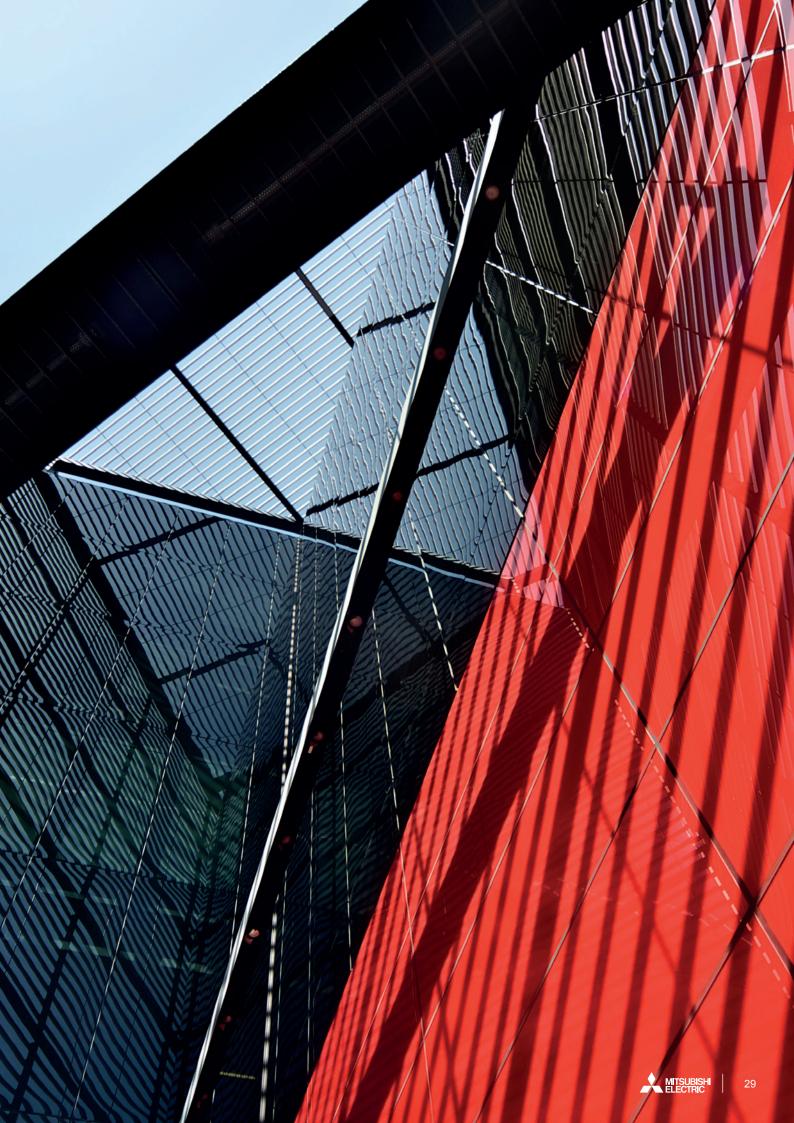



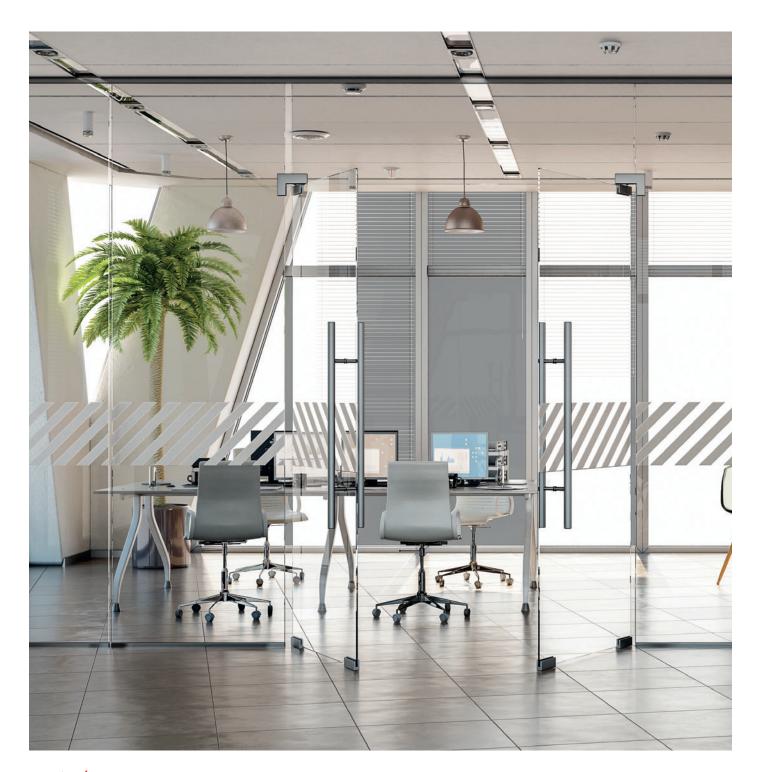

#### Remote controller comparison table

|                                   | PAR-SL101  | PAR-FL32  | PAC-YT52               | PAR-41                 | PAR-41MAAB             | PAR-CT   | PAR-U02                |
|-----------------------------------|--|-----------|------------------------|------------------------|------------------------|--|------------------------|
| Remote<br>control<br>functions    | And<br>And<br>And<br>And<br>And<br>And<br>And<br>And |           |                        |                        |                        | 25.00<br>22.00<br>24.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.00<br>25.000 |                        |
| Function                          |  |           |                        |                        |                        |  |                        |
| Number of groups/IUs controllable | 1/1  | 1/16      | 1/16                   | 1/16                   | 1/16                   | 1/16   | 1/16                   |
| ON/OFF                            | •  | •         | •                      | •                      | •                      | •  | •                      |
| Set Heat/Cool modes               | •  | •         | •                      | •                      | •                      | •  | •                      |
| Temperature setting               | •  | •         | •                      | •                      | •                      | •  | •                      |
| Dual Set-point *1                 | •*2  |           | •                      | •                      | •                      | •  | •                      |
| Fan speed                         | •  | •         | •                      | •                      | •                      | •  | •                      |
| Air flow direction                | •  | •         | •                      | •                      | •                      | •  | •                      |
| Backlight                         | •  |           | •                      | •                      | •                      | •  | •                      |
| View error code                   |  |           | •                      | •                      | •                      | •  | •                      |
| Daily timer                       |  |           |                        | •                      | •                      | •  | •                      |
| Weekly timer                      |  |           |                        | •                      | •                      | •  | •                      |
| AUTO-OFF                          |  |           |                        | •                      | •                      | •  | •                      |
| Temp-set restrictions             |  |           | •                      | •                      | •                      | •  | •                      |
| Temperature sensor                |  |           | •                      | •                      | •                      | •  | •                      |
| Night Setback                     |  |           |                        | •                      | •                      | •  | •                      |
| Bluetooth®                        |  |           |                        |                        |                        | •  |                        |
| Customisable display and logo     |  |           |                        |                        |                        | •  |                        |
| LED colour                        |  |           |                        |                        |                        |  | •                      |
| Humidity sensor                   |  |           |                        |                        |                        |  | •                      |
| Occupancy Sensor                  |  |           |                        |                        |                        |  | •                      |
| Light sensor                      |  |           |                        |                        |                        |  | •                      |
| Audible and visual alarm          |  |           |                        |                        | •                      |  |                        |
| Cablaggio                         | Infra-red  | Infra-red | TB15 terminal<br>board | TB15 terminal<br>board | TB15 terminal<br>board | TB15 terminal<br>board   | TB15 terminal<br>board |

\*1 Only available is all indoor units, remote controls and system controllers associated with group have this function. \*2 specific setting required to enable function for this remote control.



## PAC-YT52CRA DESIGN REMOTE CONTROLLER



#### PAC-YT52CRA Design remote controller

- Display with white backlighting.
- Simple wall-mounted installation.
- · Easy and intuitive with icon-based interface.
- Operating mode selection function.
- Swing louvre position selection function (for compatible indoor units).
- Usable to manage 1 group of up to 16 indoor units.
- Simple connection with single non-polarised two-core wire.
- MA automatic addressing technology.

- Suitable for all types of indoor unit.
- Recommended for hotels and public spaces, as ambient air temperature display can be disabled.
- Integrated temperature sensor usable instead of indoor unit sensor.
- Configurable temperature range settable from local keypad.

| Technical specificat | tions                  |        |                                      |                              |
|----------------------|------------------------|--------|--------------------------------------|------------------------------|
| MODEL                | DIMENSIONS (L X H X W) | WEIGHT | ELECTRIC POWER SUPPLY                | M-NET UNIT POWER CONSUMPTION |
| PAC-YT52CRA          | 70 x 120 x 14.5 mm     | 100 g  | 12 VDC<br>(supplied by indoor units) | 0.3 W                        |





## Koy Technologie

| Key Technologies |  |  |  |  |  |  |  |  |  |
|------------------|--|--|--|--|--|--|--|--|--|
| dual<br>setpoint |  |  |  |  |  |  |  |  |  |

| FUNCTION                        | DESCRIPTION  | SETTING | DISPLAY |
|---------------------------------|--|---------|---------|
| ON/OFF                          | Switch between ON and OFF  | 0       | 0       |
| Operating mode                  | For switching between cooling/dehum./fan/auto/heating modes<br>Auto mode is only selectable if the indoor unit effectively offers this mode.   | 0       | 0       |
| Temperature setting             | Modify set temperature.<br>The settable temperature range varies depending on the model of indoor unit.  | 0       | 0       |
| Fan speed                       | Changes fan speed.<br>Fan speeds available vary depending on the model of indoor unit installed.   | 0       | 0       |
| Enable/disable local operations | The following functions may be disabled from specific settings on the centralised controller:<br>ON/OFF, select operating mode, set temperature.<br>The relative icon is shown on the display when a function is disabled. | ×       | 0       |
| Error                           | Displays error with relative unit address.<br>An error code may not be displayed for certain errors.   | ×       |         |
| Ventilation                     | For interlocked operation with CITY MULTI indoor units and Mr. SLIM indoor units with LOSSNAY unit.  | 0       | 0       |
| Temperature range restrictions  | Different settable temperature ranges may be defined for different operating modes.  | 0       | 0       |

 $\bigcirc$  Each group  $\Box$  Each unit  $\times$  Not available





#### PAR-41MAAB Deluxe remote control unit

- Display with white (factory setting) or black backlighting and adjustable contrast.
- · Simple wall-mounted installation.
- Night Set-back function for setting minimum winter temperature or maximum summer temperature in temperature maintenance mode.
- Effective static overpressure selection function for ducted indoor units (PEFY-P VMHS only).
- · Internal weekly timer function and simplified internal timers (Auto-off, etc.).
- · Usable to manage 1 group of up to 16 indoor units.
- Easy and intuitive, with icon based graphic interface, direct control buttons and function buttons.
- Simple connection with single non-polarised two-core wire.
- MA self-addressing technology.
- · Suitable for all types of indoor unit, including GUF.
- Integrated temperature sensor usable instead of indoor unit sensor.
- · Configurable temperature range settable from local keypad.
- View and set setpoint temperatures in 0.5°C increments.
- Supports 3D i-see sensor functions
- **14 languages available** (English, French, Spanish, German, Italian, Dutch, Portuguese, Greek, Russian, Czech, Turkish, Polish, Hungarian, Swedish).
- Draft reduction \*

"Close" has been added to the manual vane angle selection. The air outlet can be closed to reduce drafts from the air conditioner. This remote control unit supports the R32 refrigerant leak detection system and requires the following operations to be configured:

**Main**: functions as a remote control unit and refrigerant leakage alarm for a single indoor unit.

**Supervisor**: monitors refrigerant leakage in the refrigeration system to which this remote control unit is connected. It is assumed that this function is used at a monitoring site and that the air conditioning units are not operable from the remote control unit.





| ITEM                             | DESCRIPTION   | SETTING | DISPLAY |
|----------------------------------|---|---------|---------|
| ON/OFF                           | Switches between ON and OFF.  | 0       | 0       |
| Operation mode switching         | Switches between Cool/Dry/Fan/Auto/Heat.  | 0       | 0       |
| Temperature<br>setting           | Changes the set temperature.<br>* Set temperature range varies depending on the indoor unit model.  | 0       | 0       |
| Fan speed<br>setting             | Changes fan speed.<br>* Available fan speeds vary depending on the model.   | 0       | 0       |
| Vane setting                     | Changes vane.<br>* Available vanes vary depending on the model.   | 0       | 0       |
| Louver setting                   | Switches between louver ON/OFF.   | 0       | 0       |
| Ventilation equipment control    | Interlocked setting and interlocked operation setting with City Multi Lossnay units can be performed.<br>The Stop/Low/High settings of the ventilation equipment can be controlled.   | 0       | 0       |
| Auto descending<br>panel         | Raises and lowers the automatic elevating panel.  | 0       | ×       |
| Main display mode setting        | The Main display can be displayed in two different modes: "Full" and "Basic."   | 0       | 0       |
| B&W inversion                    | The colors of the display can be inverted, turning white background to black and black characters to white.   | 0       | 0       |
| Clock                            | Date (year/month/day) and time (hour/minute) can be set.<br>The set time as well as the day of the week will be displayed on the Main display.<br>It is also possible to set not to display the time on the Main display.<br>The clock can be displayed in 12-hour format (AM/PM before or after the time) and 24-hour format.            | 0       | 0       |
| Daylight saving time             | The start/end time for daylight saving time can be set. The daylight saving time function will be activated based on the setting contents.  | 0       | ×       |
| Room temp. display               | The room temperature display can be enabled or disabled.  | _       | 0       |
| Error information                | When an error occurs, an error code and the unit address appear.<br>The air-conditioning unit model, serial number, and contact number can be set to appear when an error occurs.<br>(The above information needs to be entered in advance.)<br>* An error code may not appear depending on the error.                                    | _       | 0       |
| Filter information               | A filter sign will appear when it is time to clean the filter.  | _       | 0       |
| Remote controller<br>information | The version of the remote controller can be checked.  | —       | 0       |
| Timer                            | ON/OFF timer. Turns ON and OFF daily at a set time. • Time can be set in 5-minute increments.<br>• It is also possible to set the ON time only or the OFF time only.<br>Auto-OFF timer. Turns off the unit after a certain period of operation.<br>• Operation time can be set to a value from 30 to 240 minutes in 10-minute increments. | 0       | 0       |
| Weekly timer                     | Weekly ON/OFF times and set temperatures can be set.  • Time can be set in 5-minute increments. Up to 8 schedule patterns can be set per day of the week.  * Not valid when the ON/OFF timer is set.  | 0       | 0       |
| Night Set-back                   | The temperature range and the start/stop times can be set.  | 0       | 0       |
| Allows/disallows local operation | The following operation can be prohibited by applying certain settings on the centralized controller: ON/OFF, operation mode, set temperature, filter sign reset, vane, fan speed and timer.<br>* While an operation is prohibited, the operation icon lights up (only on the Main display in the "Full" mode).                           | ×       | 0       |
| Operation lock                   | The following operations can be prohibited:<br>"Location," "On/Off," "Mode," "Set temp.," "Menu," "Fan," "Louver," or "Vane."   | 0       | 0       |
| Temperature<br>range restriction | The room temperature range for each operation mode can be restricted.   | 0       | 0       |
| Auto return                      | The units operate at the preset temperature after a designated period.<br>(Time can be set to a value from 30 to 120 minutes in 10-minute increments.)<br>* Not valid when the temperature setting range is restricted.   | 0       | ×       |
| Password                         | Administrator password (required for schedule setting etc.) and Maintenance password (required for test run and function setting etc.) can be set.  | 0       | ×       |
| Language<br>Selection            | Select the display language from the following 14 languages.<br>English, French, Spanish, German, Italian, Dutch, Portuguese, Greek, Russian, Turkish,<br>Czech, Hungarian, Polish, Swedish   | 0       | 0       |
| Brightness<br>Contrast           | The brightness of the LCD can be adjusted. The contrast of the LCD can be adjusted.   | 0       | 0       |
| Manual<br>vane Angle             | Fixes the vane position for each air outlet.  | 0       | ×       |
| Service                          | Contains Test run, Function setting, Request code, and Error history.   | 0       | 0       |
| 3D i-See sensor                  | Settings for 3D i-See sensor can be made.   | 0       | 0       |

 $\bigcirc$  Every day  $\times$  Not available - Not applicable







PAR-CT01MAA-SB

PAR-CT01MAA-PB

#### PAR-CT01MA PRISMA remote controller

- Backlit colour touch screen display with adjustable contrast.
- Up to 180 user selectable colour schemes for fonts and background on display.
- Custom home screen logo
- Simple wall-mounted installation.
- Night Set-back function for setting minimum winter temperature or maximum summer temperature in temperature maintenance mode.
- Effective static overpressure selection function for ducted indoor units (PEFY-P VMHS only).
- Internal weekly timer function and simplified internal timers (Auto-off, etc.).
- Usable to manage 1 group of up to 16 indoor units.
- Easy and intuitive, with icon based graphic interface, direct control buttons and function buttons.
- MA automatic addressing technology.
- View and set setpoint temperatures in 0.5°C steps.
- Support for 3D i-see Sensor functions for 60x60 PLFY-P VFM-E1 4-way cassette unit and for 90x90 PLFY-P VEM-E 4-way cassette unit.

#### **Custom colour schemes**



#### **Technical specifications**

| MODEL      | DIMENSIONS (L X H X W) | WEIGHT | ELECTRIC POWER SUPPLY                | M-NET UNIT POWER CONSUMPTION |
|------------|------------------------|--------|--------------------------------------|------------------------------|
| PAR-CT01MA | 65 x 120 x 14.1 mm     | 100 g  | 12 VDC<br>(supplied by indoor units) | 0.3 W                        |

#### Multi-language menu

14 selectable languages: English, French, Spanish, Italian, Portuguese, Greek, Turkish, Swedish, German, Russian, Czech, Hungarian, Polish

#### Large backlit colour touch screen display

The new PRISMA remote controller is equipped with a 3.5" HVGA colour touch screen display.



#### **Display customisation functions**

The user can customise the display simply to show only selected parameters.

#### **Hotel function**

The "Hotel" function may be used to set a simplified user interface extremely easily, to allow users to only view and modify certain parameters and functions such as ON/OFF, set point temperature and fan speed.

#### **Bluetooth® connection**

The PAR-CT01MA remote controller features Bluetooth<sup>®</sup> Low Energy connectivity. Two dedicated apps (User app and Professional app) may be used to connect your smartphone or tablet to the remote controller. The User app lets you access the functions of the remote control (and,

therefore, control the air conditioning system) from your smartphone or tablet as if you were using the remote control itself.



The Professional app, on the other hand, simplifies the configuration of the remote controller during installation and commissioning of the system. This dedicated app lets you define and save settings on your mobile device and then transfer these

settings quickly and easily to all the remote controller units in the installation, making the configuration process for the system significantly quicker and simpler.



#### Logo image customization

A custom logo may be displayed in the menu home screen. The logo is displayed in the home screen whenever the display backlight is active. The display backlight function may be timer controlled or kept permanently on.

| CUSTOM HOME SCREEN LOGO |                 |  |
|-------------------------|-----------------|--|
|                         | PM12:34Fri      |  |
|                         | Room temp       |  |
|                         | 26.5°C          |  |
| 160dot                  | HOTEL<br>320dot |  |







#### **Key Technologies** +0,5 °C -0,5 °C Daily Timer



APP

|  | <br>_ |  |  |  |
|--|-------|--|--|--|
|  |       |  |  |  |
|  |       |  |  |  |
|  |       |  |  |  |
|  |       |  |  |  |
|  |       |  |  |  |
|  |       |  |  |  |
|  |       |  |  |  |

multiple color patterns

**S** 

| FUNCTION                          | FUNCTION DESCRIPTION  |   |   |  |
|-----------------------------------|---|---|---|--|
| ON/OFF                            | Switch between ON and OFF   | 0 | 0 |  |
| Operating mode                    | For switching between cooling/dehum./fan/auto/heating modes<br>Auto mode is only selectable if the indoor unit effectively offers this mode.  | 0 | 0 |  |
| Temperature setting               | Modify set temperature.<br>The settable temperature range varies depending on the model of indoor unit.   | 0 | 0 |  |
| Air flow direction                | Modify direction of air flow.<br>Selectable air flow directions depend on the model of indoor unit.   | 0 | 0 |  |
| Swing louvre settings             | Switch between swing louvre ON and OFF modes  | 0 | 0 |  |
| Ventilation                       | Enables interlocked operation with CITY MULTI Lossnay units.  | 0 | 0 |  |
| Error                             | Displays error with relative unit address.<br>The following information may be displayed in the event of an error: indoor unit model, serial number, contact information<br>(e.g. phone number of dealer).<br>An error code may not be displayed for certain errors.                | _ | 0 |  |
| Timer                             | Used to set ON and OFF times.<br>• Time settable in 5 minute steps.<br>• Both ON and OFF times are settable.<br>• Auto-OFF timer: Used to set Auto-Off time.<br>• Time may be set within a range from 30 to 240 minutes in steps of 10 minutes.                                     | 0 | 0 |  |
| Enable/disable local operations   | The following functions may be disabled from specific settings on the centralised controller: ON/OFF, select operating mode, set temperature, fan speed, air flow direction, reset filter indicator lamp.<br>The relative icon is shown on the display when a function is disabled. |   | 0 |  |
| Prohibited operations             | May be used to disable the following functions: "Ambient", "On/Off", "Mode", "Set Temp.", "Menu", "Vent", " Louvre" or<br>"Defl.".  | 0 | 0 |  |
| Temperature range<br>restrictions | Different settable temperature ranges may be defined for different operating modes.   | 0 | 0 |  |
| Auto return                       | Used to force the units to operate at a preset temperature after operating for the specified period of time<br>(time may be set within a range from 30 to 120 minutes in steps of 10 minutes).<br>This function is not available if preset temperature ranges are limited.          | 0 | × |  |
| Set speed                         | Modifies fan speed.<br>The speeds available vary depending on the model of indoor unit installed.   | 0 | 0 |  |
| Auto grille down                  | Automatically raises or lowers panel.   | 0 | 0 |  |
| Daylight saving time              | Set the daylight saving time. This function is activated in accordance with settings.   | 0 | 0 |  |
| Weekly timer                      | Used to set weekly ON and OFF times.<br>Time is settable in 5 minute steps. Up to eight operating patterns are available per day.<br>Not available when Timer ON/OFF mode is active.  | 0 | 0 |  |
| Night Set-back                    | Temperature ranges and start/end times are settable for mode.   | 0 | 0 |  |
| Bluetooth®                        | The remote controller may be controlled from a smartphone or tablet via Bluetooth <sup>®</sup> with a dedicate app.<br>The dedicated app may be used to send custom logos or settings to the remote control.  | 0 | 0 |  |
| Remote controller<br>information  | For checking version of remote controller.  | _ | 0 |  |

Each group  $\times$  Not available






#### PAR-U02MEDA Advanced remote controller

The Mitsubishi Electric Advanced remote control may be used to control up to 16 indoor units. While advanced, this controller also offers essential functions such as monitoring and controlling the status of the units in the system, and a weekly/hourly timer. Four integrated sensors (temperature, humidity, occupancy and light) allow a series of advanced adjustment and control functions. For example, the occupancy sensor can be used to save energy by configuring different modes based on the occupied/ vacant status of each room.

- · Large monochrome LCD touch screen display with white backlighting.
- Usable to manage 1 group of up to 16 indoor units.
- Integrated temperature, humidity, occupancy and light sensors.
- · SMART energy saving and comfort functions.

**Technical specifications** 

- Contextual colour LED indicating operating status of indoor units.
- View and set setpoint temperatures in 0.5°C steps.
- Dual Setpoint function
- Internal weekly timer, daily timer and simplified timer (Auto-off, etc.) functions.
- ME M-Net addressing technology.
- Extended setting ranges for setpoints (Cool: 19-35°C; Heat: 5-28°C).
- New functions for use in conjunction with AHC Programmable Controller (PLC M-Net), for creating operating strategies with generic devices

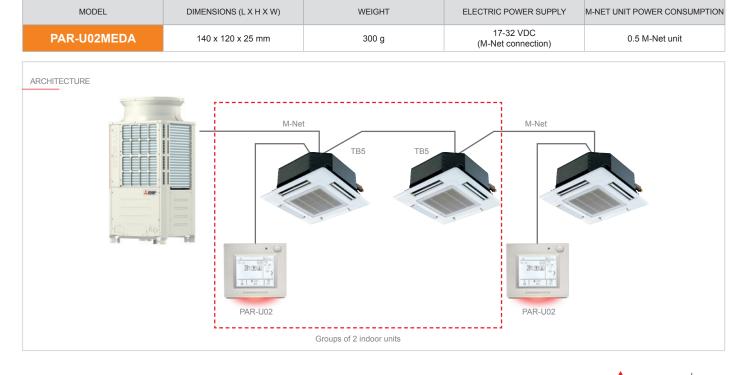



#### Temperature and humidity sensor

The integrated temperature and humidity sensor may be used to increase perceived comfort levels, while the ability to adjust the temperature with a precision of 0.5°C gives the user an even greater sense of control. The relative humidity sensor, combined with the ability to interlock the remote control with a programmable AHC controller, makes it possible to control humidity with external devices connected to the system via the AHC.

#### **Occupancy Sensor**

The occupancy sensor detects if a room is vacant and enables automatic control of the indoor units to implement energy saving strategies based on the effective occupancy of each room. The occupancy sensor enables the following energy saving functions:

- · Switch indoor units ON/OFF based on occupied/vacant state of room;
- · Fan speed control:
- · Switch indoor unit from Thermo ON to Thermo OFF state;
- Configure temperature deviation based on occupied/vacant status.

#### Light sensor

The light sensor measures the light levels in the conditioned room and adjusts the brightness of the remote control display accordingly. Bright/dark thresholds may be set directly from the remote control over an

extended luminosity range (1 to 65535 lx).

The light sensor is also used in low light conditions to confirm the occupied/vacant status of the room.


#### **Application 1: Splitting** existing indoor spaces


#### The need

· An existing indoor space is split into two spaces served by two indoor units each.

#### Solution

• The ME controller may be used to control the two spaces separately by adding a remote controller and reassigning the addresses of the two indoor units.

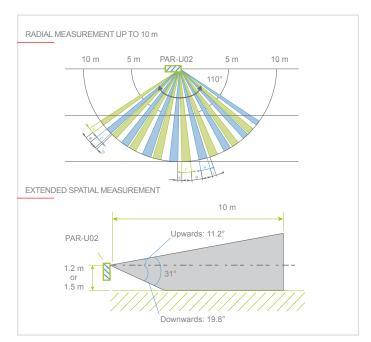

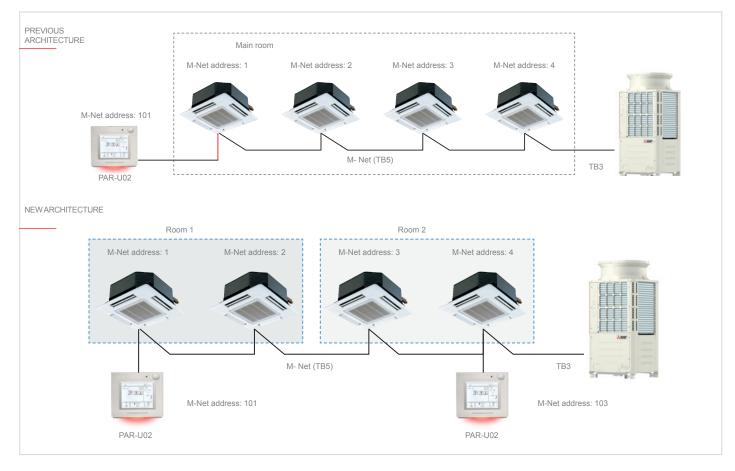

MITSUBISHI ELECTRIC


#### Application 2: Modifying Set-Point in relation to occupancy

#### The need

• Occupancy-based set point adjustment is required for the indoor units in order to save energy while still ensuring the comfort of the personnel using the spaces.

#### Solution

- The integrated occupancy sensor and the related operating logic enable occupancy-based control as shown in the following example:
- In summer: T° set to 22°C if space is occupied,
- T° set to 24°C if space is vacant.
- In winter: T° set to 21°C if space is occupied,
- T° set to 19°C if space is vacant.

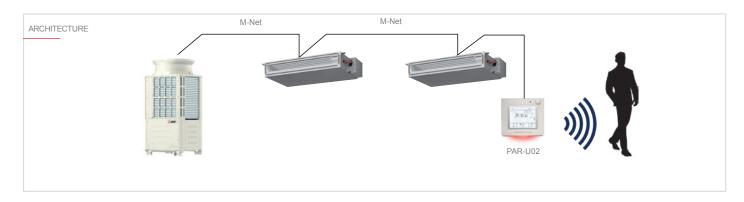

This function may be set from the PAR-U02 controller, from the "Energy Saving" menu.

| Key Technologies     |                |                 |                  |         |  |  |    |                               |         |
|----------------------|----------------|-----------------|------------------|---------|--|--|----|-------------------------------|---------|
| +0,5 °C<br>▼ -0,5 °C | Daily<br>Timer | Weekly<br>Timer | dual<br>Setpoint | Setback |  |  | -\ | indicatore di<br>stato<br>LED | <b></b> |
| M-NET<br>connection  |                |                 |                  |         |  |  |    |                               |         |

| FUNCTION                                    | DESCRIPTION   | SETTING | DISPLAY |
|---|---|---------|---------|
| ON/OFF                                      | Switch between ON and OFF   | 0       | 0       |
| Operating mode                              | For switching between cooling/dehum./fan/auto/heating modes   | 0       | 0       |
| Temperature setting                         | Modify set temperature.<br>The settable temperature range varies depending on the model of indoor unit.   | 0       | 0       |
| Set speed                                   | Modifies fan speed.<br>Fan speeds available vary depending on the model of indoor unit installed.   | 0       | 0       |
| Air flow direction                          | Modify direction of air flow.<br>Selectable air flow directions depend on the model of indoor unit.   | 0       | 0       |
| Enable/disable local operations             | The following functions may be disabled from specific settings on the centralised controller: ON/OFF,<br>select operating mode, set temperature, fan speed, air flow direction, reset filter indicator lamp.<br>The relative icon is shown on the display when a function is disabled.                                  | ×       | 0       |
| Error                                       | Displays error with relative unit address.<br>The following information may be displayed in the event of an error: indoor unit model, serial number, contact information<br>(e.g. phone number of dealer).<br>An error code may not be displayed for certain errors.  | _       | 0       |
| Weekly timer                                | Used to set weekly ON and OFF times.<br>Time is settable in 5 minute steps. Up to eight operating patterns are available per day.<br>Not available when Timer ON/OFF mode is active.  | 0       | 0       |
| Timer                                       | Used to set ON and OFF times.<br>• Time settable in 5 minute steps.<br>• Both ON and OFF times are settable.<br>• Auto-OFF timer: Used to set Auto-Off time.<br>• Time may be set within a range from 30 to 240 minutes in steps of 10 minutes.   | 0       | 0       |
| Night Set-back                              | Temperature ranges and start/end times are settable for Night Set-back mode.  | 0       | 0       |
| Occupancy sensor for<br>energy saving mode. | Operation in energy saving mode is activated when the occupancy sensor detects that the room is vacant.<br>Four control modes are available: "On/Off", "Set temp.", "Vent", "Thermo-OFF".<br>The light sensor may be used in conjunction with the occupancy sensor for more accurate detection<br>of vacant room state. | 0       | 0       |

O Each group × Not available









#### PAR-FL32MA wireless remote controller

- Usable to manage 1 group of up to 16 indoor units.
- · Easy and intuitive with icon-based interface.
- Receiver connected simply with single non-polarised two-core wire.
- MA automatic addressing technology.
- Suitable for all types of indoor unit.
- Recommended for groups with only one indoor unit.
- Generic receiver for all indoor unit types: PAR-FA32MA.
- Specific corner receiver for 4-way PLFY-P VBM-E cassette units: PAR-SE9FA-E.



| Compatibility  |            |                   |  |  |  |  |
|--|------------|-------------------|--|--|--|--|
|  | Receiver   | Remote controller |  |  |  |  |
| PMFY-P*VBM<br>PLFY-P*VLMD<br>PFFY-P*VKM<br>PEFY-P*VMR-E/R/VMH<br>PFFY-P*VLEM/VKM/VLRM/VLRMM<br>PEFY-P*VMS1(L)<br>PEFY-P*VMA(L) | PAR-FA32MA | PAR-FL32MA        |  |  |  |  |

| Compatibility                  |            |                   |  |  |  |  |  |
|--------------------------------|------------|-------------------|--|--|--|--|--|
|                                | Receiver   | Remote controller |  |  |  |  |  |
| PCFY-P*VKM                     | PAR-FA32MA | PAR-FL32MA        |  |  |  |  |  |
| PKFY-P*VBM-E<br>PKFY-P*VHM/VKM | Integrated | PAR-FL32MA        |  |  |  |  |  |

| FUNCTION                        | DESCRIPTION   |   | DISPLAY         |
|---------------------------------|---|---|-----------------|
| ON/OFF                          | e setting Modify set temperature.<br>The settable temperature range varies depending on the model of indoor unit.<br>rection Selectable air flow directions depend on the model of indoor unit.   |   | 0               |
| Temperature setting             |   |   | 0               |
| Air flow direction              |   |   | 0               |
| Timer                           |   |   | 0               |
| Enable/disable local operations | The following functions may be disabled from specific settings on the centralised controller: ON/OFF, select operating mode, set temperature, fan speed, air flow direction, reset filter indicator lamp. *1A beeper sounds and an LED flashes as confirmation when an operation is disabled from the centralised controller. | × | O <sup>*1</sup> |

 $\bigcirc$  Each group  $\times$  Not available




WIRELESS REMOTE CONTROL



#### Wireless remote control PAR-SL101A-E

- Compatible with PLFY-VFM and PLFY-VEM
   Backlighting
- Group with up to 16 units
- Direct/Indirect function with corner PAC-SF1ME-E (3D i-see sensor)
- Single vane control
- Temperature view and setting 0,5°C
- 3D i-see sensor compatible

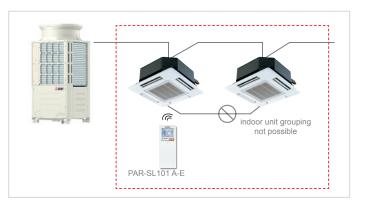

| Compatibility  |             |                   |  |  |  |  |
|----------------|-------------|-------------------|--|--|--|--|
|                | Receiver    | Remote controller |  |  |  |  |
| PLFY-P/M VEM-E | PAR-SE9FA-E | PAR-SL101A-E      |  |  |  |  |
| PLFY-P*VFM-E1  | SLP-2FAL    | PAR-SLIUIA-E      |  |  |  |  |

| Key Technologies |                        |                  |  |  |  |  |  |  |  |  |
|------------------|------------------------|------------------|--|--|--|--|--|--|--|--|
|                  | ♦ +0,5 °C<br>▼ -0,5 °C | dual<br>Setpoint |  |  |  |  |  |  |  |  |

| Function                        | DESCRIPTION  | SETTING | DISPLAY |
|---------------------------------|--|---------|---------|
| ON/OFF                          | Switch between ON and OFF  | 0       | 0       |
| Temperature setting             | Modify set temperature.<br>The settable temperature range varies depending on the model of indoor unit.  | 0       | 0       |
| Air flow direction              | Adjust air flow angle (4-Angle, Swing), Auto Louvre, ON/OFF<br>Selectable air flow directions depend on the model of indoor unit.  | 0       | 0       |
| Timer                           | Usable to set one ON and one OFF event per day.  | 0       | 0       |
| Enable/disable local operations | The following functions may be disabled from specific settings on the centralised controller: ON/OFF, select operating mode, set temperature, fan speed, air flow direction, reset filter indicator lamp.<br>*1A beeper sounds and an LED flashes as confirmation when an operation is disabled from the centralised controller. | ×       | O*1     |

O Each group × Not available







#### Remote controllers for HWS & ATW hydronic modules and for HWHP (Hot Water Heat Pump) PACKAGED systems

- PAR-W21MAA is specifically for HWS & ATW hydronic modules and for CAHV and CRHV PACKAGED Hot Water Heat Pump systems.
- Usable to manage 1 group of up to 16 indoor units.
- Easy and intuitive with icon-based interface.
- Simple connection with single non-polarised two-core wire.

- MA automatic addressing technology.
  - Operating mode selection (Heating, Heating ECO, Hot water, etc.).
  - Internal weekly timer.
  - Customisable water temperature ranges for switching operating mode from local keypad.
  - On-display service messages.





| FUNCTION                        | DESCRIPTION  | SETTING | DISPLAY |
|---------------------------------|--|---------|---------|
| ON/OFF                          | Switch between ON and OFF  | 0       | 0       |
| Operating mode                  | Switch between Domestic Hot Water/Heating/ECO Heating/Antifreeze/Cooling modes.<br>Modes available depend on units installed.<br>Switching limiting settings may be set and modified from the remote controllers.  | 0       | 0       |
| Water temperature settings      | Temperature settable (in steps of 1°C) within specific ranges for different modes:<br>Heating 30°C - 50°C<br>ECO Heating 30°C - 45°C<br>Hot water 30°C - 70°C<br>Antifreeze10°C to 45°C<br>Cooling 10°C to 30°C<br>Settable ranges depend on the indoor units installed. | Ο       | 0       |
| Temperature limiting            | Limits temperature range settable from a remote controller.  | 0       | 0       |
| Water temperature               | 10°C - 90°C in steps of 1°C<br>Settable ranges depend on the indoor units installed.   | ×       | 0       |
| Enable/disable local operations | The following functions may be disabled: ON/OFF, select operating mode, set water temperature, reset water recirculation notification.   | ×       | 0       |
| Programmable operations         | A number of different operations (ON/OFF, set water temperature) may be programmed to occur up to six times over the<br>week<br>(in steps of one minute).  | 0       | 0       |
| Error                           | In the event of a error concerning a unit, the error code and unit identification are displayed.   | ×       | 0       |
| Auto check (error log)          | Search for most recent error log (press CHECK button twice).   | 0       | 0       |
| Start test                      | Enable test mode, by pressing TEST button twice.<br>The 'Start test' mode is only available with certain indoor units.   | 0       | 0       |
| Change circuit water warning    | Notifies the user that the circuit water must be replaced with a message specific to the relative unit<br>Press CIR.WATER twice to clear the on-screen notification.<br>This function is only available with certain indoor units.                                       | 0       | 0       |
| Control lock function           | The functions of the remote control may be locked or unlocked as follows:<br>• Lock all functions<br>• Lock all functions except for ON/OFF  | 0       | 0       |

O Each group × Not available






# Remote controller for HWHP / E SERIES units

- Remote controller for chillers and heat pumps (CAHV, EAHV, EACV)
- · Can be used to manage 1 group with up to 16 units
- · Straightforward and intuitive with icon-based interface
- · Simple connection with a single two-core non-polarised cable
- · MA auto-addressing technology
- Operating mode selection (Heating, ECO Heating, DHW, etc.)
- · Internal weekly timer
- Customisable water temperature intervals to switch operating mode from local keypad
- · Service messages on display



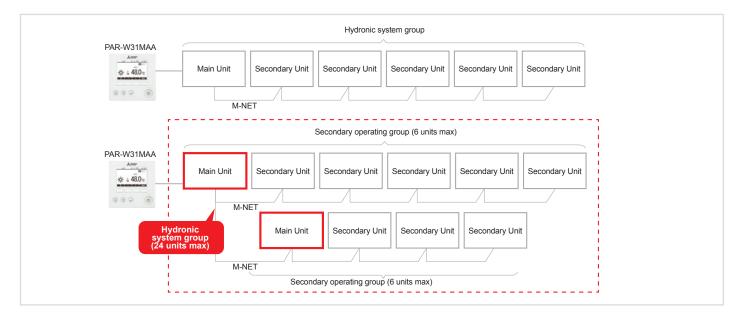









#### PZ-62DR-EB remote control for Lossnay

- Specific remote control for Lossnay heat recovery units.
- Usable to manage one group of up to 15 Lossnay units.
- · Easy and intuitive with icon-based interface.
- Simple connection with single non-polarised two-core wire.
- Internal weekly timer.
- Custom ventilation strategies for mode switching (Auto/recovery/ bypass).
- Night purge function for active night-time ventilation in summer.
- · On-display service messages.
- Backlit LCD screen.
- Energy managemen

#### 3 Languages are added

Greek, Slovenian, Denmark

#### Compatibility

PZ-62DR-EB are compatible with both RVX and RVS.

#### Dedicated PZ-62DR-EB wired controller

The new PZ-62DR-EB controller can be used to control all the functions of the LGH-RVS unit.

If the PZ-70CSW-E (optional) or PZ-70CSB-E (optional)  $CO_2$  sensor is used, the carbon dioxide concentration in the room can be displayed on the control unit's display.

#### **Operation with two remote controllers**

#### (PZ-62DR-EB and GUG remote controller)

In the Lossnay+GUG system the Lossnay heat recovery unit can be equipped with a dedicated remote controller (PZ-61DR-E) on which to set up the operating parameters, namely:

- ON/OFF status,
- Ventilation speed (FS1, FS2, FS3, FS4),
- Ventilation mode (Heat recovery, By-pass, Auto, Night purge).



#### **Regulation and control**

The GUG module is managed with a dedicated remote controller (included) that allows the set-up of operating parameters, namely **ON/OFF**, **Temperature Setting, Operating mode** (Heating, Cooling, Ventilation).


The following section describes the behaviour of the Lossnay heat recovery unit in combination with the GUG module in the various available control configurations.



## Operation with two remote controllers (PZ-62DR-EB and GUG remote controllers)

In the Lossnay+GUG system the Lossnay heat recovery unit can be equipped with a dedicated remote controller (PZ-62DR-E) on which to set up the operating parameters, namely:


- ON/OFF status,
- Ventilation speed (FS1, FS2, FS3, FS4),
- Ventilation mode (Heat recovery, By-pass, Auto, Night purge).

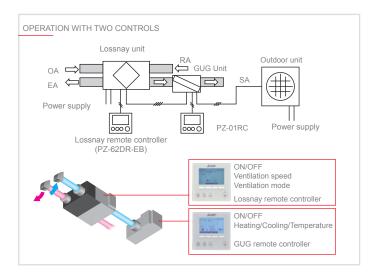

#### Operation exclusively with the GUG dedicated remote controller

In the absence of other remote controllers, the Lossnay heat recovery unit operating parameters will be set as follows:

- ON/OFF status: same mode as GUG module
- **Ventilation speed**: fixed on Speed 4 (Ventilation speed can be adjusted using a 0-10V or Volt-free external contact and set to Speed 3)
- · Ventilation mode: fixed on Auto

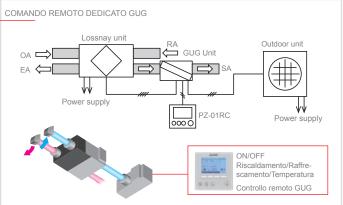


#### **Operation with CITY MULTI interlock (M-Net)**

If the Lossnay+GUG system is connected to the M-Net communication bus the Lossnay heat recovery unit parameters settable from the centralised controller will be:

- ON/OFF status,
- · Ventilation speed,
- · Ventilation mode.

From the interlocked unit control (if present) it will be possible to set up the following Lossnay heat recovery unit parameters:

- ON/OFF status,
- Ventilation speed.

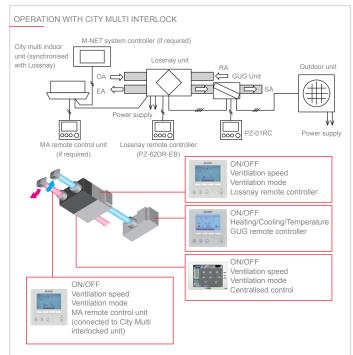



| FUNCTION   | PZ-62DR-E  |
|--|--|
| Fan speed selection  | 4 fan speeds and Auto (Auto is available when using a $\rm CO_2$ sensor)                               |
| Control with a CO2 sensor                                    | Yes (Fan speed automatically changes from 25% to 100% depending on the $\mathrm{CO_2}$ concentration*) |
| Ventilation mode selection                                   | Energy recovery/Bypass/Auto  |
| Night-purge  | Yes  |
| Function setting from remote controller                      | Yes  |
| Bypass temp. free setting                                    | Yes  |
| Multi-stage air ow control                                   | Yes (Both supply and exhaust fan speeds can be set separately from 25% to 100% in 5% pitches)          |
| ON/OFF timer   | Yes  |
| Auto-off timer   | Yes  |
| Weekly timer   | Yes  |
| Fan speed timer  | Yes  |
| Operation restrictions (ON/OFF, ventilation mode, fan speed) | Yes  |
| Operation restrictions (fan speed skip setting)              | Yes  |
| Screen contrast adjustment                                   | Yes  |
| Language selection   | Yes  |
| CO2 concentration indication                                 | Yes (available when using a CO <sub>2</sub> sensor)  |
| Filter cleaning sign   | Yes (maintenance interval can be changed)  |
| Error indication   | Yes (displays model name, serial number, contact information if they are input)                        |
| Error history  | Yes  |
| OA/RA/SA temp. display                                       | Yes  |

 $^{\ast}$  When using a  $\mathrm{CO_2}$  sensor. Upper and lower limits may be changed.





# Centralised <u>co</u>ntrols

In order to create a centralised installation, devices denominated centralised controllers must be used. These are devices which make it possible to plan, direct and coordinate the operation and functions of all the devices in the field (indoor units, remote controllers etc.).

A centralised controller must permit access, individually or collectively, to the the indoor units and remote controllers in the installation and be capable of controlling their operation (with timer programs, the ability to disable selected end-user functions etc.) in order to optimise the efficiency and efficacy of the entire installation.


This has been achieved by the innovative WEB Server 3 Diamonds (AE-200 and EW-50) centralised controller platform, which is based entirely on the same technology and languages used in the internet world.

A computer and a web page are the simplest way to view and use information. Implementing this concept in air conditioning applications offers the ability to monitor and manage air conditioning systems of any type, from a single air conditioner to the most complex installation. Continuous technological innovation has driven an evolution in building-installation systems. And today, these systems use highly efficient data transmission architectures.

Embracing this reality and applying it in air-conditioning makes it possible to:

- Take full advantage of the potential of existing communication infrastructure;
- Design and realise distributed control logic system architectures;
- Create simple to use devices and clearly comprehensible user interfaces.

This is why Mitsubishi Electric chose Ethernet, the world's most widely used network standard, to enable communication between AE-and EW-50 WEB server centralised controllers and PCs.

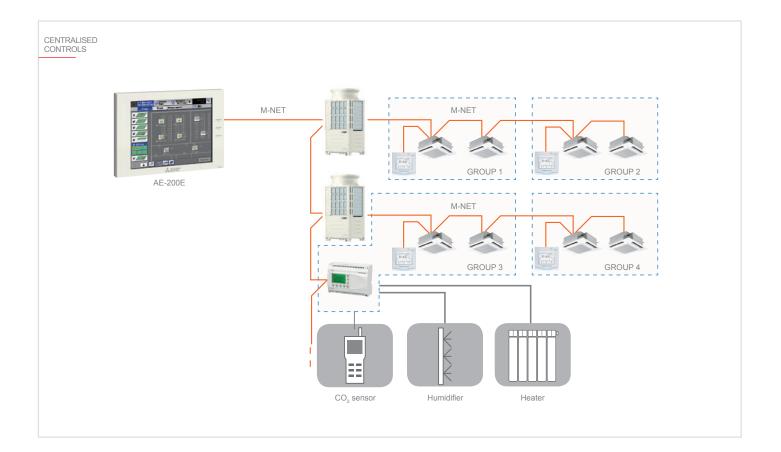

|  | AE-200E              | EW-50E  | AT-50B       |
|--|----------------------|---------|--------------|
| Centralised<br>controller<br>functions |                      |         |              |
| Function                               |                      |         |              |
| Interface                              | Touch screen/Browser | Browser | Touch Screen |
| Max. number of Groups/IUs              | 50/50*               | 50/50*  | 50/50        |
| ON/OFF                                 | •                    | •       | •            |
| Set Heat/Cool modes                    | •                    | •       | •            |
| Temperature setting                    | •                    | •       | •            |
| Dual Set Point                         | •                    | •       | •            |
| Fan speed                              | •                    | •       | •            |
| Air flow direction                     | •                    | •       | •            |
| Backlight                              | •                    | •       | •            |
| Error code display                     | •                    | •       | •            |
| Set Group                              | •                    | •       | •            |
| Set Block                              | •                    | •       | •            |
| Daily timer                            | •                    | •       | •            |
| No. of ON/OFF cycles per day           | 24                   | 24      | 16           |
| Weekly timer                           | •                    | •       | •            |
| No. of ON/OFF cycles per week          | 24x7                 | 24x7    | 16x7         |
| Timer setting resolution [min]         | 1                    | 1       | 5            |
| Optimised start                        | •                    | •       |              |
| Annual timer                           | •                    | •       |              |
| Sliding temperature                    | •                    | •       |              |
| Lossnay interlock                      | •                    | •       | •            |
| Set Lossnay ON/OFF                     | •                    | •       | •            |
| Set Lossnay fan speed                  | •                    | •       | •            |
| Restriction settings                   | •                    | •       | •            |
| Night Setback                          | •                    | •       | •            |
| Energy Management Data                 | •                    | •       |              |
| BACnet® interface                      | Native               | Native  |              |
| AHC compatible                         | •                    | •       |              |
| RMI compatible                         | •                    | •       |              |
| Expandable                             | •                    | •       |              |

\*up to 200 with expansion



# **Key Technologies**

## **Energy savings**




#### **Dual Setpoint**

The new Dual Setpoint function makes it possible to preset setpoint temperatures for cooling and heating mode in a

single operation. On Y series heat pump models, this functions means that it is no longer necessary to reset setpoint temperatures each time the operating mode of the unit is switched from Heating to Cooling mode and vice versa. In R2 heat recovery systems, it is also possible to set an "energy saving" temperature band for AUTO mode, within which the system ventilates only and performs no thermal air treatment (thermo off).

Setting a broader band increases energy savings, but permits larger temperature variations in the indoor space. Setting the two setpoint temperatures closer together creates a narrower thermo off band, prioritising comfort in the indoor space over energy savings.

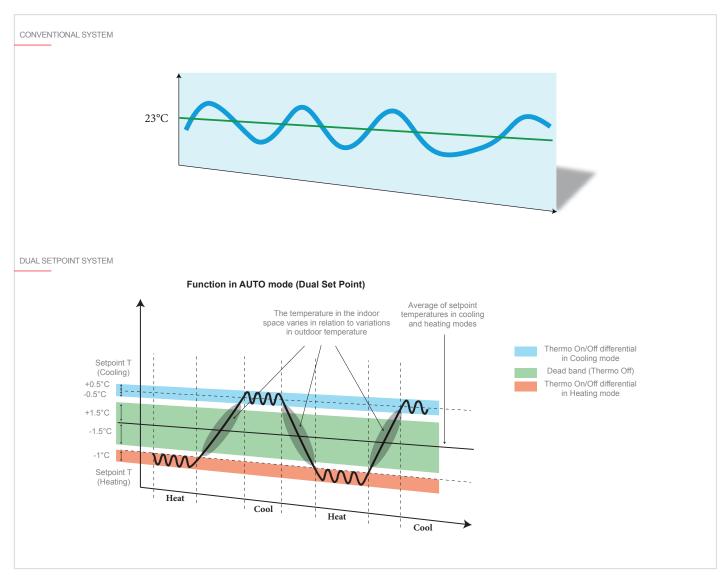


The width of the "thermo off" band depends on the setpoint temperatures set for the two operating modes (Cooling and Heating)





The function also activates heating mode when, after the monitored group has stopped, the temperature in the room drops below the set lower limit. The function also activates cooling mode when, after the monitored group has stopped, the temperature in the room rises above the set upper limit.

The Night Set-back Control function is not available if the operating mode and temperature setting are modified from the remote control.

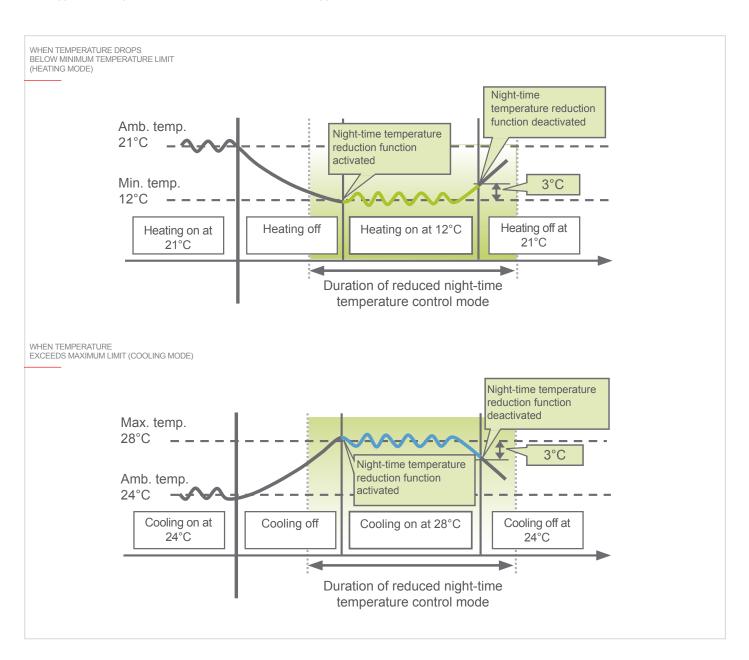

If the ambient temperature is measured in the same position as the indoor unit air intake, the temperature reading will not be precise when the unit is inactive. In this case, install a remote sensor (PAC-SE41TS-E) or use the built-in sensor of the remote control to move the temperature acquisition point.



#### **Energy Management**

The Energy Management function displays parameters relative to the energy management of the installation (such consumption, operating times, external temperature at ) in


as energy consumption, operating times, external temperature etc.) in graph form.

This data is saved in the internal memory of the centralised controller and may be exported as CSV format files. Information is logged in steps of 5 minutes, 30 minutes, one day, one month and one year. This lets the system administrator view values relative to individual groups, blocks or units for different time intervals, and compare graphs for different machines, zones or time periods.

This function may be used for a number of different purposes, such as:

- Monitoring the operation of the installation in real time to determine current consumption and identify causes of energy wastage or malfunctions to permit prompt corrective action.
- Plan actions to improve the efficiency of the system and evaluate the efficacy of the measures implemented by comparing data from before and after.




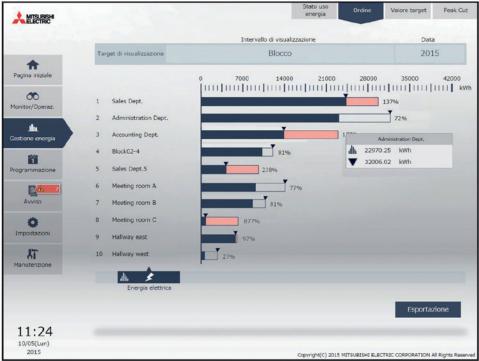


#### Sliding temperature

The set temperature may be adjusted automatically in relation to the difference between the set temperature and the external temperature. In the case of indoor units installed in the foyer of a building, for example,

this temperature control function prevents persons from being exposed to sudden, large temperature differences, and the resulting thermal discomfort.

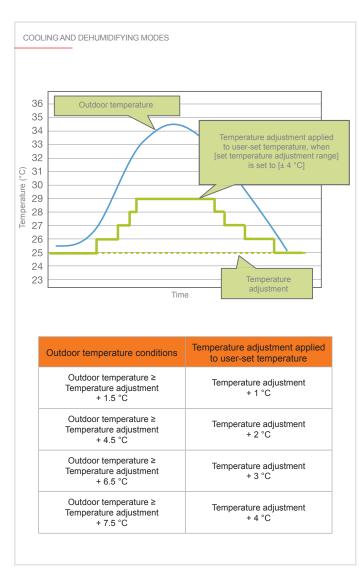

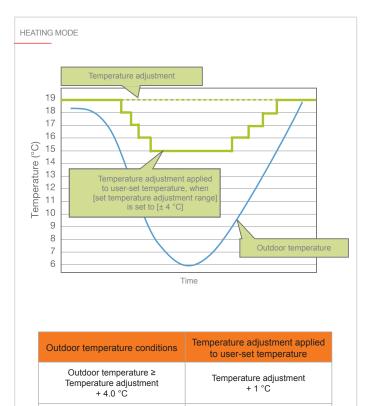

Temperature adjustment + 2 °C

Temperature adjustment

+ 3 °C

Temperature adjustment

+ 4 °C

Outdoor temperature ≥

Temperature adjustment

+ 6.0°C

Outdoor temperature ≥

Temperature adjustment

+ 8.0 °C

Outdoor temperature ≥

Temperature adjustment


+ 10.0 °C



#### **Optimised start**

The "Optimised start" function automatically starts the installation or individual groups within the installation ahead of the programmed start time to ensure that the comfort conditions required by the timer schedule are met. The centralised controllers automatically acquire and save the timer schedule setpoints, the daily ambient temperature and the setpoint

attainment history over the previous days, and use these parameters to calculate the necessary pre-on time relative to the timer setting within a range from 5 to 60 minutes. The "Optimised start" function is available in both heating and cooling modes.

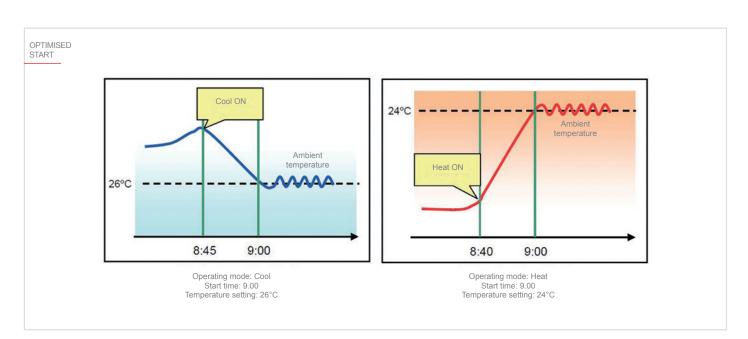


The "Optimised start" and "Night Setback" (or "Maintenance temperature") functions are fully integrable with and complementary to each another.

Maintaining the temperature in the indoor space at an adequate temperature and activating the installation ahead of the programmed start time will ensure the required levels of occupant comfort are attained exactly as scheduled.

#### Defining settable temperature range

The setpoint range may be defined for the remote controls to limit the range of temperatures settable by users. This avoids waste, preventing individual units from being operated with non-optimal settings made erroneously in response to the subjective perception of the ambient temperature, while still ensuring adequate environmental comfort.

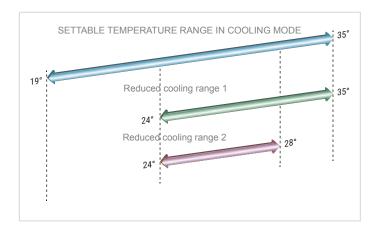

### **Functions**

## Silent Silent

This function further reduces the noise produced by the outdoor unit by reducing the maximum fan speed and compressor frequency in consideration of the reduced demand for thermal power during night time operation.\*



\* In Silent Mode, the thermal and/or cooling capacity of the outdoor unit is limited.


## **Functions**

#### **Programming schedules**

The automatic operation of the installation is programmable from a practical and versatile timer. Three timer functions are available: a daily timer, for programming events for the current day; a weekly timer, with settings applied in weekly cycles; and an annual calendar mode, for planning - well in advance, if needed - the operation of the installation on special days such as public holidays etc.

All three of these programming modes may be set for the same air conditioner and may overlap (with different mode schedules applicable for the same day). In this case, priority is given as follows:

- 1) Daily schedule
- 2) Annual schedule
- 3) Weekly schedule

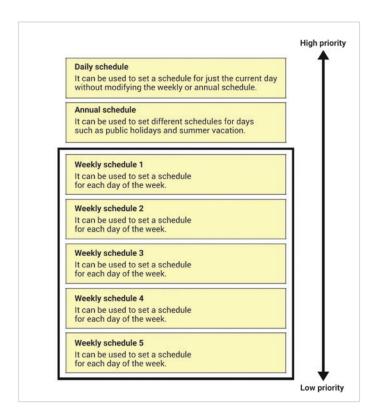

Daily Timer

#### **Daily schedule**

The daily schedule is only applicable for the current day. The schedule is cancelled automatically at midnight at the end of the day on which the schedule was programmed. This is the programming mode with the highest priority, meaning that if other settings (annual and/or weekly) are scheduled for the same day, they will be ignored. Schedules may be programmed for individual groups, for blocks (sets of groups) or for all the air conditioners

connected to AE-200/EW-50 controller (All Groups mode).





#### Weekly schedule

The weekly schedule programming function may be used to plan the operation and settings of the installation for a week. Up to 5 weekly schedules may be defined to be applied at different periods during the year to follow changes in season, allowing the operation of the installation to be configured automatically for seasonal climate conditions. The operating mode, set points and on/off times are defined in schedules.





#### Annual schedule

The annual schedule programming function lets the user define "special" days, during which the installation is required to operate with different settings than those defined for the current weekly schedule. This function allows the administrator to programme the installation to automatically implement different settings on special days when the air conditioning requirements of the indoor spaces served by the installation differ from those applicable during normal operation due to closure for holidays or periods of low occupancy. Up to 52 special days may be set during the year.



#### CONTROL SYSTEMS / KEY TECHNOLOGIES

#### ANNUAL SCHEDULE

|    | JANUARY |    |    |    |    |    |  |  |
|----|---------|----|----|----|----|----|--|--|
| М  | Т       | Т  | Т  | F  | S  | S  |  |  |
|    |         |    |    | 1  | 2  | 3  |  |  |
| 4  | 5       | 6  | 7  | 8  | 9  | 10 |  |  |
| 11 | 12      | 13 | 14 | 15 | 16 | 17 |  |  |
| 18 | 19      | 20 | 21 | 22 | 23 | 24 |  |  |
| 25 | 26      | 27 | 28 | 29 | 30 | 31 |  |  |
|    |         |    |    |    |    |    |  |  |

| FEBRUARY |    |    |    |    |    |    |  |  |
|----------|----|----|----|----|----|----|--|--|
| М        | Т  | Т  | Т  | F  | S  | S  |  |  |
| 1        | 2  | 3  | 4  | 5  | 6  | 7  |  |  |
| 8        | 9  | 10 | 11 | 12 | 13 | 14 |  |  |
| 15       | 16 | 17 | 18 | 19 | 20 | 21 |  |  |
| 22       | 23 | 24 | 25 | 26 | 27 | 28 |  |  |
| 29       |    |    |    |    |    |    |  |  |
|          |    |    |    |    |    |    |  |  |

|    | MARCH |    |    |    |    |    |  |  |  |
|----|-------|----|----|----|----|----|--|--|--|
| М  | Т     | Т  | Т  | F  | S  | S  |  |  |  |
|    | 1     | 2  | 3  | 4  | 5  | 6  |  |  |  |
| 7  | 8     | 9  | 10 | 11 | 12 | 13 |  |  |  |
| 14 | 15    | 16 | 17 | 18 | 19 | 20 |  |  |  |
| 21 | 22    | 23 | 24 | 25 | 26 | 27 |  |  |  |
| 28 | 29    | 30 | 31 |    |    |    |  |  |  |
|    |       |    |    |    |    |    |  |  |  |

|    | APRIL |    |    |    |    |    |  |  |  |
|----|-------|----|----|----|----|----|--|--|--|
| М  | Т     | Т  | Т  | F  | S  | S  |  |  |  |
|    |       |    |    | 1  | 2  | 3  |  |  |  |
| 4  | 5     | 6  | 7  | 8  | 9  | 10 |  |  |  |
| 11 | 12    | 13 | 14 | 15 | 16 | 17 |  |  |  |
| 18 | 19    | 20 | 21 | 22 | 23 | 24 |  |  |  |
| 25 | 26    | 27 | 28 | 29 | 30 |    |  |  |  |
|    |       |    |    |    |    |    |  |  |  |

|    | MAY |    |    |    |    |    |  |  |  |  |  |
|----|-----|----|----|----|----|----|--|--|--|--|--|
| М  | Т   | Т  | Т  | F  | S  | S  |  |  |  |  |  |
|    |     |    |    |    |    | 1  |  |  |  |  |  |
| 2  | 3   | 4  | 5  | 6  | 7  | 8  |  |  |  |  |  |
| 9  | 10  | 11 | 12 | 13 | 14 | 15 |  |  |  |  |  |
| 16 | 17  | 18 | 19 | 20 | 21 | 22 |  |  |  |  |  |
| 23 | 24  | 25 | 26 | 27 | 28 | 29 |  |  |  |  |  |
| 30 | 31  |    |    |    |    |    |  |  |  |  |  |

|    | JUNE |    |    |    |    |    |  |  |  |
|----|------|----|----|----|----|----|--|--|--|
| М  | Т    | Т  | Т  | F  | S  | S  |  |  |  |
|    |      | 1  | 2  | 3  | 4  | 5  |  |  |  |
| 6  | 7    | 8  | 9  | 10 | 11 | 12 |  |  |  |
| 13 | 14   | 15 | 16 | 17 | 18 | 19 |  |  |  |
| 20 | 21   | 22 | 23 | 24 | 25 | 26 |  |  |  |
| 27 | 28   | 29 | 30 |    |    |    |  |  |  |
|    |      |    |    |    |    |    |  |  |  |

|    | JULY |    |    |    |    |    |  |  |  |
|----|------|----|----|----|----|----|--|--|--|
| М  | Т    | Т  | Т  | F  | S  | S  |  |  |  |
|    |      |    |    | 1  | 2  | 3  |  |  |  |
| 4  | 5    | 6  | 7  | 8  | 9  | 10 |  |  |  |
| 11 | 12   | 13 | 14 | 15 | 16 | 17 |  |  |  |
| 18 | 19   | 20 | 21 | 22 | 23 | 24 |  |  |  |
| 25 | 26   | 27 | 28 | 29 | 30 | 31 |  |  |  |
|    |      |    |    |    |    |    |  |  |  |

| AUGUST |    |    |    |    |    |    |  |  |  |
|--------|----|----|----|----|----|----|--|--|--|
| М      | Т  | Т  | Т  | F  | S  | S  |  |  |  |
| 1      | 2  | 3  | 4  | 5  | 6  | 7  |  |  |  |
| 8      | 9  | 10 | 11 | 12 | 13 | 14 |  |  |  |
| 15     | 16 | 17 | 18 | 19 | 20 | 21 |  |  |  |
| 22     | 23 | 24 | 25 | 26 | 27 | 28 |  |  |  |
| 29     | 30 | 31 |    |    |    |    |  |  |  |
|        |    |    |    |    |    |    |  |  |  |

|    | SEPTEMBER |    |    |    |    |    |  |  |  |
|----|-----------|----|----|----|----|----|--|--|--|
| М  | Т         | Т  | Т  | F  | S  | S  |  |  |  |
|    |           |    | 1  | 2  | 3  | 4  |  |  |  |
| 5  | 6         | 7  | 8  | 9  | 10 | 11 |  |  |  |
| 12 | 13        | 14 | 15 | 16 | 17 | 18 |  |  |  |
| 19 | 20        | 21 | 22 | 23 | 24 | 25 |  |  |  |
| 26 | 27        | 28 | 29 | 30 |    |    |  |  |  |
|    |           |    |    |    |    |    |  |  |  |

| OCTOBER |       |     |    |     |        |    |  |  |
|---------|-------|-----|----|-----|--------|----|--|--|
| М       | Т     | Т   | Т  | F   | S      | S  |  |  |
|         |       |     |    |     | 1      | 2  |  |  |
| 3       | 4     | 5   | 6  | 7   | 8      | 9  |  |  |
| 10      | 11    | 12  | 13 | 14  | 15     | 16 |  |  |
| 17      | 18    | 19  | 20 | 21  | 22     | 23 |  |  |
| 24      | 25    | 26  | 27 | 28  | 29     | 30 |  |  |
| 31      |       |     |    |     |        |    |  |  |
|         |       |     |    |     |        |    |  |  |
|         | Weekl | y 1 |    | Wee | ekly 2 |    |  |  |



| DECEMBER |    |    |    |    |    |    |  |  |  |
|----------|----|----|----|----|----|----|--|--|--|
| М        | Т  | Т  | Т  | F  | S  | S  |  |  |  |
|          |    |    | 1  | 2  | 3  | 4  |  |  |  |
| 5        | 6  | 7  | 8  | 9  | 10 | 11 |  |  |  |
| 12       | 13 | 14 | 15 | 16 | 17 | 18 |  |  |  |
| 19       | 20 | 21 | 22 | 23 | 24 | 25 |  |  |  |
| 26       | 27 | 28 | 29 | 30 | 31 |    |  |  |  |
|          |    |    |    |    |    |    |  |  |  |





#### View and set setpoint temperatures in 0.5°C steps

The goal of Mitsubishi Electric is to offer a better quality of life though innovative products. Mitsubishi Electric was the first manufacturer to introduce the capability of viewing and setting setpoint temperatures in  $0.5^{\circ}$ C increments, for unparalleled comfort calibrated with decimal precision by the user.

This function gives the user a greater sense of control and, therefore, comfort, by offering a wider and more precise choice of settable temperatures.



#### Monitor quantity of refrigerant in system

WEB Server centralised controllers may be used to run a test function for periodically checking the quantity of refrigerant in each outdoor unit circuit. This function is performed by a software application which measures the temperature and pressure variables of the system to indirectly calculate the level of refrigerant.

This function is only accessible from the Web and is selectable for individual outdoor units. Once the routine is launched, a test cycle is run lasting from 30 minutes to 1 hour, during which the system configures the indoor units to operate in specific modes that cannot be modified by the user. The routine consists of 10 cycles, and produces a qualitative outcome with three possible levels (High, Normal and Low).

|                  |                                    | Controller                                      |
|------------------|------------------------------------|---|
|                  | Verifica quantită gas refrigerante | AE01 EW50E Controlla tutto                      |
| Fagina iniziale  |                                    | Avvia controllo                                 |
| Monitor/Operaz.  |                                    | Programmatione                                  |
|                  | 01-051                             | 19/10/2018 23:00                                |
| Gestione energia |                                    | Edita   |
| Programmazione   | <                                  |   |
| Anviso           |                                    | Avvia controllo                                 |
| 0                |                                    | Programmations                                  |
| Impostazioni     | 01-061                             |   |
| Manufanzione     | -                                  | Edita   |
|                  |                                    | ~   |
|                  |                                    | 1/2   |
| 17:34            |                                    | Copyright(C 2015)2588 MITSUBSHE BLICTRIC COPPOR |



The indirect refrigerant quantity monitoring procedure is intended to simplify the overall management of the system but is not a substitute for the inspection procedures required by the EC regulation 842/2006 (or F-Gas directive). The ambient conditions (temperature/humidity) during the test cycle should also be taken into consideration.









#### AT-50B centralised system controller


The new AT-50B centralised controller clearly belongs to the family of new Mitsubishi Electric control systems (AE-200, PAR-40MAA), with a gloss finish, glass-effect front panel and a modern, elegant design making it the ideal controller for residential applications.

The AT-50B features a backlit 5" touch screen allowing the user to monitor, configure and manage up to 50 indoor units or groups viewable in grid, list or group mode. Two programmable function buttons settable by the user for direct access to a choice of functions intended specifically for saving energy and ensuring that the VRF-HVRF CITY MULTI functions correctly.

- 5" backlit LCD touch screen.
- Usable to manage 50 groups of up to 50 indoor units.
- Individual or collective group control, with groups displayed in grid, list or group format.
- · Dual Setpoint function

- Two weekly timers (for seasonal switching) and one daily timer.
- · Simple connection with single non-polarised two-core wire.
- ME M-Net addressing technology.
- Two function buttons programmable to access any of a choice of functions (Night Set-back, weekly timer setting, switch operating mode, adjustable temperature range restriction, local restrictions).
- Recommended for controlling a single system.
- The PAC-SC51KUA external power supply is needed for controlling more than one system.

| Technical specifica | tions                  |        |                                 |                                   |
|---------------------|------------------------|--------|---------------------------------|-----------------------------------|
| MODEL               | DIMENSIONS (L X H X W) | WEIGHT | ELECTRIC POWER SUPPLY           | M-NET UNIT POWER CONSU-<br>MPTION |
| AT-50B              | 180 x 120 x 30 mm      | 500 g  | 17-32 VDC<br>(M-Net connection) | 4 M-Net unit                      |

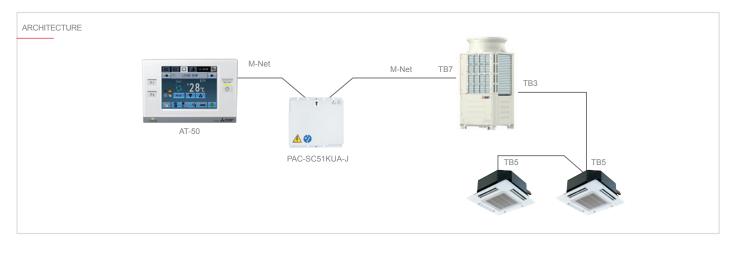

| Key Technologies               |                   |         |                     |  |  |  |
|--------------------------------|-------------------|---------|---------------------|--|--|--|
| Daily<br>Timer Weekly<br>Timer | ciual<br>Setpoint | Setback | M-NET<br>connection |  |  |  |

| FUNCTIONS   | DESCRIPTION  | SETTING | DISPLAY |
|---|--|---------|---------|
| ON/OFF  | Switches air conditioning units on and off. The LED on the Collective ON/OFF button lights when one of more unit is in use and extinguishes when all the units are off.  | $\odot$ | o       |
| Operating mode                                      | Switches between the different operating modes available, which depend on the units installed.<br>Air conditioning units: Cool./Dehum./Autot*)/Vent./Heat.<br>Lossnay units: Heat recovery/Bypass/Auto<br>Air-Water units (PWFY): Heat., ECO Heat., Hot Water, Antifreze, Cool.<br>*Auto mode only available for CITY MULTI R2 and WR2 units                                       | ⊙       | ⊙       |
| Temperature settings                                | Used to modify temperature settings.<br>The settable temperature range depends on the model of indoor unit installed.  | $\odot$ | o       |
| Enable/disable local operations                     | The following remote control functions may be disabled from specific settings on the centralised controller:<br>ON/OFF, select operating mode, set temperature, fan speed, air flow direction, reset filter indicator lamp.  | $\odot$ | o       |
| Error   | The LED on the Collective ON/OFF button flashes in the event of an error on the AT-50B controller unit or any of the units<br>or control units it controls. In the event of an error relative to indoor or LOSSNAY units, the icon for the relative group<br>appears in the HOME screen. The error code may be viewed and reset from the Status List screen.                       | ×       | □⊙      |
| Ventilation (independent)                           | Switches between Bypass/Heat recovery/Auto modes for the Lossnay unit.   | $\odot$ | O       |
| Ventilation (interlocked)                           | The Lossnay ventilation unit starts automatically when the relative interlocked indoor unit starts.  | •       | O       |
| Settable temperature<br>range restrictions          | Limits for the user settable temperature range may be defined for a group for cooling, heating and auto modes.<br>This function is not available with the MA controller. Availability depends on the model of indoor unit installed.   | $\odot$ | O       |
| External inputs/outputs<br>emergency shut-off etc.) | Allows the following activities to be configured and monitored by using an optional adapter for external input and output signals (PAC-YT51HAA, purchasable separately):<br>Input: Level signal: "ON/OFF", "Emergency shut-off".<br>Impulse signal: "ON/OFF", "Enable/disable local remote control".<br>Output: "ON/OFF", "Error/Normal"   | ⊙       | ⊙       |
| Weekly/daily<br>schedule                            | Lets the user programme a weekly schedule for each group.<br>Up to 16 of the following event types may be set in a schedule: ON/OFF, select mode, set temperature, set fan speed,<br>set air direction, enable/disable local operations. Up to 12 schedules are available for the Weekly Schedule timer mode.<br>Up to 5 schedules are programmable for Daily Schedule timer mode. | Ο       | 0       |

O Each group □ Each unit ⊙ Collective × Not available





The management and supervision technology used for VRF-HVRF CITY MULTI systems is based on continuously evolving solutions borrowed directly from the Internet.

#### Ethernet - A global standard

Ethernet is the most widely used local area data communication network technology in the world. The key advantages of this communication technology are its low costs and simplicity of installation and operation.

Conceived originally for connecting PCs only, over time, the Ethernet network has grown to become the most widely used means for connecting not only other office devices (printers, fax machines, scanners, photocopiers), but also for connecting a multitude of other devices and transmitting a wide variety of different types of signal, from audio and video signals to, in the case of Mitsubishi Electric applications, data for WEB Server 3D centralised controllers.

The main reason for choosing this technology is that it makes it possible to use an existing single wired network extending throughout the entire building.

A network connecting a geographically limited area is denominated LAN (Local Area Network). A LAN network is often limited locally to a single site. The term WAN (Wide Area Network) indicates a set of devices or LAN networks connected over an extended geographic area. These may often be connected either by telephone line or with other forms of connection (such as broadband ADSL, fibre optic lines or satellite link). One of the largest existing WAN networks is the internet.


#### What is a WEB Server?

The primary function of a WEB Server device is to deliver web pages in response to requests from network clients. This means being capable of delivering HTML documents and all other types of additional content which may be included in these document, such as images, styles and JavaScripts.

A client, which may simply be a standard web browser such as Internet Explorer®, initiates communication by sending an HTTP request to the Web server. The Web server then responds by delivering the requested content. This means that it is not necessary to install any additional software on the client, which may therefore be any PC (not necessarily dedicated to this application) with internet access.

Mitsubishi Electric WEB Server centralised controllers use Ethernet as the data link protocol for LAN (Local Area Network), via a specific RJ-45 connection indicated for use with the TCP/IP suite of internet protocols. To enable this communication, an IP network address must be assigned to each WEB Server centralised controller connected to the network.



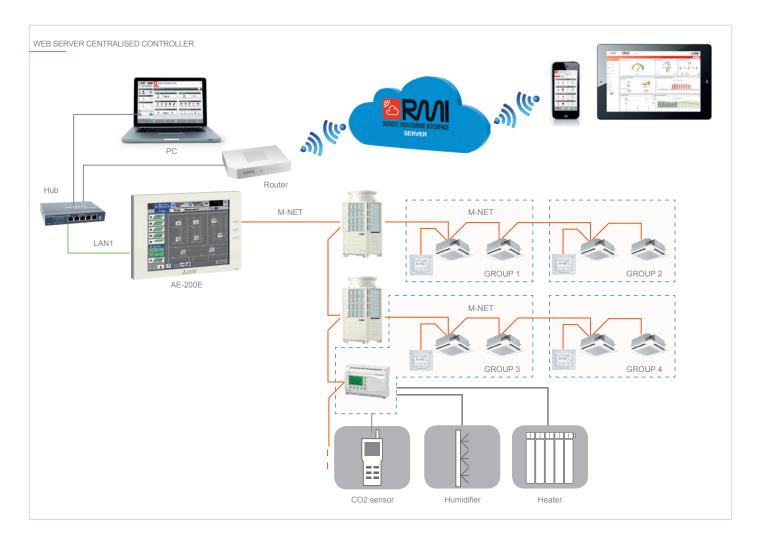

## Web Browser monitoring and control functions

WEB Server centralised controllers make it possible to monitor and manage the operating parameters of all the indoor units in the installation from any PC on the same local network (LAN or Wi-Fi network of controller) via a web browser.

From this screen, the administrator may also check for malfunctioning indoor units and prevent units from being unintentionally left running for prolonged periods of time.



# CONTROL SYSTEMS / WEB SERVER CENTRALISED CONTROLLERS

#### Management, functional and monitoring capabilities of new Mitsubishi Electric controller systems

WEB Server centralised controllers support the management, operational and monitoring capabilities of all the new functions offered by the new PAR–U02MEDA remote controller. Information concerning occupancy, light levels, relative humidity in the indoor space and dual setpoints etc. is accessible directly from the display and via the WEB.

#### Integrated management of impulse meters

WEB Server centralised controllers are capable of acquiring the output signals from wall or electrical cabinet mounted digital impulse consumption meters. With the centralised controller, it is now possible to monitor the consumption of the installation with any electric power (WHM), water, and gas consumption meters and calorimeters producing an impulse type output signal.

Up to 4 digital meters may be connected to each individual centralised controller. The administrator may monitor the status of the meters connected to each controller and:

- · View real time consumption values
- View consumption graphs
- Export consumption billing data in CSV format for consumption apportioning (CHARGE).

# CHARGE consumption metering and apportioning system

The Charge consumption monitoring and apportioning system may be used to meter the consumption of electric power, thermal power and water for air conditioning, air and/or water heating and domestic hot water production with a Mitsubishi Electric VRF-HVRF CITY MULTI system, and calculate individual usage values.

The AE-200 and EW-50 CHARGE systems use proprietary Mitsubishi Electric calculation and apportioning methods. This consumption apportioning method indicates the consumption parameters of each user as percentages of the total consumption of the system. Consumption values, as percentages and kWh, may be calculated separately for:

- · Indoor units
- Ecodan HWS Hydronic Modules
- · Ecodan ATW Hydronic Modules

See paragraph relative to Technical Services for more information.

#### Unit error log

The unit error log displays a list of the last 64 unit errors for each AE-200/ EW-50, complete with the date and time of detection of the error, the error code and the address of the unit from which the error originated.





#### Error list

List of currently active errors.



#### **RMI Ready**



WEB Server centralised controllers perform the crucial role of acquiring and monitoring data via the M-Net data transmission bus linking all the components of the VRF-HVRF CITY MULTI, Mr.

Slim or Residential system. A router (available as wired ADSL or 3G Mobile versions) creates a secure, protected communication channel with the RMI Server. The modular flexibility of the RMI Server makes it possible to store enormous volumes of data, which is acquired, processed and archived for access from portable devices.

This infrastructural complexity, combined with superior processing, management and security capabilities, is encapsulated in an extremely user friendly concept, to help users optimise the energy usage of their systems.

#### BACnet<sup>®</sup> connection



WEB Server centralised controllers may be connected directly to a home automation system using the BACnet<sup>®</sup> protocol. These units have two ethernet cable ports, for connection respectively to the local LAN network dedicated to the air conditioning system and the LAN network of the the BMS. This makes it possible to integrate the Mitsubishi Electric installation in a home automation system without the addition of a dedicated interface board.





## **AE-200E**

#### WEB SERVER - 3D TOUCH CONTROLLER CENTRALISED CONTROLLER



## WEB SERVER – 3D TOUCH Controller centralised controller (AE-200E)

The new WEB Server 3D TOUCH Controller centralised controller is an evolution of the AG-150A, the first centralised controller on the market to introduce typical BMS functions such as installation layout map display modes. While based on the same technology as its predecessor, the new controller offers even more flexibility for compatibility with future applications.

3D TOUCH Controller represents the state of the art in Mitsubishi Electric controller technology, and boasts class beating functions and features.

 Generously sized backlit 10.4" SVGA colour touch screen with graphic layout display function.

- Built-in 240V AC 50 / 60 Hz power supply.
- Stand-alone configuration: for managing up to 50 indoor units in total.
- Extended configuration: for managing up to 200 indoor units (with three EW-50 expansion modules)
- · Individual or collective control of groups, blocks or zones.
- Ethernet interface for connection to BMS supervisor systems.

- Integrated WEB server software for management using Internet Explorer®.
- · Integrated 2 GByte SD memory card for storing system data
- Power consumption data for billing downloadable via internet connection.
- BACnet® connection
- Complete support for all advanced RMI platform functions for energy consumption monitoring and for multi-installation and multi-user management.
- Temperature setpoints viewable and settable with a resolution of 0.5°C.
- Energy saving functions: Maintenance temperature, Sliding temperature, Optimised start, Dual Setpoint.
- M-Net interfacing with Ecodan package Hot Water Heat Pump systems (CAHV and CRHV).
- E-mail fault notification function.
- Complete support for all advanced RMI platform functions for energy consumption monitoring and for multi-installation and multi-user management.

**EXAMP** Complete support for all advanced RMI platform functions for energy consumption monitoring and for multi-installation and multi-user management.


| Technical specificat | tions                  |        |                                   |                                   |
|----------------------|------------------------|--------|-----------------------------------|-----------------------------------|
| MODEL                | DIMENSIONS (H X L X W) | WEIGHT | ELECTRIC POWER SUPPLY             | M-NET UNIT POWER CONSUMP-<br>TION |
| AE-200E              | 200 x 284 x 65 mm      | 2.3 kg | 100-240 VDC<br>(M-Net connection) | 4 M-Net unit                      |



#### **Graphic Layout Display Function**

The 3D TOUCH Controller boasts a generously sized, backlit 10.4" colour SVGA touch screen allowing the user to interact comfortably, easily and intuitively with the system.

Temperatures are viewable and settable with a resolution of 0.5°C, while

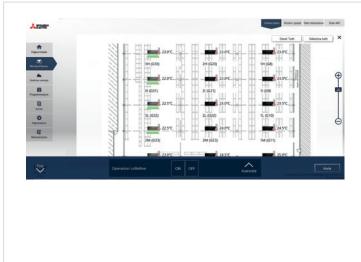


a Dual Set-Point function is also available.

# Ora Ora Ore OF Ore OF Avriso Avri

#### Power and flexibility in a compact device

While measuring practically the same as the previous AG-150, the new 3D TOUCH Controller WEB Server centralised controller offers a larger screen area, greater processing power and expandable flexibility for future applications.

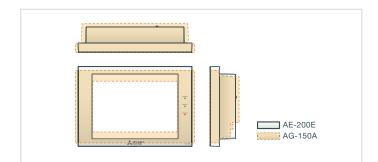

#### **RMI Ready**



The WEB Server **3D TOUCH Controller** centralised controller performs the crucial role of acquiring and monitoring data via the M-Net data transmission bus linking all the components of the VRF-HVRF CITY MULTI, Mr. Slim or Residential

system.

A router (available as wired ADSL or 3G Mobile versions) creates a secure, protected communication channel with the RMI Server. The modular flexibility of the RMI Server makes it possible to store enormous volumes of data, which is acquired, processed and archived for access from portable devices.

This infrastructural complexity, combined with superior processing, management and security capabilities, is encapsulated in an extremely user friendly concept, to help users optimise the energy usage of their systems.







| Key Tech            | nologies           |                           |                 |                |           |                  |         |         |                     |
|---------------------|--------------------|---------------------------|-----------------|----------------|-----------|------------------|---------|---------|---------------------|
| Silent              | +0,5 °C<br>-0,5 °C | Daily<br><sub>Timer</sub> | Weekly<br>Timer | Early<br>Timer | <u>II</u> | dual<br>Setpoint | Setback | <b></b> | M-NET<br>connection |
| BACnet <sup>⊗</sup> | AHC                |                           |                 |                |           |                  |         |         |                     |

| FUNCTION                          | DESCRIPTION  | SETTING | DISPLAY |
|-----------------------------------|--|---------|---------|
| Number of units<br>controllable   | Up to 50 units/50 groups.  |         |         |
| ON/OFF                            | Switch the units in the installation on or off.  | ○⊙∆●    | 00      |
| Operating mode                    | Switch between the different operating modes available, which depend on the units installed.<br>Air conditioning units: Cool./Dehum./Auto(*)/Vent./Heat.<br>Lossnay units: Heat recovery/Bypass/Auto<br>CAHV/CRHV units, Air-Water units (PWFY): Heat., ECO Heat., Hot Water, Antifreeze, Cool. (**).<br>*Auto mode only available for CITY MULTI R2 and WR2 units<br>**For PWFY units only. | ○⊙∆●    | 0       |
| Temperature setting               | Used to modify temperature settings.<br>The settable temperature range depends on the model of indoor unit installed.  | ○⊙△●    | 0       |
| Fan speed setting                 | Models with 4 settable fan speeds: Hi/Mid-2/Mid-1/Low.<br>Models with 3 settable fan speeds: Hi/Mid/Low.<br>Models with 2 settable fan speeds: Hi/Low.<br>The settable fan speeds and modes (including Auto mode) depend on the model of indoor unit.  | ○⊙∆●    | 0       |
| Air flow direction setting        | Sets the direction/mode of the air flow (with up to 5 directions and with Swing and Auto modes).   | ○⊙△●    | 0       |
| Programme                         | For programming daily/weekly/seasonal weekly/annual timer schedules. The following functions and modes are settable:<br>ON/OFF, operating mode, temperature setting, disable remote control, air flow direction.   | ○⊙△●    | 0       |
| Enable/disable local operations   | The following remote control functions may be disabled from specific settings on the centralised controller:<br>ON/OFF, select operating mode, set temperature, fan speed, air flow direction, reset filter indicator lamp.  | ○⊙△●    | 0       |
| Intake air temperature            | Measures the intake air temperature only when the indoor unit is on.   | ×       | 0       |
| Error                             | In the event of a error concerning a unit, the error code and the unit involved are displayed.   | ×       | □⊙      |
| Test run                          | Activates the air conditioning unit in Test run mode.  | 0040    | 0       |
| Ventilation interlock             | The Lossnay ventilation unit starts automatically when the relative interlocked indoor unit starts.  | 0040    | 0       |
| External Outputs/Inputs           | Allows the following activities to be configured and monitored by using an optional adapter<br>for external input and output signals (PAC-YG10HA-E):<br>Input: Level signal: "ON/OFF", "Emergency shut-off".<br>Impulse signal: "ON/OFF", "Enable/disable local remote control". Output: "ON/OFF", "Error/Normal"  | ⊙       | O       |
| Energy management                 | Bar graphs: Indoor unit electric power usage; vent. Time; Thermo-ON time (TOTAL, Cool., Heat.),<br>for hourly, daily and monthly values.<br>Line graphs: External temperature; ambient temperature, set temp. (heat., cool.)<br>Input from PAC-YG63MCA and temperature from AHC  | ×       |         |
| Advanced control<br>HVAC (AHC)    | The status of the AHC system can be monitored only.  | ×       | 0       |
| ME remote control                 | The status of the sensor incorporated in this controller may be monitored.   | ×       | 0       |
| Smartphone/Tablet                 | AE-200/EW-50 controllers may be monitored and controlled via browser on iOS and Android OS devices.  | 0       | 0       |
| New web design                    | New web interface developed to be even more user friendly.   | ○⊙∆●    | 0       |
| Initial configuration<br>software | Initial configuration may be set up with no connection to the AE-200/EW-50 controller.   | ×       | ×       |
| onsumption apportioning           | The AE-200 controller is capable of calculating consumption values for separate users<br>(requires PRO-3DCHARGE or RMI CHARGE consumption apportioning system).  | ٠       |         |
| ACnet® communication              | The ASNI/ASHRAE 135-2010 (ISO16484-5) protocol is supported and approved by BTL.   | 0       | ×       |

 $\bigcirc$  Each group  $\Box$  Each unit  $\bullet$  Each block  $\triangle$  Each floor  $\odot$  Collective imes Not available



### **EW-50E**

### WEB SERVER 3D BLIND CONTROLLER CENTRALISED CONTROLLER





### WEB server – 3D BLIND Controller centralised controller


- · "Black Box" version (no display).
- · Compact dimensions (external 230V AC power supply).
- Usable to manage 50 groups for a total of up to 50 indoor units.
- · Individual or collective group control.
- · Ethernet interface for connection to supervisor systems.
- · Integrated WEB server software for management using Internet Explorer®.
- · Simplified connection, with single non-polarised two-core wire, using ME technology.
- · Integrated 2 GByte SD memory card for storing system data.

- Direct management of 4 impulse meters with no external interface.
- · Status indicator LED indicating data transmission status and/or errors.
- Consumption data for billing downloadable via internet connection.
- · A wide choice of energy saving functions offered as standard, with additional optional functions accessible with PIN code licenses.
- E-mail fault notification function.
- · Complete support for all advanced RMI platform functions for energy consumption monitoring and for multi-installation and multi-user management.
- Complete support for all advanced RMI platform functions for energy consumption monitoring and for multi-installation and multi-user management.



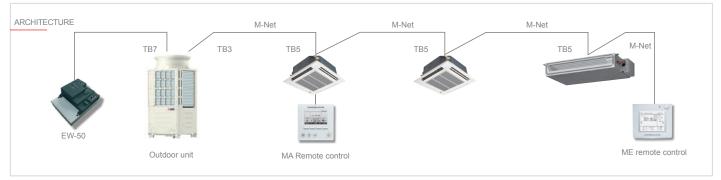



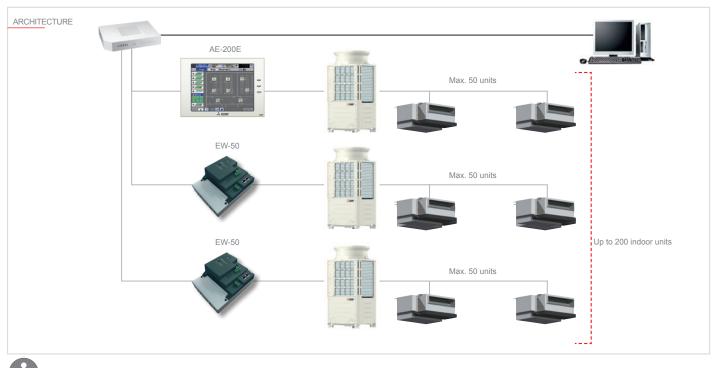

If the AE-200 is not used, up to four EW-50 units may be connected.

| Key Tech | nologies           |                |                 |                |             |                  |         |                     |                     |
|----------|--------------------|----------------|-----------------|----------------|-------------|------------------|---------|---------------------|---------------------|
| Silent   | +0,5 °C<br>-0,5 °C | Daily<br>Timer | Weekly<br>Timer | Early<br>Timer | <u>    </u> | dual<br>Setpoint | Setback | M-NET<br>connection | BACnet <sup>®</sup> |
| AHC      |                    |                |                 |                |             |                  |         |                     |                     |

| FUNCTION                            | DESCRIPTION  | SETTING | DISPLAY |
|-------------------------------------|--|---------|---------|
| ON/OFF                              | Switch the units in the installation on or off.  | $\odot$ | o       |
| Operating mode                      | Switches between the different operating modes available, which depend on the units installed: Cool./Dehumid./Auto/<br>Vent./Heat.   | O       | 0       |
| Temperature setting                 | Used to modify temperature settings.<br>The settable temperature range depends on the model of indoor unit installed.  | $\odot$ | 0       |
| Temperature increment setting       | Temperatures may be set and displayed in steps of 0.5°C.<br>*With certain combinations of units, temperatures are set and displayed in 1°C steps.  | O       | 0       |
| Fan speed setting                   | Settable fan speeds may be set to 4 levels, 3 levels, 2 levels or Auto.<br>The settable fan speeds and modes (including Auto mode) depend on the model of indoor unit.   | O       | 0       |
| Air flow direction                  | Five fixed positions or auto-direction mode are selectable (settings and modes available depend on units).   | 0       | 0       |
| Enable/disable local operations     | The following remote control functions may be disabled from specific settings on the centralised controller:<br>ON/OFF, select operating mode, set temperature, fan speed, air flow direction, reset filter indicator lamp.  | O       | 0       |
| Ambient temperature<br>display      | Displays air temperature at intake of indoor units.  | -       | 0       |
| Error                               | In the event of a error concerning a unit, the error code and the unit involved are displayed.   | -       | 0       |
| Programme                           | For programming daily/weekly/seasonal weekly/annual timer schedules. The following functions and modes are settable:<br>ON/OFF, operating mode, temperature setting, disable remote control, air flow direction.   | $\odot$ | 0       |
| Energy management                   | Displays energy consumption or operating hours. Requires optional device.  | -       | 0       |
| Ventilation functions (alone)       | Group management is only available for non interlocked Lossnay units.<br>Group functions available include auto ventilation, heat exchange and normal ventilation.   | $\odot$ | 0       |
| Ventilation functions (interlocked) | Free Lossnay units and indoor units may be interlocked to operate together.<br>In this case, the treated air volume may be managed but the ventilation mode cannot be selected.  | O       | 0       |
| External inputs                     | The following level or impulse signal inputs are available.<br>Level signals: "Emergency shut-off" or "Collective ON/OFF"<br>Impulse signals: "Collective ON/OFF" or "Enable/disable local remote control"<br>• Requires PAC-YG10HA external input/output adapter (purchased separately).<br>Only one input from those listed may be selected. |         | _       |
| External Outputs                    | "ON/OFF" signal and "Error/Normal" signal.<br>Requires PAC-YG10HA external input/output adapter (purchased separately).  | -       |         |
| Web browser                         | Usable to monitor/control:<br>Errors, filter indicator lamp status, settable temperature range restrictions and other functions.   | ⊙*1     | ⊙*1     |
| Filter reset                        | Reset filter indicator lamp  | 0       | 0       |
| onsumption apportioning             | The EW-50 controller is capable of calculating consumption values for separate users<br>(requires PRO-3DCHARGE or RMI CHARGE consumption apportioning system).   | •       | -       |

O Each group □ Each unit ● Each block ⊙ Collective

Notes
 \*'Certain elements do not support multi-group setting and display functions.



### PIN Code licenses for Web Server centralised controllers

PIN Codes are purchasable licenses for enabling optional functions. See following table for details:

| PIN Codes       | PIN Codes             |                              |                               |  |  |  |  |  |
|-----------------|-----------------------|------------------------------|-------------------------------|--|--|--|--|--|
| PIN CODE        | FUNCTION              | 3D BLIND CONTROLLER<br>EW-50 | 3D TOUCH CONTROLLER<br>AE-200 |  |  |  |  |  |
| PIN-WEB-PER-150 | Personal Web          | Optional                     | Optional                      |  |  |  |  |  |
| PIN-INT-150     | Interlock programming | Optional                     | Optional                      |  |  |  |  |  |

### **Personal WEB function**

The Personal Web functions allows each user of the installation to control their respective air conditioning units individually from a browser installed on a PC. Unlike the standard Web Browser function, which is for managing all the units in the installation, the Personal Web function is configurable to define the units controllable from a browser for each individual user, prohibiting access to all other parts of the installation. This means that each user can only access their own air conditioning units. To use this function, users must be connected by PC to the same LAN network as the centralised controller. Up to 50 users may be defined, with up to 50 units assigned to each user. The functions available from the Personal Web function as the same as those of a conventional remote controller. Functions typically reserved for the administrator of the installation, such as timer functions and fault logs, are not accessible.

The new browser interface also permits control over the system from a tablet or smartphone, by connecting the relative device to the local LAN WiFi network. So in addition to the capabilities of the new interface, this means that users can be allowed access to all available control functions from any of today's most commonly used devices and from anywhere within the Wi-fi coverage zone, simply, immediately and without the need for any additional wiring.

### Interlock programming

The interlock programming function may be used to define an interdependent operation relationship between two units in the system. Specifically, this function may be used to define the response of one unit (in terms of operating parameters) to a given event relative to the other unit. For instance, one air conditioning unit may be programmed to switch on if another air conditioner stops due to a malfunction. Furthermore, interlocked functions may also be controlled from signals received from external systems such as safety systems, magnetic card readers, lighting system controllers etc. For example, the signal from a window open sensor may used to switch off the indoor unit in the relative room.

This makes it possible to manage a complex system efficiently and automatically, defining automated actions to not only improve comfort within the building, but to also respond rapidly in the event of a malfunction.





### **3D PLAN**

### INSTALLATION LAYOUT MAP DISPLAY SYSTEM FOR CENTRALISED CONTROLLERS






EW-50

### Installation layout map display system (3D PLAN)

Purchasing the respective Pin Code and activating this function makes it possible to display the plan view of the building on the touch screen of the **AE-200** centralised controller indicating the effective positions of all the indoor units in the installation. This makes the entire architecture of the installation simpler and more immediate to understand and manage, and is especially useful for very large and complex systems.

Purchasing this package enables the following functions:

- Display of installation layout maps defined for the specific installation
- · Ability to load and configure installation layout maps
- Site user manual

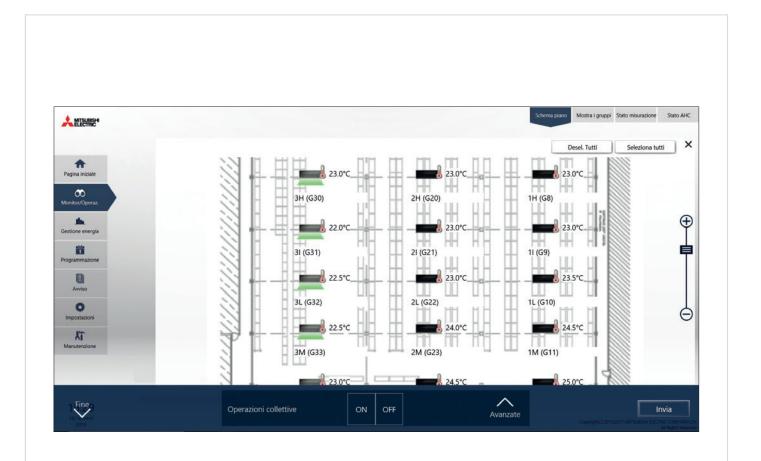






### Remote management and supervisor systems for VRF and HVRF installations



### **CLIMASYNC**

### CENTRALISED REGULATION AND SYNCHRONISATION SYSTEM

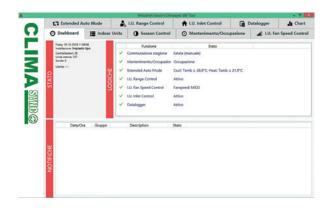

### **CLIMASYNC**


CLIMASYNC is a software application developed specifically by Mitsubishi Electric to optimise the synchronised, operation, management and setting of Mitsubishi VRF systems to improve comfort and energy efficiency.

CLIMASYNC offers a suite of functions, customisable by the administrator of the installation, for optimising the operation of the indoor units (or groups of indoor units) in the system in relation to a number of parameters such as outdoor temperature.

It also makes it possible to supervise and control indoor units from a Web Server centralised controller over an Ethernet network.

The software introduces additional control logic and functions not native to VRF systems.

What sets this solution apart is that it allows the transverse synchronisation of multiple VRF systems with multiple centralised controllers (Web Server).

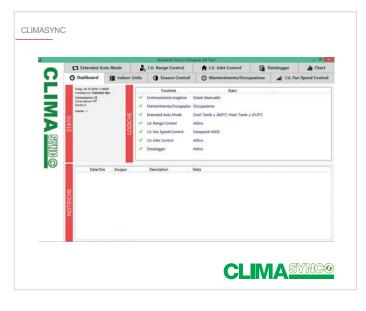


### Fan speed control

The "Fan management" function may be used to set and synchronise a specific fan speed for all indoor units enabled for the function in accordance with a repeating weekly timer schedule.

The administrator simply has to select the indoor units enabled for the function, select the days of the week, and then select the fan speed settings for each time bracket. While the function is active, even though the user can continue to modify fan speed from their remote control, CLIMASYNC will force fan speed to the setting configured by the administrator. During time brackets for which the function is not enabled, the user may set the fan speed locally with complete freedom.

### Switching between Maintenance/Occupancy modes during weekly time schedule


The switching function lets the administrator programme the indoor units to switch automatically between "Maintenance" and "Occupancy" modes in accordance with a weekly timer schedule with a resolution of one hour. "Maintenance" mode requires a minimum or maximum setpoint to be defined (depending on season) to prevent the VRF-HVRF CITY MULTI system from switching off completely during unoccupied periods. This is particularly useful for winter operation, where restarting the system from very low indoor temperature conditions will significantly increase energy consumption and increase the time required for capacity control and modulation.

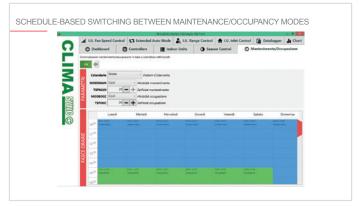



### Extended range switching between AutoCool/AutoHeat modes

The EAM (Extended Auto Mode) function allows automatic switching mode to operate over a more extended range not constrained directly by setpoints, to allow the system to function predominantly in either Cooling or Heating mode.

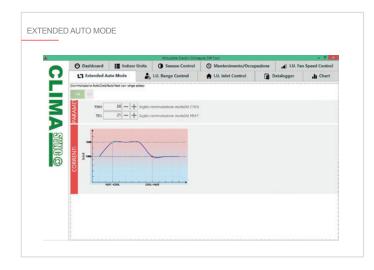

### Settable setpoint range control

The RC (Range Control) function may be used to limit the setpoint temperature range settable by the user from the remote control either for individual units or collectively for all the indoor units in the installation. CLIMASYNC queries the settings for each indoor unit once every minute and corrects any settings made by users not within the permitted range. The permitted deviation from the setpoint is editable and configurable by the administrator.

| O Dashbard         I is fored Units         ① Season Control         ○ Masterimmento/Occupations         △ U. En Speed Control           I is transferred Advis Moles         ▲ U. Brang Control         ▲ U. Brang Co |      |                          |                       |       | Mitsubishi Elec | ctric Climasync S | W Tool            |          |             | - 0             |
|--|------|--------------------------|-----------------------|-------|-----------------|-------------------|-------------------|----------|-------------|-----------------|
| Interview           The colspan="2" of the colspan="2"            <  | 0    | Dashboard                | Indoor                | Units | O Season Co     | ontrol            | Mantenimento/Occ  | upazione | .a) 1.0. Fa | n Speed Control |
| Image: Description         Rest:         Res:         Rest:         Res:         Res::         Rest:   |      | L3 Extended A            | uto Mode              | *     | LU. Range Contr | rol 1             | LU. Inlet Control |          | Datalogger  | d Chart         |
| 2 2 2 4 4 7 4 4 100<br>2 2 2 4 4 7 4 10 4 7 2 4 4 100<br>2 2 2 4 4 7 1 4 7 2 4 4 100<br>4 2 4 7 1 4 7 2 4 100<br>5 2 4 7 1 4 7 2 4 100<br>6 2 4 7 1 4 7 2 4 100<br>7 2 3 4 7 1 4 7 2 4 100<br>8 2 4 7 1 4 7 1 4 7 1 4 100<br>8 2 4 7 1 4 7 1 4 10 7 1 4 100<br>8 2 4 7 1 4 10 1 4 10 1 4 10 1 10 1 10 1 10   | Lind | in it range del SetPoint | seingesenebile dell's | lette |                 |                   |                   |          |             |                 |
| 2 $3 + 4$ $2^{2} + 4$ $2 + 4$ $10 + 6$<br>3 $3 + 4$ $2^{2} + 4$ $2^{2} + 4$ $10 + 6$<br>4 $3 + 4$ $2^{2} + 4$ $2^{2} + 4$ $10 + 6$<br>5 $3^{2} + 4$ $2^{2} + 4$ $10^{2} + 6$<br>6 $3^{2} + 4$ $2^{2} + 4$ $10^{2} + 6$<br>7 $3^{2} + 4$ $2^{2} + 4$ $10^{2} + 6$<br>8 $3^{2} + 4$ $2^{2} + 4$ $10^{2} + 6$<br>9 $3^{2} + 4$ $2^{2} + 4$ $10^{2} + 6$   | _    | * <u>80</u>              |                       |       |                 |                   |                   |          |             |                 |
| 2 $3 + 4$ $2^{2} + 4$ $2 + 4$ $10 + 6$<br>3 $3 + 4$ $2^{2} + 4$ $2^{2} + 4$ $10 + 6$<br>4 $3 + 4$ $2^{2} + 4$ $2^{2} + 4$ $10 + 6$<br>5 $3^{2} + 4$ $2^{2} + 4$ $10^{2} + 6$<br>6 $3^{2} + 4$ $2^{2} + 4$ $10^{2} + 6$<br>7 $3^{2} + 4$ $2^{2} + 4$ $10^{2} + 6$<br>8 $3^{2} + 4$ $2^{2} + 4$ $10^{2} + 6$<br>9 $3^{2} + 4$ $2^{2} + 4$ $10^{2} + 6$   |      | Piano Cool               |                       |       |                 |                   |                   |          |             |                 |
| 2 $3 + 4$ $2^{2} + 4$ $2 + 4$ $10 + 6$<br>3 $3 + 4$ $2^{2} + 4$ $2^{2} + 4$ $10 + 6$<br>4 $3 + 4$ $2^{2} + 4$ $2^{2} + 4$ $10 + 6$<br>5 $3^{2} + 4$ $2^{2} + 4$ $10^{2} + 6$<br>6 $3^{2} + 4$ $2^{2} + 4$ $10^{2} + 6$<br>7 $3^{2} + 4$ $2^{2} + 4$ $10^{2} + 6$<br>8 $3^{2} + 4$ $2^{2} + 4$ $10^{2} + 6$<br>9 $3^{2} + 4$ $2^{2} + 4$ $10^{2} + 6$   |      | 28                       | 26 - +                |       | 21 - +          | 2 - +             | • Invia           |          |             |                 |
| $\begin{array}{cccccccccccccccccccccccccccccccccccc$   |      | 1                        | 26 - +                |       | 21 - +          | 2 - +             | • Invia           |          |             |                 |
| 4 8 4 7 1 4 2 4 6 6 6 7 7 2 4 7 6 6 6 7 7 2 4 7 7 7 7 2 4 7 7 7 7 7 7 7 7 7 7  |      | 2                        | 26 - +                |       | 21 - +          | 2 - +             | - Invia           |          |             |                 |
| N          |      | 3                        | 26 - +                |       | 21 - +          | 2 - +             | Invia             |          |             |                 |
| $\begin{array}{cccccccccccccccccccccccccccccccccccc$   |      | 4                        | 26 - +                |       | 21 - +          | 2 - +             | Inda              |          |             |                 |
| $ \begin{array}{c ccccccccccccccccccccccccccccccccccc$   | ANI  | 5                        | 26 - +                |       | 21 - +          | 2 - +             | - Invia           |          |             |                 |
| 0         21-4         2-4         ban           9         20-4         2-4         ban  | •    | 6                        | 26 - +                |       | 21 - +          | 2-+               | - Invia           |          |             |                 |
| 0 21 - 4 21 - 4 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5  |      | 7                        |                       |       |                 | _                 |                   |          |             |                 |
| 9 20 - + 21 - + 2 - + ma   |      |                          |                       |       |                 |                   |                   |          |             |                 |
|  |      |                          |                       |       |                 |                   |                   |          |             |                 |
| 10 26 - + 21 - + 2 - + tria  |      | 9                        |                       | _     |                 | 2 - +             | • Invia           |          |             |                 |
|  |      | 10                       | 26 - +                |       | 21 - +          | 2 - +             | • Invia           |          |             |                 |

### Inlet temperature control

The IC (Inlet Control) function monitors the inlet temperature values of the indoor units, compares these values against 2 configurable limits (one for Cooling mode and one for Heating mode), and indicates any indoor units with an inlet temperature not within the permitted limit.

Note: if the "e-mail notification" function is enabled, daily report e-mails are sent specifying any units not within the permitted temperature range.

| O Dashboard               | Indoor Units | MitubioN Electric Clima  | Mantenimento/Occup  |      | A 111 E | n Speed Contro |
|---------------------------|--------------|--|---------------------|------|---------|----------------|
| t Extended A              |              | LU. Range Control  | A LU. Inlet Control | Data |         | h Speed Contro |
| TmC<br>TMH<br>Modalità Se | 28 - + Temps | matura minima cooling<br>matura massima beating<br>alla inferiore Cooling / superiore<br>Description | Heating             |      | Mode    | SetTemp Inte   |
| RENTI                     |              |  |                     |      |         |                |

### **Season Control**

The SC (Season Control) functions switches all the indoor units in the installation between Summer/Winter mode either automatically, in accordance with an annual schedule, or in centralised manual mode.

- 'Winter' and 'summer' seasonal operation refer respectively to heating and cooling mode.

When automatic season control is enabled, the system is switched automatically between modes in accordance with two numerical parameters defining the start day for summer mode and the start day for winter mode.
When automatic season control is disabled, the system may be switched manually between modes (Manual summer/Manual winter).

|          | Extended A            |                       |              | I.U. Range Control | A LU. Inlet Control |          | atalogger     | d Chart     |
|----------|-----------------------|-----------------------|--------------|--------------------|---------------------|----------|---------------|-------------|
| e        | Dashboard             | III Indoor            | Units        | O Season Control   | Mantenimento/Occo   | upazione | .al) 1.0. Far | Speed Contr |
| Com      | nuto le modolità stog | pionale menuatrient   | w o da calen | ana -              |                     |          |               |             |
|          |                       | _                     |              |                    |                     |          |               |             |
| ARAMETRI | Calendario            | and the second second | alse         |                    |                     |          |               |             |
| W        | Estate                | 120 - +               |              |                    |                     |          |               |             |
| AR       | Inverno               |                       | - Inizio sta | ngione invernale   |                     |          |               |             |
| -        | Stagione              | 121                   |              |                    |                     |          |               |             |
| SEN.     | Giorno                | 292 gior              | io corrente  |                    |                     |          |               |             |
| CORREI   | Stagione              | Estate stop           | one correct  | te                 |                     |          |               |             |
|          |                       |                       |              |                    |                     |          |               |             |
|          |                       |                       |              |                    |                     |          |               |             |
|          |                       |                       |              |                    |                     |          |               |             |
|          |                       |                       |              |                    |                     |          |               |             |
|          |                       |                       |              |                    |                     |          |               |             |
|          |                       |                       |              |                    |                     |          |               |             |

### Installation

- This function requires a centralised controller (AE-200 or EW50) and a PC (not included), which must be connected to each other via an Ethernet LAN network.
- CLIMASYNC software may only be installed once the installation is installed completely and in operation
- Different versions of CLIMASYNC may be purchased depending on the maximum number of indoor units in the installation (50, 100, 150 or 200). Purchase of the CLIMASYNC software includes:
- · On-site installation of software
- · On-site training of personnel assigned to using software
- Operator manual

### Advantages for the user

- Control and synchronise the air conditioning functions of multiple systems in the same building and managed by different centralised controllers
- Customisable ambient comfort in each indoor space
- · Eliminates all energy wastage/temperature overshoots
- · Saves energy
- Maintains log of external temperature and setpoint values which can be exported by the software administrator for analysing system behaviour and performance history.






### **MELCOTEL** INTERFACE FOR HOTEL SIMPLIFIED APPLICATION



### MELCOTEL

- Integrated solution interface for small-medium hotels;
- Centralized solution;
- Higher level of control and therefore greater energy saving and a substantial reduction in running costs;
- Key Card contact and Window contact management (1 PAC-SE55RA for each indoor unit is required)
- It works in combination with 1 AE-200 and up to 3 more Web Server Centralized Controllers AE-200/EW-50 (up to 200 Indoor Units).

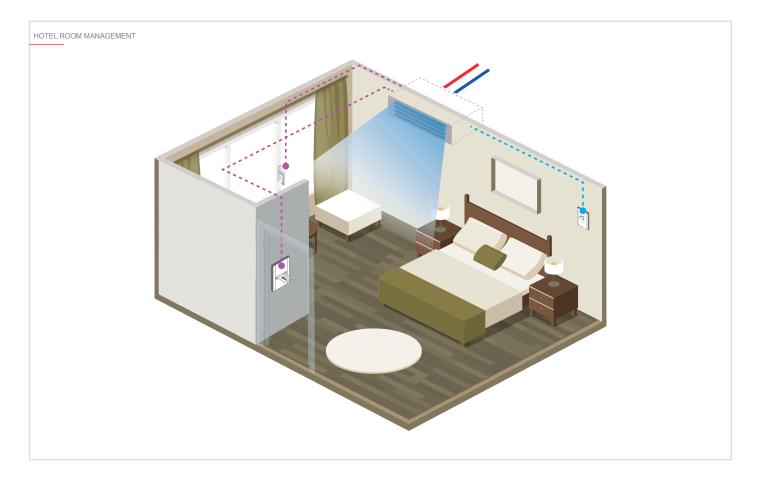



### Key card contact and window contact management

The Melcotel Interface allows a hotel to have more accurate control over its air conditioning and can be used to control and monitor up to 200 bedrooms.

#### KEY CARD CONTACT MANAGEMENT

It allows the resetting of the status (Setpoint Temperature) set by Melcotel when key card is reinserted




#### Application example:

When key card is inserted, the indoor unit switches on with the setpoint temperature set by MELCOTEL, for example 21°C. The chamber customer changes the setpoint to 24°C. When key card is removed the indoor unit switches off and remote control is disabled. When key card is reinserted, the indoor unit switches to ON with the setpoint of 21 °C, the one set by MELCOTEL, in order to guarantee energy savings.

#### WINDOW CONTACT MANAGEMENT


It allows restoring the previous state (ON / OFF status, Setpoint Temperature) when the window is reclosed;

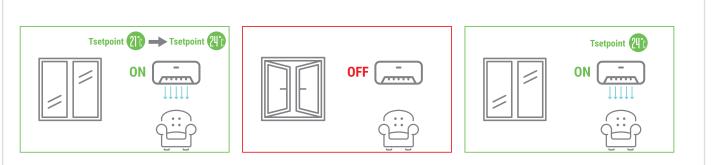

#### Application Example:

The indoor unit is on and with a setpoint temperature equal to that set by MELCOTEL, for example 21°C. The chamber customer changes the setpoint to 24°C. When the window is opened, the indoor unit switches off and remote control is disabled in order to avoid energy waste. When the window is reclosed, the state prior to opening is restored, i.e. the indoor unit returns to ON and to the setpoint previously set by the customer chamber, i.e. 24 °C.

### REMOTE MANAGEMENT AND SUPERVISOR SYSTEMS FOR VRF AND HVRF INSTALLATIONS / MELCOTEL

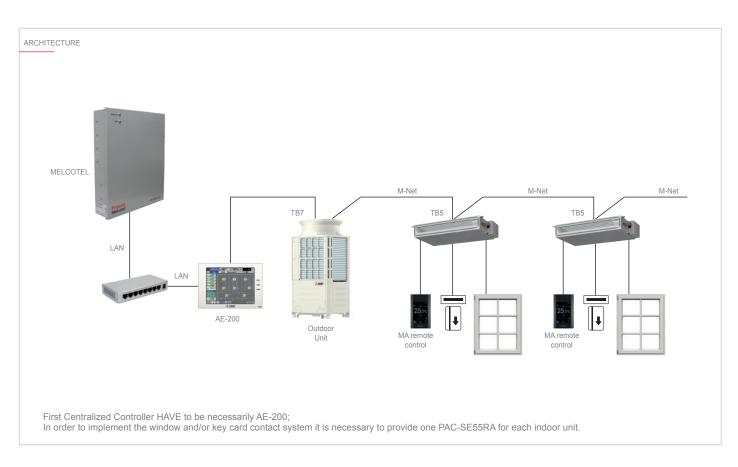



### **3D TABLET CONTROLLER**

WI-FI MANAGEMENT SYSTEM





### Discover the Wi-Fi management system by Mitsubishi Electric

The new 3D Tablet Controller function permits the management and supervision of the installation from smartphones and tablets within the building network.

### Simple and intuitive to use

As it is accessed from any internet browser, the function is usable without installing a dedicated app. This means that the function is not restricted to specific platforms (iOS, Android, Windows Mobile), and is therefore not limited by the availability of dedicated apps on different app stores.

### A simple and intuitive interface

The simple and intuitive interface offers users complete control over air conditioning and domestic hot water production units from mobile devices within the building, with the same functions as a conventional remote control.

The ability to access these functions from anywhere within the building is made possible by a WEB Server centralised controller (**AE-200** or **EW-50**) connected to a Wi-Fi router (not supplied by Mitsubishi Electric).





### REMOTE MANAGEMENT AND SUPERVISOR SYSTEMS / 3D TABLET CONTROLLER



### A mobile interface

The web interface features a design inspired by classic smartphone and tablet apps, for immediate and intuitive usage on a mobile device.

### **Advantages**

- Compatible with all smartphone and tablet mobile devices, regardless of brand or operating system
- No internet connection needed, as the device and centralised controller communicate directly via the router
- Makes it no longer necessary to keep remote controllers in sight in the indoor spaces controlled
- Configurable user profiles, with different user rights and/or restricted access to available functions










# Remote management and supervision systems for HVAC systems

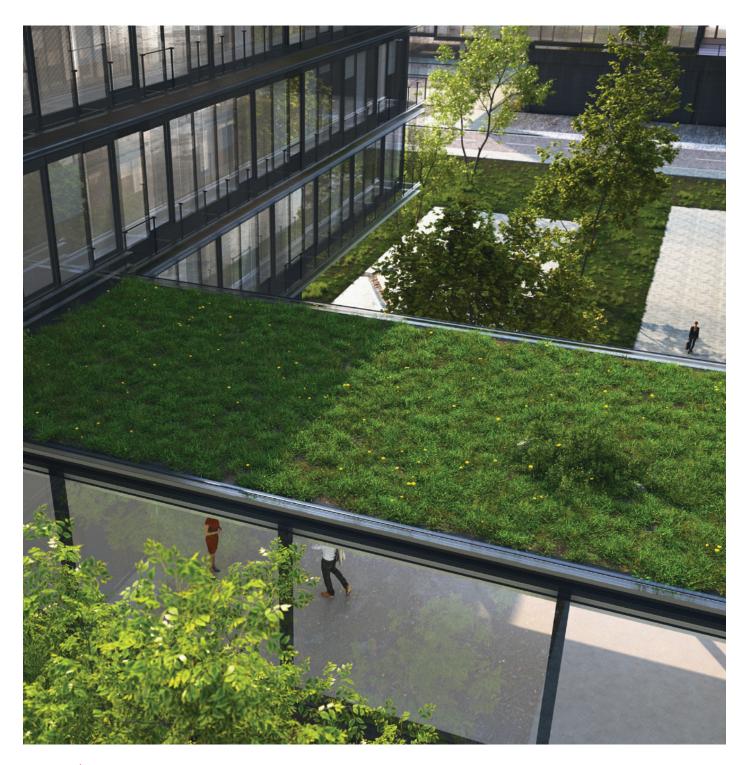





### Supervision system for HVAC systems

**B.EYELink is the new Mitsubishi Electric supervision system for HVAC systems**, which, as suggested by the name (B. for Building, EYE for overall view) **allows complete supervision of all the energy systems** that Mitsubishi Electric can manage through the use of technologies and brands (Mitsubishi Electric, Climaveneta, RC IT Cooling):


- Air conditioning (cooling, hot air central heating) and/or DHW production via VRF CITY MULTI systems and VRF Hydronic systems (HVRF).
- Hot water and chilled water production via chillers, heat pumps, and multi-function units.
- Ventilation via air handling units (AHU) and rooftop units.
- · Precision air conditioning for IT Cooling.







### REMOTE MANAGEMENT AND SUPERVISION SYSTEMS FOR HVAC SYSTEMS / B.EYELINK

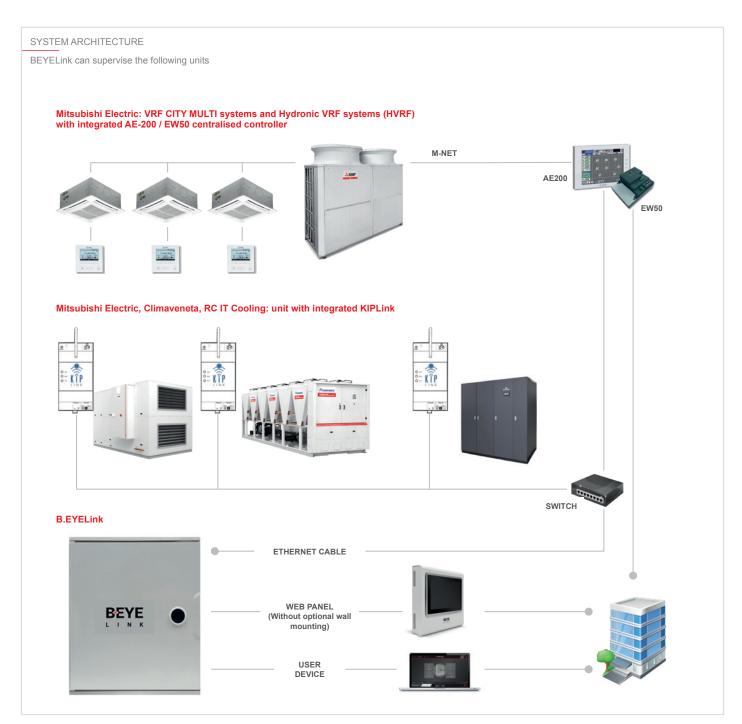


### Control of all building functions from the palm of your hand

A single control system can be used for remote control of all the main water and air production management functions of your smart building in a simple and practical manner, direct from your smartphone, tablet or PC via an IP address:


• On/Off

- Operating mode
- · Set point definition
- · Airflow direction and speed adjustment
- · Air/water outlet temperature display
- · Access to unit and centralised web server
- Real time temperature graphs
- · Active alarm/event notification



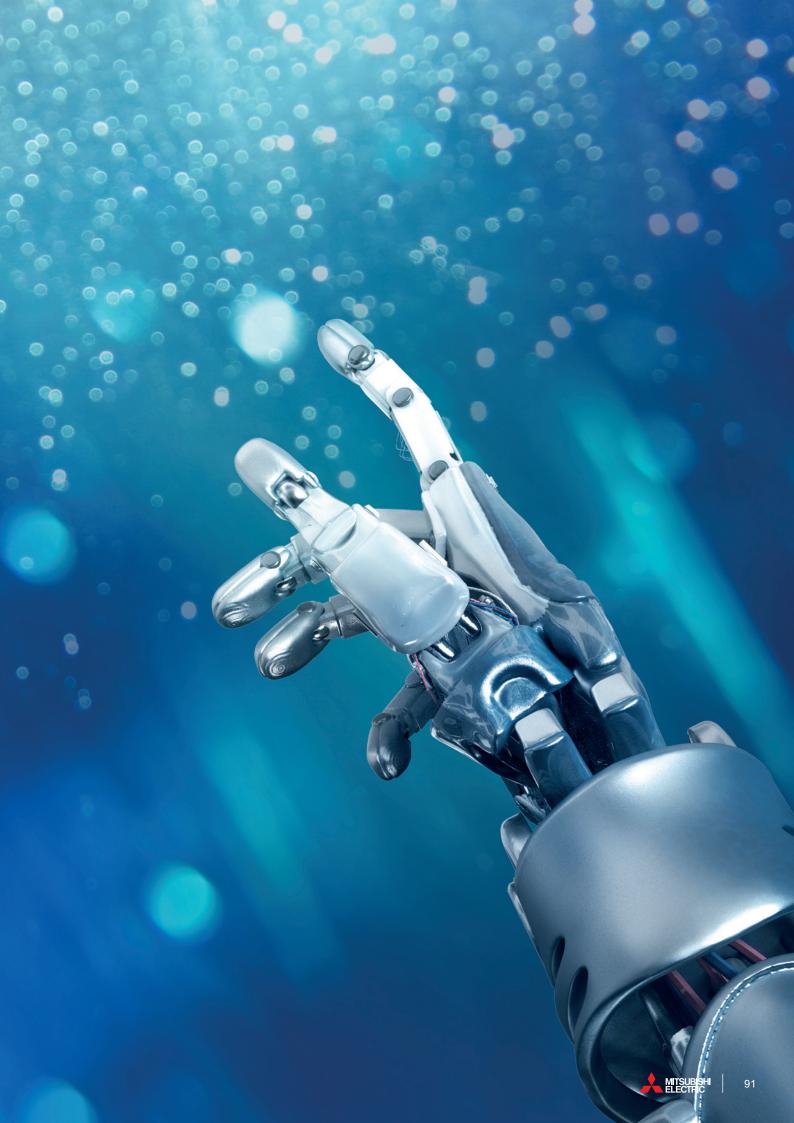

## CLOUD management and supervision systems

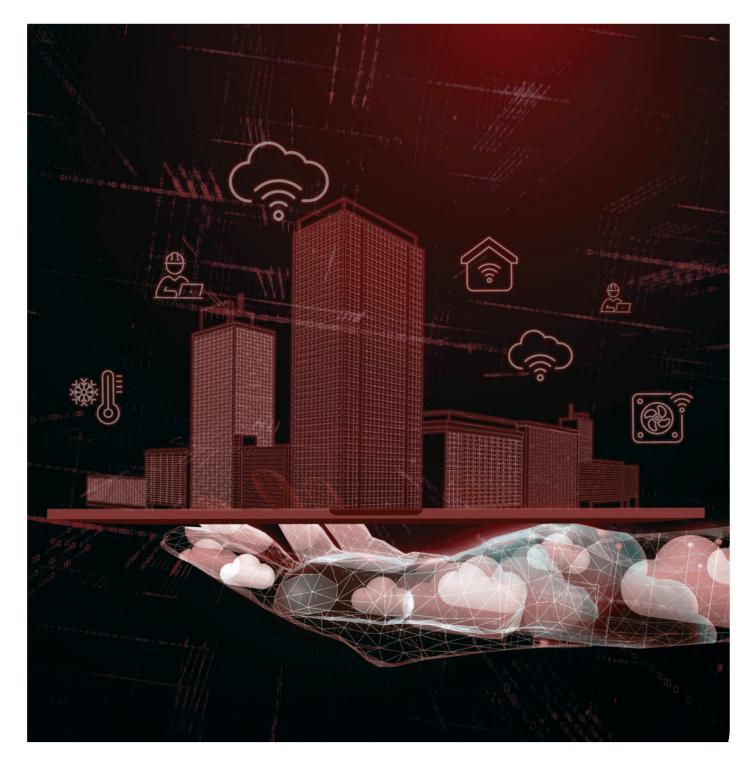






Cloud based remote

management and supervisor system.

- · Conceived originally for residential applications, and now extended to include VRF-HVRF CITY MULTI systems.
- A complete and intuitive solution, with all the main control and monitoring functions for units.
- · Does not require 3D WEB Server centralised controller (AE-200, EW-50).






- · Allows all essential operations for managing air conditioning units to be carried out remotely.
- · Includes a number of advanced system energy consumption monitoring functions, such as displaying hourly consumption, acquisition of numerous operating parameters and custom parameter graphs.
- Multi-installation management with geolocalised map display.
- Multi-user management for centralised installations.
- Calculate and view individual consumption for each user\*3.

|   |   |   | REITOTE MONITORING INTERFACE |
|---|---|---|------------------------------|
| Simplified individual/collective control and management*2 | • | • | •                            |
| Available for smartphones and tablets                     | • | • | •                            |
| Dedicated app   |   | • | •                            |
| Settable user restrictions                                | • | • | •                            |
| Available in 'outside building' mode (Cloud)              |   | • | •                            |
| Internet connection needed                                |   | • | •                            |
| Requires WEB Server centralised controller                | • |   | •                            |
| Advanced energy consumption monitoring                    |   |   | •                            |
| Monthly/custom graphs and reports                         |   |   | •                            |
| Multi-installation management                             |   |   | •                            |
| Consumption apportioning between individual tenants/users |   |   | •                            |

\*2 See product catalogues or contact head office for information on compatible products.

#### OUTSIDE BUILDING



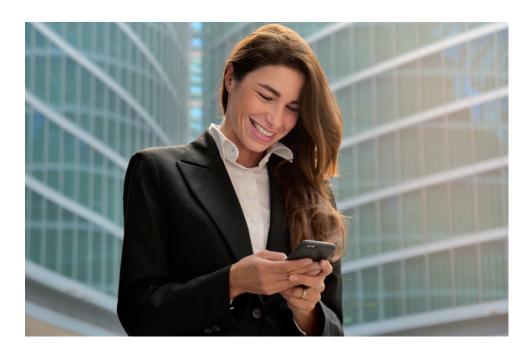










### **Product information**

The Wi-Fi interface supplies status information and controls commands from MELCloud via a connection to an indoor unit. Certain indoor units are not compatible with the Wi-Fi interface. Make sure the indoor units are compatible with the Wi-Fi interface before installing it. Note [for ATW air-water indoor unit only]

The ATW indoor unit software must be updated before using the Wi-Fi interface. Refer to the MELCloud site for information on the models that require updating and how to update the software.

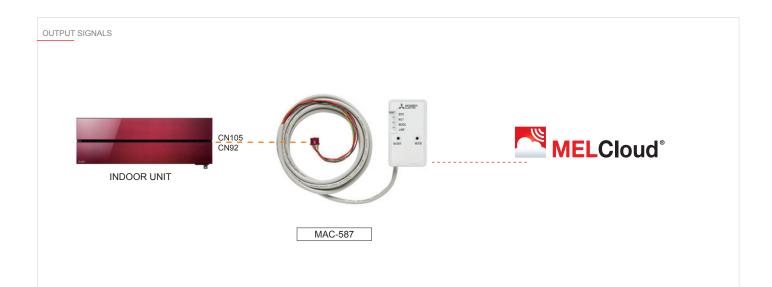





### **Main functions**


MELCloud offers the following functions:

- On/Off
- Mode (Cool/Ventilation)
- Ventilation speed
- Timer
- Programmable weekly timer
- Control 2 Zones
- DHW forcing
- Report
- Vane angle adjustment
- Ambient air temperature reading and setting
- Weather information for the place of installation
- (Completeness of functions depends on the equipped product model.) For more information see the product documentation.

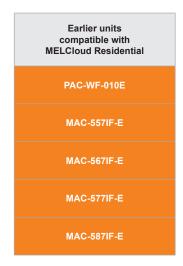

| N° | Item              | Description                        |
|----|-------------------|------------------------------------|
| 1  | MODE switch       | Selects mode                       |
| 2  | RESET switch      | Resets the system and ALL settings |
| 3  | ERR LED (orange)  | Shows network error status.        |
| 4  | NET LED (green)   | Shows network status.              |
| 5  | MODE LED (orange) | Shows access point mode status.    |
| 6  | UNIT LED (green)  | Shows indoor unit status.          |

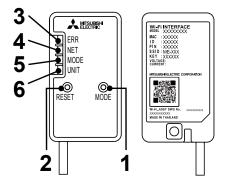

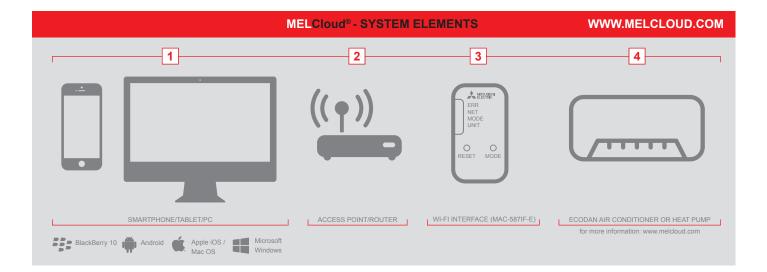

### CLOUD MANAGEMENT AND SUPERVISION SYSTEMS / MAC-587

| SERIES  | Compati  | ible units   |
|---------|--|--|
| SERIE M | MSZ-SF15/20VA<br>MSZ-SF15/20/25/35/42/50VE, MSZ-GF60/71VE, MSZ-WN25/35<br>MSZ-EF18/22/25/35/42/50VE(2)S/W/B<br>MSZ-FH25/35/50VE, MSZ-FD25/35/50VA, MSZ-FA25/35VA, MSZ-DM25/35<br>MSZ-GE22/25/35/50/60/71VA, MSZ-GC22/25/35VA, MSZ-CGE25/35/50VA<br>MSZ-GB50VA, MSZ-GA22/25/35/50/60/71VA, MSZ-CB25/35/50VA<br>MFZ-KA25/35/50VA, MLZ-KA25/35/50VA, MFZ-KJ25/35/50VE                   | MSZ-EF18/22/25/35/42/50VG<br>MSZ-AP15/20/25/35/42/50/60/71VG<br>MSZ-BT20/25/35VG<br>MSZ-HR25/35/42/50/60/71VG<br>MSZ-DW25/35/50VF<br>MFZ-KT25/35/50VF<br>MLZ-KP25/35/50VF  |
| SERIE P | PCA-M(RP)35/50/60/71/100/125/140<br>PEAD-M(RP)35/50/60/71/100/125/140JA(L)<br>PLA-RP35/50/60/71/100/125/140EA<br>PEA-RP200/250GA<br>PKA-M(RP)35/50/60/71/100/125/140BA/BA2<br>PLA-RP35/50/60/71/100/125/140EA<br>PLA-RP35/50/60/71/100/125/140EA/BA2<br>PLA-RP35/50/60/71/100/125/140EA/BA2<br>PLA-RP35/50/60/71/100/125/140EA/BA2<br>PSA-RP71/100/125/140KA, PSA-RP71/100/125/140GA | PLA-M35/50/60/71/100/125/140EA<br>PLA-ZM35/50/60/71/100/125/140EA<br>PLA-SM71/100/125/140EA<br>PEAD-SM71/100/125/140JAL<br>PLA-M35/50/60/71/100/125/140EA2<br>PEAD-M35/50/60/71/100/125/140JA(L)2<br>PEA-M200/250LA2<br>PKA-M35/50/60/71/100/125/140KA2<br>PCA-M71HA2<br>PSA-M71/100/125/140KA |
| SERIE S | SEZ-KD25/35/50/60/71VA(L)Q<br>SEZ-KA35/50/60/71VA<br>SLZ-KA25/35/50VA(L)Q<br>SLZ-KF25/35/50/60   | SEZ-M25/35/50/60/71DAL<br>SEZ-M25/35/50/60/71DA(L)2<br>SLZ-M25/35/50/60FA<br>SLZ-M15/25/35/50/60FA2<br>SFZ-M25/35/50/60/71VA   |

### MELCloud

MELCloud is an app that allows system management from a Smartphone, Tablet or PC, both on the local Wi-Fi network, and remotely. MELCloud is also compatible with the Amazon Alexa voice assistant.





You Tube Scan the QR Code and watch the Installation and Configuration Video Tutorial





Scan the QR Code and watch the Functions and Commands Video Tutorial







### **MELCLOUD CITY MULTI**

CLOUD-BASED REMOTE MANAGEMENT AND SUPERVISOR SYSTEM




#### **MELCloud**, the Wi-Fi MELCloud<sup>®</sup> controller for VRF-HVRF CITY MULTI **CITY MULTI systems**


MELCloud, the new Wi-Fi controller for your Mitsubishi Electric VRF system. By using the cloud for sending and receiving information and the dedicated Wi-Fi interface (MAC-587IF-E), you can now control your VRF system easily wherever you are from any PC, tablet or smartphone with an internet connection.

The MELCloud service has been designed to ensure complete compatibility with PCs, tablets and smartphones via dedicated apps or via a web browser

#### Registering the system

The system must be registered to activate the MELCloud service. Once the interface is connected to the indoor unit and paired with the router, the system itself may be registered. To activate Wi-Fi control capability, simply access the website www.melcloud.com, sign up as a



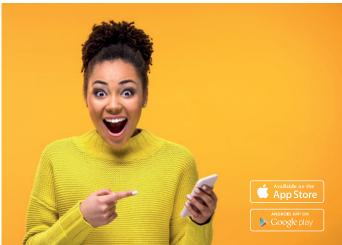

### **MELCLOUD IS FOR ALL**

MELCloud is easy to use.

Programming and using your air conditioning unit has never been easier. All that's needed is a simple tap or your own voice - thanks to the Google Home and Amazon Alexa voice assistants - to program and manage your HVAC system. Just download the specific apps. The apps are available for iOS and Android.

With the skills developed by Mitsubishi Electric it's super easy to let yourself be embraced by comfort.



Scan the QR Code and download the Amazon Alexa Skills



#### CLOUD MANAGEMENT AND SUPERVISION SYSTEMS / MELCLOUD CITY MULTI

### Control functions for CITY MULTI indoor units

Main functions:


- On / Off
- Mode (Auto/Heat./Cool./Ventilation)
- Fan speed
- Programmable weekly timer
- Louvre angle setting
- View and set ambient temperature
- Local weather information
- (availability of functions depends on the model of indoor unit connected to the controller)




### **Control functions for Lossnay ventilation systems** Main functions:

- On / Off
- Ventilation mode
- Fan speed
- Timer



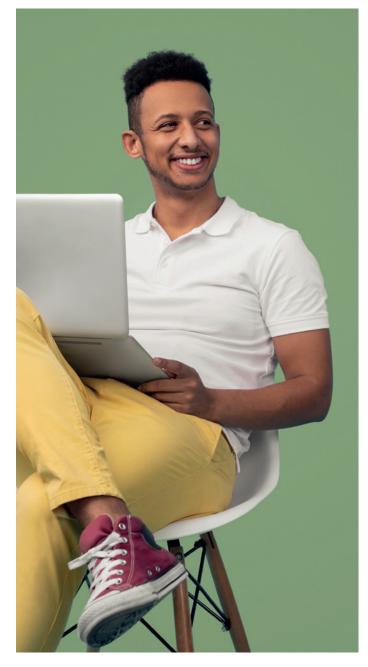

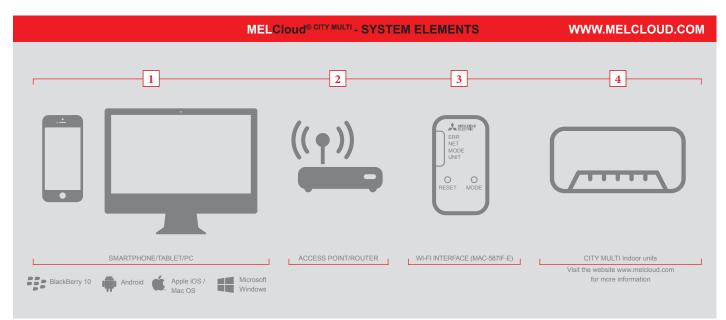



### **REMOTE MONITOR INTERFACE (RMI)**

CLOUD-BASED REMOTE MANAGEMENT AND SUPERVISOR SYSTEM FOR PROFESSIONAL USE




### Discover the Cloud system by Mitsubishi Electric for professional use

The RMI system lets you control your air conditioning, heating and domestic hot water production system remotely from a smartphone, tablet or PC. The system may be used to monitor the performance of your appliances, programme functions, check consumption and view operating states to optimise the efficiency of the system.

### Your perfect climate in an App!

The Mitsubishi Electric RMI app, available for iOS and Android devices, lets users control their air conditioning systems, view and manage hot and cold water production parameters and check for malfunctions.

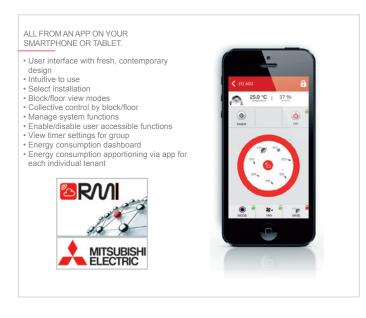


### Control all your installations simply

Set weekly programmes and special events, and view and analyse the operating parameters of your system remotely from a mobile device with a graphic interface that lets you change settings instantaneously when needed.



### System architecture

The WEB Server (AE200, EW-50) centralised controller performs the crucial role of acquiring and monitoring data via the M-Net data transmission bus linking all the components of the VRF-HVRF CITY MULTI, Mr. Slim or Residential system. A router (available as wired ADSL or 3G Mobile versions) creates a secure, protected communication channel with the RMI Server. The modular flexibility of the RMI Server makes it possible to store enormous volumes of data, which is acquired, processed and archived for access from portable devices. This infrastructural complexity, combined with superior processing, management and security capabilities, is encapsulated in an extremely user friendly concept, to help users optimise the energy usage of their systems.

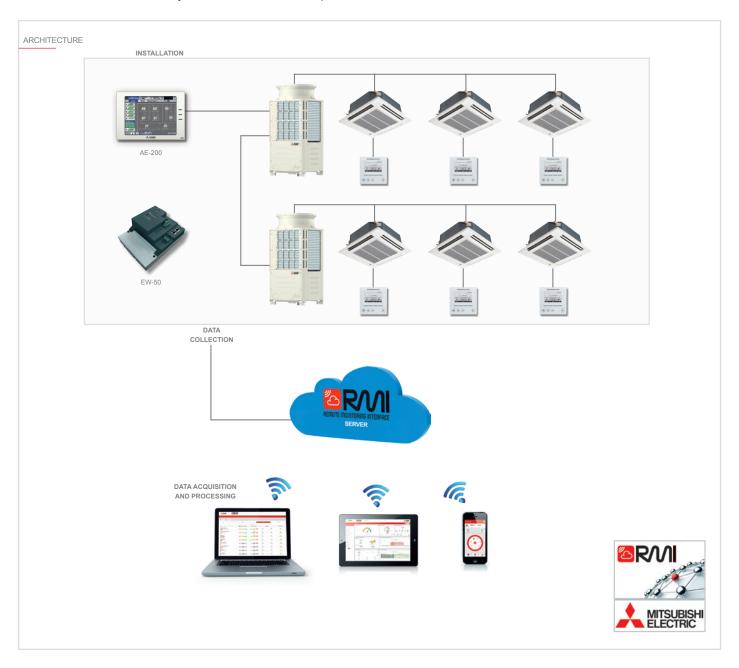

### **Management and monitoring**

RMI allows all essential operations for managing air conditioning units to be carried out remotely. Users can switch units on and off, change operating mode and set temperature, fan speed and air flow direction.

These functions are available for individual units or groups of units of the same type.



A number of system activity monitoring functions are also available, such as viewing hourly consumption.

The main screen contains an intuitive and immediately comprehensible summary of the activities of the installation.

The user may view graphs relative to consumption and external temperature, with the average for the period also displayed for comparison. A summarised report indicating current power demand and active faults can also be displayed.




The user may browse the functions of the menu to access specific functions for managing individual units or groups of units, and view and set operating parameters as required.

A timer function is available for programming weekly schedules for the

installation. The time also includes options for setting an annual schedule and for defining special days throughout the year.

A timer schedule may be created from scratch from RMI and then either transmitted in cascade or exported to the centralised controllers in the installation.

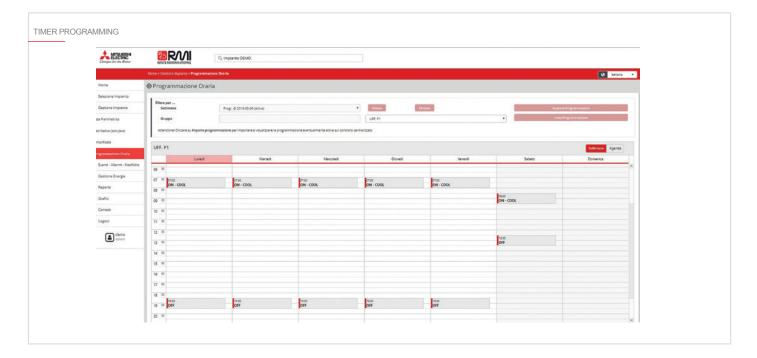

### **Events - Alarms - Notifications**


RMI displays any system malfunction states in real time. The user may use the specific menu to view details of the event remotely, with information on the units involved and the time of the event. A log maintains a permanent record of all past faults, and may be exported in Excel format for use by maintenance personnel.

| Note Alexal:         Control Second           Anyme              Out Charles Under Second               Second and general               Second  | → C                          | o   demo-it.mi.cloud/MAIN/Storico.asp             |                  |                                     |             |                        | Q 🕁 🖪 🛛                     | 0 :     |
|--|------------------------------|---|------------------|-------------------------------------|-------------|------------------------|-----------------------------|---------|
| Revise         Outcome from the second s | Changes for the Bester       |   | ), impianto DEMO |                                     |             |                        |                             |         |
| Section Ingents         Register #         Texas           Garcos Ingents         Bardos #         Converts         Exclose Magents  |                              | Home > Evensi - Allarmi - Notifiche > Archivio Ev | wel              |                                     |             |                        |                             | alato • |
| Import S  | Home                         | Archivio Eventi                                   |                  |                                     |             |                        |                             |         |
| Betrick Strate         Betrick   | Selecione Impianco           | Segnalato II                                      |                  |                                     | Codice      |                        | Roerca                      | _       |
| Markada         Convertision (MARAD)         MM         Convertision (MARAD)         Co  | Gestione Implanto            | Unità   | Codice           |                                     | Descrizione | Lettura Evento Attivea | Lettura Evento Ripristinato |         |
| Andream         Andream (Markadan)  | Eventi - Allarmi - Notifiche | Centralizzatore (400.98)                          | 9999             | Connessione intervotse con implanto |             | 21/09/2016 14:48:48    | 21/06/2016 15:50:37         | Q       |
| No. 1 Subtract         Constructional (Add MB)         HHM         Constructional (Add MB)         2566/074/21/21         2666/074/21/21         2666/074/21/21         2666/074/21/21         Q           No. 16. Arr. (Add MB)         Add N. Arr. (Add MB)         Add N. Arr. (Add MB)         100.0000000000000000000000000000000000  | enti Altivi                  | Centralizzatore (Add.99)                          | 9990             | Connectione intervota con implanto  |             | 21/09/2016 14:48:48    | 21/08/2016 15:50:37         | Q       |
| No. best Christen         Mod. NR. Mar (Jakel. N         Scole         Annale stateme drivegge         Sch Optim Scole         Sch   | rchivia Eventi               | Centralizzatorie (Add.99)                         | 9990             | Connessione interrotta con implanto |             | 28/09/2016 02:12:12    | 26/09/2016/02/\$1.49        | Q       |
| Genson fungs         Abds. KR. Far (past. 1q)         Scott Assess<br>Assess         Scott Assess<br>(mast. 1q)  | chivia Nasifiche             | Centralizzatore (Add 99)                          | 9999             | Connessione interrotta con impianto |             | 28/09/2016 02:12:12    | 25/09/2016 02:51:49         | Q       |
| Nacional         Nacional Statutional Statutio | chivo Event Conducione       | PROD, IMP, PAV (Add.14)                           | 2000             | Anomalia sistema dreneggio          |             | 13/10/2016 09:30:07    | 13/10/2016 10:25:07         | Q       |
| Mode And Activity         Mode And Activity         Mode And Activity         Mode And Activity         Mode Activity  | Gestione Energia             | PROD. IN/P. PAV (Add. 14)                         | 2000             | Anomalia sistema drenaggio          |             | 13/10/2016 10:30:07    | 13/10/2016 11:25:13         | Q       |
| Ummo         100 0004 (3200 Avenue signers dreage         100 0004 (3200 Avenue signers dreage         0           MOD, NR, Nacijael, Naj         2000 Avenue signers dreage         100 0004 (3200 Avenue signers dreage         0           MOD, NR, Nacijael, Naj         2000 Avenue signers dreage         100 0004 (3200 Avenue signers dreage         0   | Reports                      | PROD. IN/P. PAV (Add.14)                          | 2000             | Anomalia sistema drenaggio          |             | 13/10/2016 11:30:13    | 13/10/2016 12:25:08         | Q       |
| Constant   | Grafic                       | PROD. IMP. PAV (Add.14)                           | 2000             | Anomalia sistema dreneggio          |             | 18/10/2016 12:30:08    | 13/10/2016 13:25:09         | Q       |
| Logout   | Contacts                     | PROD. IN/P. PAV (Add.14)                          | 2000             | Anomala sistema drenaggio           |             | 13/10/2016 13:30:09    | 13/10/2016 14/25/10         | Q       |
| 12145678910  | Lotart                       | PROD. IN/P. PAV (Add.14)                          | 2000             | Anomala sistema dreneggio           |             | 13/10/2016 14(30:10    | 13/10/2016 15:25:10         | Q       |
|  |                              | 12345678910                                       |                  |                                     |             |                        |                             |         |

### Graphs

One of the great strengths of the RMI platform is its ability to create a wide variety of graphs for analysing the performance and functions of the air conditioning installation. A tool available on the website and in the app lets users view and compare system operating parameters in choice of different graph formats. In addition to standard and simple to read statistical graphs, users can also generate custom line and bar graphs of parameters selected manually from those offered by the platform for comparison. The user can also define the time period represented in a graph and filter by type of unit.

This tool is helpful for any user who needs to keep the performance of the installation under close scrutiny in order to reduce energy consumption, and is particularly useful as a support tool for system administrators, designers, installers and maintenance technicians, which lets them offer the end user a system with even better efficiency and performance.

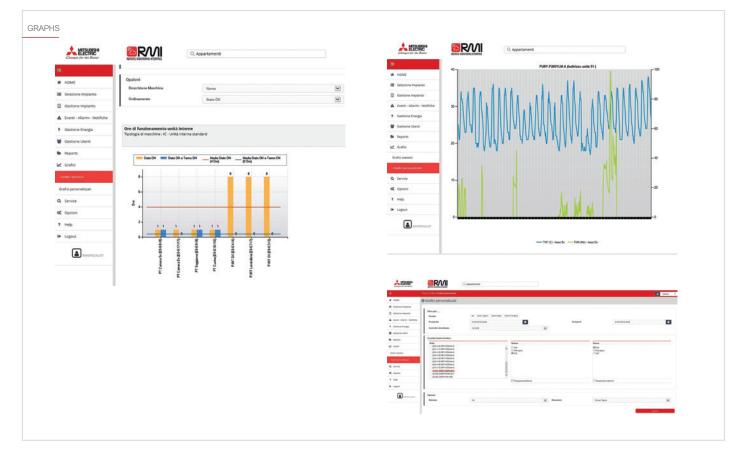

### **RMI Service packages**

RMI can also be applied to an existing VRF-HVRF CITY MULTI system, by interfacing through the installation's existing WEB Server centralised controllers. Contact head office to check compatibility between hardware and available functions.

Find out more about the contracts available at the website: http://rmiweb.mitsubishielectric.it/it/

Discover the capabilities of RMI with the demo available at: http://demo-it.rmi.cloud

RMI IS AVAILABLE IN THE FOLLOWING PACKAGES













### **RMI SMART**

### 

The RMI SMART service/package, offered under license with an annual subscription fee, lets users manage air conditioning, heating and domestic hot water production systems:

- from Android or iOS smartphone and tablet mobile devices;
- via internet and/or over a local network, from the Web Client reserved area.

Users may download an app for the aforementioned iOS and Android devices free of charge from the respective on-line app stores. The RMI SMART service/package is compatible with WEB Server G-50, GB-50, GB-50ADA, AG-150A and EB-50GU centralised controllers, and later controller models. This means that it can also be used with existing VR-F-HVRF CITY MULTI systems that have already been in operation for some time.

When interfacing with an installation with a G-50, GB-50, GB-50ADA or AG-150A WEB Server centralised controller, it will not be possible to upgrade to the RMI ADVANCED package unless the existing WEB Server controller is replaced with a WEB Server AE-200 or EW-50 centralised controller (or later version) with a valid RMI PIN Code license. **Available functions** 

The RMI SMART service/package enables the following functions:

- manage ONE installation at a time (SINGLE INSTALLATION);
- manage installations remotely and in real time from the app;
- manage and control installations via the CLASSIC WEB interface (from WEB Client reserved area only);
- · view active faults displayed in pop-up screens;
- · configure 2 weekly timers for automatic seasonal changes;
- configure 1 annual timer for automatic management of special events;
   dianay appleading weather information
- display geolocalised weather information.

### **RMI ADVANCED**



The RMI ADVANCED service/package, offered under license with an annual subscription fee, lets users manage air conditioning, heating and domestic hot water production systems:

- · from Android or iOS smartphone and tablet mobile devices;
- via internet and/or over a local network, from the Web Client reserved area.

Users may download an app for the aforementioned iOS and Android devices free of charge from the respective on-line app stores. Users may access the remote management system included in the RMI ADVANCED service/package by simply connecting a WEB Server AE-200, EW-50 or centralised controller (o later models) which must be activated previously with the RMI PIN Code license to enable the function, to the internet. **Available functions** 

The RMI ADVANCED service/package enables the following functions:

- manage multiple installations with the same access credentials (MULTI-INSTALLATION);
- view a geolocalised map display of the installations (from WEB Client reserved area only);
- manage installations remotely and in real time from the app;
- manage and control installations via the CLASSIC WEB interface (from WEB Client reserved area only);
- view active faults displayed in pop-up screens;
- · view fault log;
- configure 2 weekly timers for automatic seasonal changes;
- configure 1 annual timer for automatic management of special events;
   arrail and CMC foult patification management.
- email and SMS fault notification messaging;
- view and download monthly functional/administrative graphs;
- generate, view and download monthly functional/administrative reports.

### RMI MULTI-TENANT




The RMI MULTI-TENANT service/package, offered under license with an annual subscription fee, is an upgrade for the RMI-SMART and RMI-AD-VANCED services/packages which enables MULTI-USER management. Specifically, this upgrade enables Master functions, allowing a system administrator to create and manage a number of sub-users (individual tenants) limited only by the number of terminal units installed, and assign sections of the installation and specific functions selectively to each.

Once the RMI MULTI-TENANT service/package is activated, access is enabled to the Reserved Area of the WEB Client, and the function "User Management", which is disabled without the upgrade, is visible among the functions available for the selected RMI package (RMI SMART or RMI ADVANCED). The functionality for defining sub-users is not available in the app for smartphones and tablets.

#### Available functions

The RMI MULTI-TENANT service/package enables the following functions:

- · User Profile: set user name and password for exclusive access;
- User identification details;
- Contact details;
- Functions assigned to user, allocated with the following parameters and information:
- Default site definition;
- Date of expiry of access rights, which may not be after date of expiry for MASTER user;
- List of permitted functions for user profile, selectable by MASTER user;
- Portion of installation assigned to (and visible to) user.

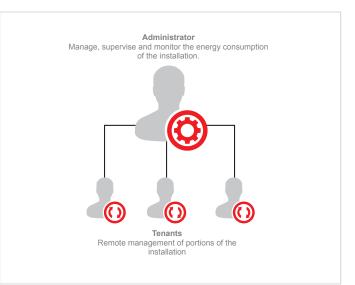

#### RMI PACKAGES AND FUNCTIONS


| PACKAGE                       | COMPATIBLE CENTRALISED CONTROLLERS |  |  |  |  |  |
|-------------------------------|------------------------------------|--|--|--|--|--|
|                               | G-50                               |  |  |  |  |  |
|                               | GB-50                              |  |  |  |  |  |
|                               | GB-50ADA                           |  |  |  |  |  |
|                               | AG-150                             |  |  |  |  |  |
| REMOTE MONITORING INTERFACE   | EB-50U                             |  |  |  |  |  |
|                               | EW-50                              |  |  |  |  |  |
|                               | AE-200                             |  |  |  |  |  |
|                               |                                    |  |  |  |  |  |
|                               | EW-50                              |  |  |  |  |  |
| REMOTE MONITORING INTERFACE   | AE-200                             |  |  |  |  |  |
|                               | G-50                               |  |  |  |  |  |
|                               | GB-50                              |  |  |  |  |  |
|                               | GB-50ADA                           |  |  |  |  |  |
|                               | AG-150                             |  |  |  |  |  |
| REITOTE ITCOITCRING INTERFACE | EB-50U                             |  |  |  |  |  |
|                               | EW-50                              |  |  |  |  |  |
|                               | AE-200                             |  |  |  |  |  |

### CLOUD MANAGEMENT AND SUPERVISION SYSTEMS / REMOTE MONITORING INTERFACE

### **RMI PLAN**



RMI PLAN lets users load, position and configure a number of zoomable installation layout map views. The icons representing indoor units are interactive. Clicking any of these icons lets the user modify the operating status and parameters of the unit (ON/OFF, setpoint, mode, fan speed etc.). This makes the entire architecture of the installation simpler and more immediate to understand and manage, and is especially useful for very large and complex systems.

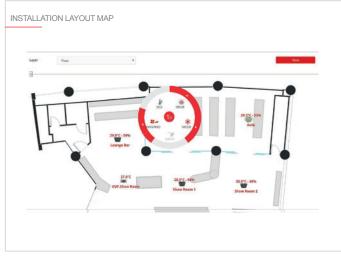

### **RMI CHARGE**



#### Energy consumption monitoring and apportioning system

Available as RMI CHARGE and RMI CHARGE+PLAN variants, the RMI cloud-based energy consumption monitoring and apportioning system is based on the proprietary Mitsubishi Electric calculation and apportioning method. All the elements in the installation may be grouped in "energy blocks" during the configuration of the supervisor system. The consumption monitoring and apportioning system continuously analyses the operating parameters of the elements in the installation, acquiring and processing data from the installation to produce energy consumption tables for the different users.

Each element in the system is associated with its electrical characteristics,

which are used to process the data acquired and calculate consumption. In addition to the consumption of the indoor units making up the individual energy blocks, the software also considers the influence of the indoor units on the energy consumption of the respective outdoor units. The consumption calculated for each user includes the consumption of the respective indoor units and the applicable proportion of the energy consumption of the relative outdoor unit, calculated in consideration of several factors such as operating temperatures (settings and measured values), LEV electronic valve aperture, electrical characteristics and unit operating times.

The RMI CHARGE cloud based consumption monitoring and apportioning system is compatible with:


- VRF / HVRF CITY MULTI systems;
- COMMERCIAL line products, if connected to WEB Server 3D centralised controllers via specific interfaces;
- RESIDENTIAL line products, if connected to WEB Server 3D centralised controllers via specific interfaces;

#### Characteristics

- · Cloud based solution. Reliable and always available;
- DOES NOT need space for additional installation components or a dedicated PC;
- Installable and configurable remotely;
- Ensures extraordinary flexibility for the simultaneous monitoring and management of multiple installations from a single point;
- Automatically generated ready-to-use monthly reports for each energy block;
- Filter functions (yesterday/last 7 days/last month/last quarter/user-defined) for viewing and exporting energy consumption apportioning data
- Energy consumption may be apportioned automatically or with manually entered data;
- Consumption calculated as percentage of total to three decimal places;
- Data storage: 1 year.

In order to use the RMI CHARGE cloud based consumption monitoring and apportioning system, the centralised controllers, meter acquisition interfaces and the RMI Box (router) in the installation must be connected to each other over a LAN Ethernet network, and the RMI Box must be connected to the internet, either by a cable or Wi-Fi link to the data line of the client, or via a mobile data network (with a 3G SIM card enabled for data).

RMI CHARGE can automatically acquire readings via PI (Pulse Input) interfaces from appropriately installed, connected and configured meters for electrical power (kWh), volume (m3) or thermal energy (kJ or thermal kWh) consumption.

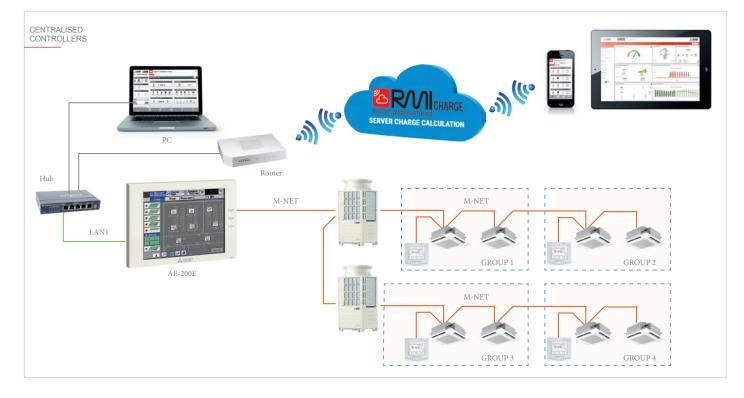

The RMI CHARGE cloud based system is capable of acquiring, calculating and apportioning consumption of the following energy utilities: • Air heating/cooling

- DHW (domestic hot water) production
- Water heating/cooling

In the case of DHW production and water heating/cooling, the RMI system may also be interfaced with and monitor the production of third party generators (e.g. Ecodan, heat pumps, chillers etc.).

RMI CHARGE automatically generates read-to-use monthly reports. Energy consumption data may be viewed and exported in three modes, with the percentage energy consumption of each energy block relative to total energy consumption available in all three modes:

• Electrical consumption (total and for each energy block) in kWh (for all utilities monitorable with RMI CHARGE);

 Domestic hot water consumption (total and for each energy block) in cubic metres;

• Water consumption for cooling/heating (total and for each energy block), in thermal energy units (kJ or thermal KWh).

Filter functions (yesterday/last 7 days/last month/last quarter/user-defined) for viewing and exporting energy consumption apportioning data.

## Energy consumption apportioning in kWh

This consumption apportioning method indicates the consumption of each user in kWh.

Energy consumption apportioning in kWh is available for the outdoor units of the installation and, where all indoor units share the same power line, also for indoor units.

If electric power consumption is not acquired automatically from electric power meters connected to the system, the electric power consumption values for the outdoor units must be entered manually by the user in the RMI Cloud system to permit consumption apportioning.

If electric power meters are connected to the system via PI interfaces, the electric power consumption values for the outdoor units will be acquired automatically by the RMI Cloud system on a daily basis and used to calculate consumption apportioning.

### Apportioning of domestic hot water (DHS) consumption and/or consumption of water for heating/cooling

To permit apportioning, a meter must be installed for each individual user billable for separate energy utility usage.

If consumption is not acquired automatically from water volume meters and/or thermal energy meters connected to the system, the water and thermal energy consumption values for the outdoor units must be entered manually by the user in the RMI Cloud system to permit consumption apportioning.


If water volume meters and/or thermal energy meters are connected to the system via PI interfaces, the water and thermal energy consumption values for the outdoor units will be acquired automatically by the RMI Cloud system on a daily basis and used to calculate consumption apportioning.

| Changes for the Batter   |   | 40   |  |  |  |  |  |  |  |
|--|---|--|--|--|--|--|--|--|--|
| Changes for the Better   | Antoni upundens antakast  |  |  |  |  |  |  |  |  |
|  | Home > Gestione Energia > Ripartilelone Consum!   |  |  |  |  |  |  |  | Italiano.  |
| # Home   | Ripartizione Consumi  |  |  |  |  |  |  |  |  |
| IE Selecione Implanto  | 1   |  |  |  |  |  |  |  |  |
| Gestione Implanto  | Fibro per   |  |  |  |  |  |  |  |  |
| A Eventi - Atarmi - Notifiche  | Periodo   | leri Utimi7giomi UtimoMese UtimoTrimeze  |  |  |  |  |  |  |  |
|  | Periodo Da  | 01/05/2018   |  |  | Periodo Al   |  | 31/05/2018   |  | •  |
| Gestione Energia   | 1   |  |  |  |  |  |  |  |  |
| Monitoraggio Energetico  | 🕴 Elemnicità 🛋 Acqua Calda Sanizaria 🏻 🏭  | liscald./Raffredd. ad Acqua  |  |  |  |  |  |  |  |
| Classifica Energetica  | 🕴 Elettricità 📑 Acqua Calda Senizaria 🏻 🏢 I   | oscald.ricativedd. ad Acqua  |  |  |  |  |  |  |  |
|  |   |  |  |  |  |  |  |  |  |
| Contatori  |   |  |  |  |  |  |  | fapor  | te E-cel   |
| Солтакон   |   | Totale   |  | RISC-RAFFR, ARI  | A  | RISC-RAFFR. ACQ  | (UA  | Esper-   |  |
| Contactori<br>Riparticione Concumi   | Biocce  | kWb  |  | KWh  |  | kith   |  | PRODUZIONE A   | 6<br>5   |
| Солтакон   | Аррло 34  | kWh<br>425.82  | 18.1   | kWh<br>1,99  | %<br>5.8   | 600h   |  | PRODUZIONE A<br>kmh<br>623.83  | 45<br>%<br>21,04   |
| Contactori<br>Riparticione Concumi   | App.10 BA<br>App.10 BB  | kans<br>625.82<br>649.82   | 15.1   | kWh<br>1,99<br>1,24  | %<br>1,49<br>0,92  | K2005<br>0<br>821.86   | %<br>0<br>47,95  | 9900420046 A<br>kith<br>623.68<br>147.03   | 65<br>%<br>21.04<br>436  |
| Contactori<br>Reportatione Contourni<br>Reports Contourni  | Аррло ВА<br>Аррло 18<br>Аррло 16  | 525.02<br>648.02<br>292.75   | 18,1<br>15,62<br>7,09  | 1.99<br>1.24<br>1.5  | %<br>1,49<br>0,82<br>1,19  | 60% 0<br>801.58<br>0   | %<br>0<br>47.85<br>0   | PRODUZIONE A<br>kath<br>623.83<br>1.47.03<br>282.16  | 45<br>%<br>21,04<br>4.96<br>9.85   |
| Contactori<br>Repurtatione Consumi<br>Reports Consumi<br>Impostazioni  | Арр. то ВА<br>Арр. то 38<br>Арр. то 24<br>Арр. то 24  | 50%<br>625.82<br>648.82<br>299.75<br>671.23  | 18.1<br>18.68<br>7,09<br>16,19   | KWh 1.99<br>1.24<br>1.6<br>2.48  | % 1.49<br>0.92<br>1.19<br>1.85   | 8286<br>0<br>501,54<br>0<br>0  | 76<br>0<br>47,95<br>0<br>0   | PRODUZIONE A<br>5300<br>623.83<br>1.47.03<br>292.16<br>668.75  | 45 %<br>%<br>21,04<br>436<br>9,85<br>22,64   |
| Contanti<br>Reputtione Conturni<br>Reports Conturni<br>Impostationi<br>B Reports<br>Id Grafiel                                 | Apose 3A<br>Apose 3B<br>Apose 3C<br>Apose 3A<br>Apose 4C  | 4058-0<br>405.42<br>299.76<br>47.33<br>1.24  | 18.1<br>15.60<br>7.09<br>16.19<br>0.03   | KWN 1,99<br>1,24<br>1,5<br>2,48<br>1,24  | 84.1<br>84.1<br>85.7<br>85.7<br>86.1<br>25.0   | 608% 0<br>801.86<br>0<br>0   | %<br>4758<br>0<br>0<br>0   | PRODUZIONE A<br>kme<br>423.83<br>147.03<br>292.16<br>662.75<br>0   | 45 %<br>%<br>21,64<br>23,64<br>23,64<br>22,54<br>22,54<br>0<br>0   |
| Contactor<br>Reports Consumi<br>Impostacijoni<br>Bio Reports<br>Lizi Grafici<br>Qirafici<br>Qirafici                           | Арр. то ВА<br>Арр. то 38<br>Арр. то 24<br>Арр. то 24  | 50%<br>625.82<br>648.82<br>299.75<br>671.23  | 18.1<br>18.68<br>7,09<br>16,19   | KWh 1.99<br>1.24<br>1.6<br>2.48  | % 1.49<br>0.92<br>1.19<br>1.85   | 8286<br>0<br>501,54<br>0<br>0  | 76<br>0<br>47,95<br>0<br>0   | PRODUZIONE A<br>5300<br>623.83<br>1.47.03<br>292.16<br>668.75  | 45 %<br>%<br>21,04<br>436<br>9,85<br>22,64   |
| Contanti<br>Reputtione Conturni<br>Reports Conturni<br>Impostationi<br>B Reports<br>Id Grafiel                                 | App to BA<br>App to BB<br>App to BB<br>App to BA<br>App to BA<br>App to BA  | 100%   | 18.1<br>18.68<br>7.09<br>18.78<br>0.03<br>8.09   | xwb 1.99<br>1.24<br>1.5<br>2.48<br>1.24<br>0.97  | % 1,49<br>0,85<br>1,19<br>1,85<br>0,92<br>0,78   | 6005 0<br>801,86<br>0<br>0<br>0<br>0   | %<br>0<br>2738<br>0<br>0<br>0<br>0   | PRODUZIONE A<br>kmh<br>422.88<br>427.08<br>292.16<br>668.75<br>0<br>125.84   | es %<br>%<br>21,04<br>4,36<br>9,35<br>22,56<br>0<br>0<br>4,28  |
| Consent<br>Reactions Consum<br>Respons Consum<br>Impastation<br>Respons<br>Consent<br>Consent<br>Respons<br>Consent<br>Respons | 400 to 3A<br>400 to 3B<br>400 to 3C<br>400 to 4A<br>400 to 4A<br>400 to 5A  | 4000 4002 4002 4002 4002 4002 4002 4002  | 18.1<br>18.68<br>7.09<br>18.78<br>0.03<br>8.09<br>8.14   | 199<br>124<br>124<br>248<br>124<br>124<br>0.87<br>124  | % 1.49<br>0.82<br>1.19<br>1.88<br>0.92<br>0.73<br>0.92   | 5005<br>0<br>501.55<br>0<br>0<br>0<br>0<br>0   | **<br>2555<br>0<br>0<br>0<br>0<br>0  | PRODUZIONE A<br>SNM<br>423.83<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147.03<br>147 | 45 %<br>%<br>21,04<br>23,04<br>9,05<br>22,54<br>0<br>0<br>4,28<br>7,14   |
| Contactor<br>Reports Consumi<br>Impostacijoni<br>Bio Reports<br>Lizi Grafici<br>Qirafici<br>Qirafici                           | Apping DA<br>Apping DB<br>Apping DB<br>Apping DA<br>Apping DA<br>Apping DA<br>Apping DB<br>Apping DB  | 1000 0000 0000 0000 0000 0000 0000 000   | 18.1<br>18.68<br>7.09<br>16.19<br>0.00<br>8.09<br>5.14<br>9.42   | 139<br>132<br>152<br>154<br>154<br>154<br>154<br>154<br>154  | %<br>5.48<br>0.92<br>1.98<br>0.92<br>0.70<br>0.70<br>0.92  | 5005<br>0<br>501,54<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0  | %<br>47.55<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0   | PRODUDDEA A<br>2000<br>422.89<br>320.16<br>468.78<br>0<br>126.94<br>126.94<br>126.94<br>140.96   | 45 %<br>%<br>21,04<br>4,06<br>9,05<br>22,56<br>0<br>0<br>4,28<br>7,14<br>4,74<br>4,74  |
| Consent<br>Reactions Consum<br>Respons Consum<br>Impastation<br>Respons<br>Consent<br>Consent<br>Respons<br>Consent<br>Respons | 440 to 24<br>440 to 25<br>440 to 25<br>440 to 34<br>440 to 34<br>440 to 34<br>440 to 34<br>440 to 34<br>440 to 34<br>440 to 34              | NWA<br>4642<br>2007<br>4733<br>4733<br>4733<br>4250<br>2005<br>2005<br>2005<br>2005<br>2005<br>2005<br>2005  | 18,1<br>18,60<br>7,09<br>6,03<br>8,00<br>8,14<br>8,14<br>8,14<br>8,14<br>8,15<br>8,14<br>8,15<br>8,15<br>8,15<br>8,15<br>8,15<br>8,15<br>8,15<br>8,15  | 4000<br>1.99<br>1.24<br>1.24<br>2.48<br>1.24<br>1.24<br>1.24<br>1.24<br>0.97<br>1.24<br>0.97<br>1.24<br>0.99   | % 1.49<br>0.85<br>1.19<br>0.82<br>0.82<br>0.92<br>0.82<br>0.92<br>0.92   | 888h<br>0<br>850,88<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0  | %<br>4788<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0      | PRODUDINE A<br>NRN.<br>433.03<br>232.16<br>463.75<br>0<br>126.84<br>211.81<br>433.8<br>174.8   | 45 %<br>21,04<br>23,04<br>23,04<br>23,04<br>23,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,04<br>24,040,04<br>24,040,040,040,040,040,040,040,040,040,0   |
| Consent<br>Reactions Consum<br>Respons Consum<br>Impastation<br>Respons<br>Consent<br>Consent<br>Respons<br>Consent<br>Respons | App to 3A<br>App to 3B<br>App to 3B<br>App to 4A<br>App to 4A<br>App to 4A<br>App to 1B<br>App to 1B<br>App to 1B<br>App to 1B<br>App to 1B | NWN 43.52<br>44.52<br>44.52<br>44.52<br>44.53<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45.55<br>45   | 18.1<br>16.60<br>7.00<br>16.19<br>0.00<br>8.14<br>8.00<br>8.14<br>8.00<br>12.44<br>16.70<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>10.74<br>1 | KKK 1,99<br>1,99<br>1,24<br>1,54<br>1,54<br>1,54<br>1,54<br>1,54<br>1,54<br>1,54<br>1,5  | % 1.49<br>1.49<br>1.59<br>1.58<br>0.52<br>0.52<br>0.52<br>0.52<br>0.52<br>0.52<br>0.52<br>0.52   | 800%<br>0<br>801.84<br>0<br>0<br>0<br>0<br>10<br>10<br>10<br>10<br>10<br>10<br>10  | %<br>0<br>4788<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0 |  | 45<br>%<br>21,04<br>23,64<br>23,64<br>23,64<br>23,64<br>23,64<br>23,64<br>23,64<br>23,64<br>23,64<br>23,64<br>23,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,6424,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,6424,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,6424,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,6424,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,64<br>24,6424,64<br>24,6424,54<br>24,54<br>24,54<br>24,54<br>24,54<br>24,54<br>24,54<br>24,54<br>24,5424,54<br>24,54<br>24,54<br>24,54<br>24,54<br>24,54<br>24,54<br>24,54<br>24,54<br>24,54<br>24,54<br>24,54<br>24,54<br>24,5424,54<br>24,54<br>24,54<br>24,54<br>24,54<br>24,54<br>24,54<br>24,5424,54<br>24,54<br>24,54<br>24,54<br>24,5424,54<br>24,54<br>24,54<br>24,54<br>24,54<br>24,5424,54<br>24,54<br>24,54<br>24,5424,54<br>24,54<br>24,5424,54<br>24,54<br>24,54<br>24,5424,54<br>24,54<br>24,54<br>24,5424,54<br>24,54<br>24,5424,54<br>24,54<br>24,5424,54<br>24,54<br>24,54<br>24,5424,54<br>24,54<br>24,54<br>24,5424,54<br>24,54<br>24,5424,54<br>24,54<br>24,5424,54<br>24,54<br>24,5424,54<br>24,54<br>24,5424,54<br>24,54<br>2 |
| Consent<br>Reactions Consum<br>Respons Consum<br>Impastation<br>Respons<br>Consent<br>Consent<br>Respons<br>Consent<br>Respons | Apping BA<br>Apping BA<br>Apping BA<br>Apping BA<br>Apping BA<br>Apping BA<br>Apping BA<br>Apping BA<br>Apping BA<br>Apping BA              | MM           453.02           464.02           280.75           473.3 </td <td>18.1<br/>18.88<br/>7.09<br/>16.19<br/>0.00<br/>8.00<br/>8.44<br/>8.42<br/>8.42<br/>8.42<br/>18.74</td> <td>KKK<br/>1,99<br/>1,20<br/>2,40<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1,24<br/>1</td> <td>% 1.49<br/>0.82<br/>1.19<br/>0.82<br/>0.72<br/>0.72<br/>0.72<br/>0.92<br/>0.72<br/>0.92<br/>0.72<br/>0.92<br/>0.74<br/>0.92<br/>0.74<br/>0.92<br/>0.74<br/>0.92<br/>0.74<br/>0.92<br/>0.93<br/>0.93<br/>0.93<br/>0.93<br/>0.93<br/>0.93<br/>0.95<br/>0.95<br/>0.95<br/>0.95<br/>0.95<br/>0.95<br/>0.95<br/>0.95</td> <td>8886<br/>0<br/>801.68<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>1<br/>0<br/>0<br/>1<br/>0<br/>0<br/>1<br/>0<br/>0<br/>1<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0</td> <td>% 47.55 47.55 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0</td> <td>PRODUDINE A<br/>NRB: 423.83<br/>427.83<br/>427.84<br/>428.85<br/>648.75<br/>0<br/>128.84<br/>237.81<br/>423.84<br/>179.44<br/>423.85<br/>179.44<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>426.75<br/>4</td> <td>45<br/>%<br/>2004<br/>2004<br/>2006<br/>2006<br/>2006<br/>2006<br/>2006<br/>2006</td> | 18.1<br>18.88<br>7.09<br>16.19<br>0.00<br>8.00<br>8.44<br>8.42<br>8.42<br>8.42<br>18.74  | KKK<br>1,99<br>1,20<br>2,40<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1,24<br>1 | % 1.49<br>0.82<br>1.19<br>0.82<br>0.72<br>0.72<br>0.72<br>0.92<br>0.72<br>0.92<br>0.72<br>0.92<br>0.74<br>0.92<br>0.74<br>0.92<br>0.74<br>0.92<br>0.74<br>0.92<br>0.93<br>0.93<br>0.93<br>0.93<br>0.93<br>0.93<br>0.95<br>0.95<br>0.95<br>0.95<br>0.95<br>0.95<br>0.95<br>0.95 | 8886<br>0<br>801.68<br>0<br>0<br>0<br>0<br>0<br>0<br>1<br>0<br>0<br>1<br>0<br>0<br>1<br>0<br>0<br>1<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0 | % 47.55 47.55 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0  | PRODUDINE A<br>NRB: 423.83<br>427.83<br>427.84<br>428.85<br>648.75<br>0<br>128.84<br>237.81<br>423.84<br>179.44<br>423.85<br>179.44<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>426.75<br>4 | 45<br>%<br>2004<br>2004<br>2006<br>2006<br>2006<br>2006<br>2006<br>2006  |





# External signal integration

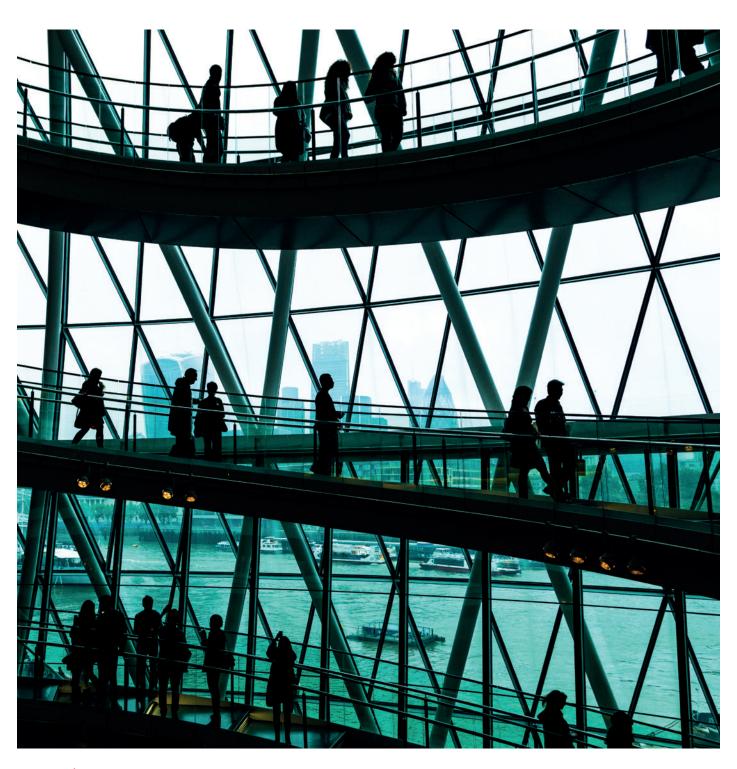



### **Smart Terminal Blocks**

Smart indoor unit terminal blocks are a unique feature of Mitsubishi Electric VRF systems. These intelligent terminal blocks make it possible to use the air conditioning system and the M-NET communication network, via the indoor units, as a vehicle for collecting, transferring and monitoring field signals from generic appliances such as lighting, power, access management and intelligent alarm systems, pumps etc.

Using the smart terminal blocks of the indoor units together with the existing infrastructure drastically reduces the number of cables needed to collect these field signals and the labour required to route the cables to the centralised units. A number of different input and output functions of varying complexity are possible, depending on whether the terminal block is associated with an indoor or an outdoor unit.


Using the smart terminal blocks of the indoor units together with the existing infrastructure drastically reduces the number of cables needed to collect these field signals and the labour required to route the cables to the centralised units. A number of different input and output functions of varying complexity are possible, depending on whether the terminal block is associated with an indoor or an outdoor unit.

### Adapters for external signals

Mitsubishi Electric also offers a number of different external signal connection adapter kits for both outdoor and indoor units, to cater for the specific needs of the installation.

The details of the adapter kits specified below are described in the following pages:

- PAC-SC36NA: External signal adapter for outdoor units
- PAC-SC37SA-E: External signal adapter for outdoor units
- PAC-SE55RA: External signal adapter for indoor units
- PAC-SA88HA: External signal adapter for indoor units

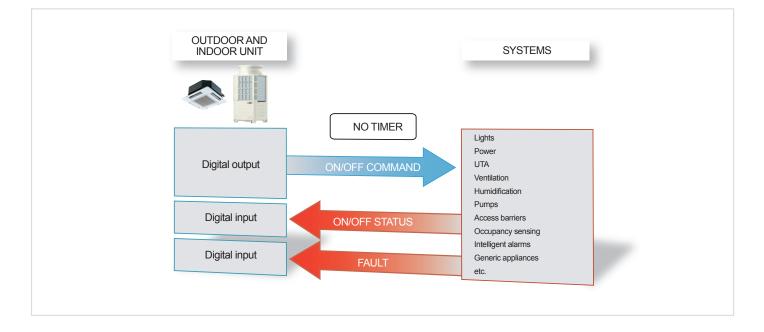



## PAC-SC36NA EXTERNAL SIGNAL ADAPTER FOR OUTDOOR UNITS




### PAC-SC36NA on connector CN3D

The PAC-SC36NA external signal adapter kit is interfaced with the outdoor unit via a connector on the control board of the unit itself. In this case, the three wire contact is used to enable/disable quiet mode and to control the capacity of the outdoor unit (requires pre-configuration of specific dip switches on outdoor unit).

### PAC-SC36NA on connector CN3N


In this case, the PAC-SC36NA adapter is used to implement the Auto-Changeover function, which forces the outdoor unit to switch between heating/cooling modes (for heat pump systems only).

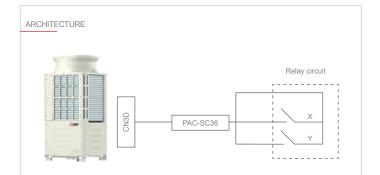

| QUIET MODE                  |        |  |  |  |
|-----------------------------|--------|--|--|--|
| CONTACT X (Y always closed) |        |  |  |  |
| Open Closed                 |        |  |  |  |
| Not active                  | Active |  |  |  |

| 4 STEP CAPACITY CONTROL |                         | CONTACT X |        |
|-------------------------|-------------------------|-----------|--------|
| 4 STEF CAFAC            | 4 STEP CAPACITY CONTROL |           | CLOSED |
| Contact Y               | Open                    | 100%      | 75%    |
|                         | Closed                  | 0%        | 50%    |


| 2 STEP CAPACITY CONTROL     |    |  |  |  |
|-----------------------------|----|--|--|--|
| CONTACT Y (X always closed) |    |  |  |  |
| Open Closed                 |    |  |  |  |
| 100%                        | 0% |  |  |  |

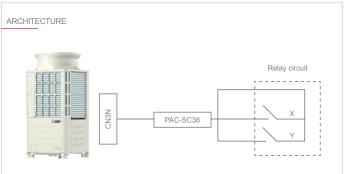

The control functions are implemented as follows:

|             |        | CONTACT X |         |  |
|-------------|--------|-----------|---------|--|
| UNIT STATUS |        | OPEN      | CLOSED  |  |
| Contact V   | Open   | Normal    | Normal  |  |
| Contact Y   | Closed | Cooling   | Heating |  |



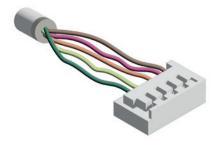


### PAC-SC37SA-E on connector CN51

The PACSC37SA-E external signal adapter kit is used to produce an output signal identifying the operating mode of the outdoor unit. This may, for example, be used to activate an alarm system when the unit signals that it is in error mode. The contact is connected to the outdoor unit via connector CN51 on the controller board.

The control functions are implemented as follows:

| STATUS        |       | CONTACT X  |        |  |
|---------------|-------|------------|--------|--|
| STATUS OUTPUT |       | OPEN       | CLOSED |  |
| Contact Y     | Open  | Thermo-OFF | Error  |  |
|               | Close | Thermo-ON  | Error  |  |

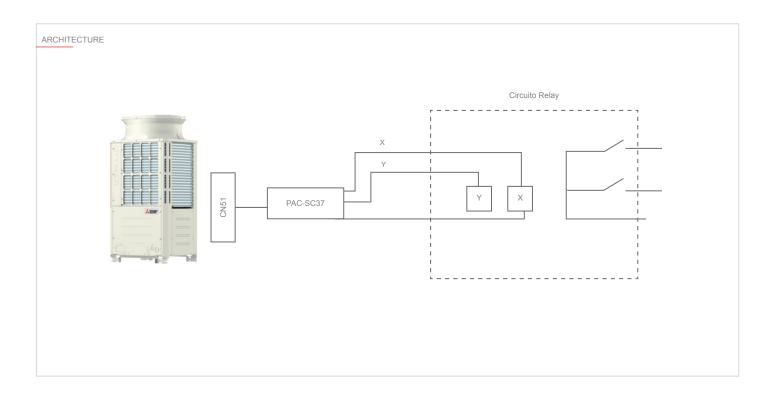



## PAC-SE55RA EXTERNAL SIGNAL ADAPTER FOR INDOOR UNITS




### **Product information**

Simplified connections with supplied cables

- Connection to indoor units
- Functions:
- On/Off via external signal
- Enable/disable the remote controller associated with the individual unit.

### PAC-SE55RA ON CONNECTOR CN32

The PAC-SE55RA external signal adapter kit is used force an indoor unit into run or stop state, with the possibility of disabling the relative remote controller. The contact is connected to the indoor unit via connector CN32 on the controller board.

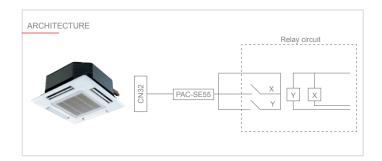


The control functions are implemented as follows:

- 1. Contact Y
- a. Contact OPEN:
- Remote control: indoor unit controlled from remote controller b. Contact CLOSED:
- Switch control: indoor unit controlled from contact X

#### 2. Contact X

- a. Contact OPEN:
- Stop: indoor unit in STOP state and cannot be activated from remote controlb. Contact CLOSED:
- Run: indoor unit in RUN state and cannot be deactivated from remote control

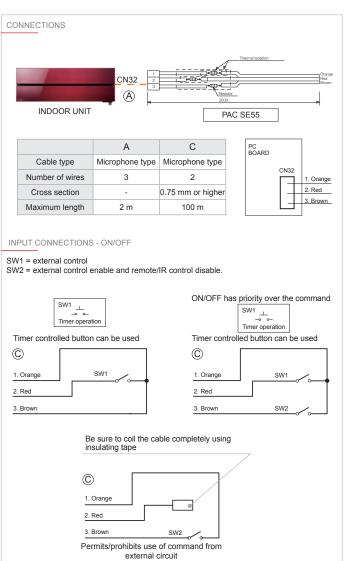




## PAC-SA88HA EXTERNAL SIGNAL ADAPTER FOR INDOOR UNITS



### **Product information**

PAC-SA88HA is a simple 5-wire adapter for connection to Mr Slim or City Multi inside units or to city multi outdoor units with two operating options.

- 1) 12VDC outputs functioning and compatible with Mr Slim City Multi indoor units and City Multi outdoor units.
- 2) 12VDC operating mode, fan / heating / cooling outputs, compatible with City Multi indoor units.

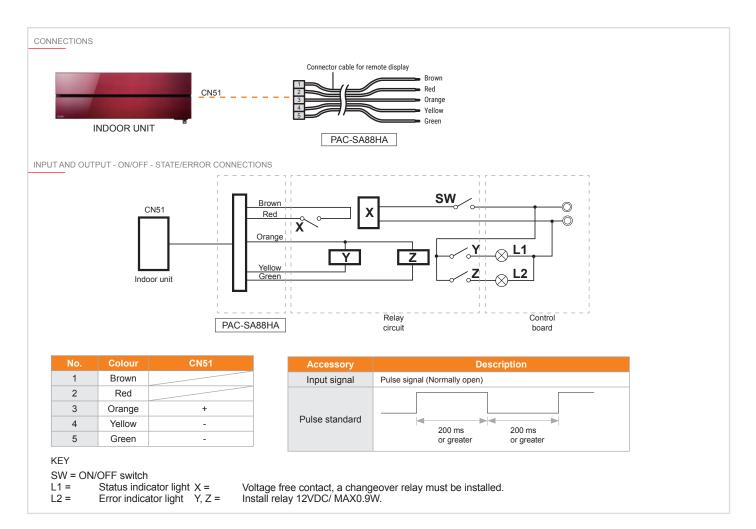






### PAC-SA88HA on connector CN51

The terminal board is used to deliver a run/stop input signal to the indoor unit and produce an output signal identifying the operating status of the unit.

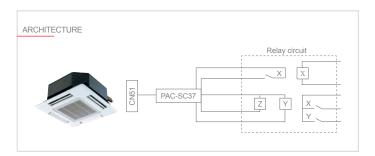

The control functions are implemented as follows: Input

### 1. Contact Y

a. Impulse ON/OFF (200ms or longer): switch to RUN if in STOP state, switch to STOP if in RUN state

#### Output


- 2. Contact Y
- a. Contact OPEN: Stop: indoor unit in STOP state
- b. Contact CLOSED: Run: indoor unit in RUN state
- 3. Contact Z
- a. Contact OPEN: Normal: indoor unit NOT in error state
- b. Contact CLOSED: Error: indoor unit in ERROR state

### PAC-SA88HA on connector CN52

The terminal board is used to deliver a Thermo-OFF input signal to the indoor unit, or to produce a number of different output signals identifying the operating mode of the unit.

The control functions are implemented as follows:

#### Output

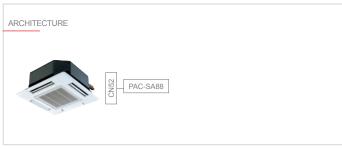

#### 1. Contact X

- a. Contact CLOSED and SW1-5 in OFF state: RUN output for indoor unit ventilation mode
- b. Contact CLOSED and SW1-5 in ON state: Thermo-ON output when indoor unit is in thermal power demand state

#### 2. Contact Y

a. Contact CLOSED: Cool/Dry output when indoor unit is in cooling or dehumidifying mode

#### 3. Contact Z

a. Contact CLOSED: Heating output when indoor unit is in heating mode

| ARCHITECTURE |          |  |
|--------------|----------|--|
|              | PAC-SA88 |  |

#### 1. Contact X

- a. Contact CLOSED: indoor unit is forced to Thermo-OFF mode
- b. Contact OPEN: indoor unit is free to operate as required

|                           | INTERFACE SOLUTION  |   | PAC-SA88HA   |   |
|---------------------------|---|---|--|---|
| Description               |   | Adapter for<br>operation and faults<br>(5-wire adapter) | Adapter for<br>heating and cooling<br>(5-wire adapter) | Adapter for<br>operation and faults<br>(5-wire adapter) |
| Connect to                |   | Indoor unit   | Indoor unit  | Indoor unit   |
| Max number of units       |   | 1   | 1  | 1   |
| Compatibility             |   | Mr Slim and City Multi                                  | City Multi   | City Multi  |
| Dimensions (mm) (V        | VxDxH)  | -   | -  | -   |
| Remote controller         | On/Off<br>Mode<br>Set point<br>Fan speed<br>Airflow direction<br>Compatibility<br>Filter signal   | x<br>x<br>x<br>x<br>x<br>x<br>x                         | x<br>x<br>x<br>x<br>x<br>x<br>x                        | x<br>x<br>x<br>x<br>x<br>x<br>x                         |
| Monitor                   | On/Off<br>Mode<br>Set point<br>Fan speed<br>Airflow direction<br>Compatibility<br>Filter signal<br>Error codes<br>Ambient temperature<br>Fire alarm | ✓<br>×<br>×<br>×<br>×<br>×<br>×<br>×<br>×               | x<br>v<br>x<br>x<br>x<br>x<br>v<br>x<br>x<br>x         | ✓<br>×<br>×<br>×<br>×<br>×<br>×<br>×                    |
| On/Off but centrally      | controlled  | ×   | ×  | ×   |
| On/Off but not centra     |   | ×   | ×  | ×   |
| Operation and fault of    | •   | 12VCD   | ×  | 12VCD   |
| Heating and cooling       |   | ×   | 12VCD  | ×   |
| Night mode and dem        |   | ×   | ×  | ×   |
| Connect Mr Slim to N      | M-NET   | -   | -  | -   |
| Connect Mr Slim to A<br>B | A32M<br>BAC-A/50  | -   | -  |   |

Notes: VFC: Voltage-free contact. ✓=Yes, ×= No, - = Not applicable








## **PAC-SH29TC**

EXTERNAL SIGNAL ADAPTER FOR PKA SERIES INDOOR UNITS



### **Product information**

Accessory used as a relay to wire in a PKA model inside unit and connect an MA type remote controller for control of the group using the internal connection of the unit (CN22)

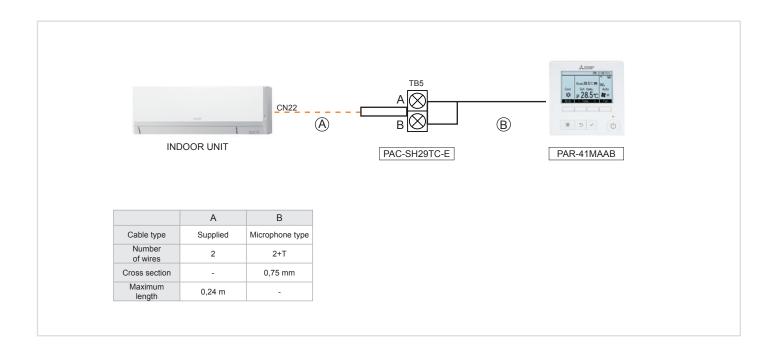






### **Product information**


To change unit on/off state via an external input (e.g. window contact) for MSZ-FH or MSZ-HJ type indoor units.

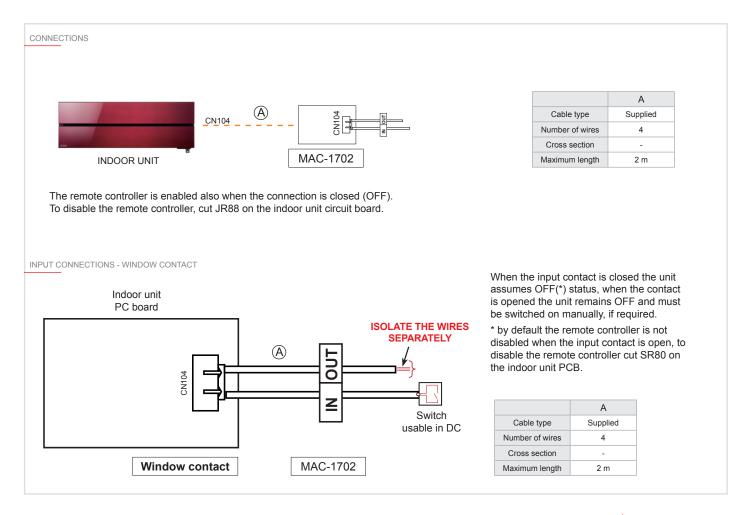





OUTPUT CONNECTIONS - HEATING BACKUP

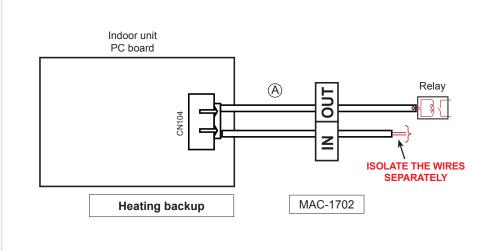

When the input contact is closed the unit assumes OFF(\*) status, when the contact opens the unit remains OFF and must be switched on manually, if required.

\* by default the remote controller is not disabled when the input contact is open, to disable the remote controller cut SR80 on the indoor unit PCB.

|                 | А        |
|-----------------|----------|
| Cable type      | Supplied |
| Number of wires | 4        |
| Cross section   | -        |
| Maximum length  | 2 m      |

#### COMPATIBILITY LIST

MSZ-LN18/25/35/50/60VG2W/V/B/R MSZ-EF18/22/25/35/42/50VGW/B/S MSZ-AP15/20/25/35/42/50VG MSZ-AP15/20/25/35/42/50VG MSZ-AP60/71VG MSZ-BT20/25/35/50VG MSZ-HR25/35/42/50/60/71VF MSZ-DW25/35/50VF MSZ-DM25/35VA MSZ-HJ25/35/50/60/71VA MFZ-KT25/35/50/60VG MFZ-KW25/35/50/F MLZ-KP25/35/50VF MFZ-KY20VG









### Connection

Accessory that allows connection of an indoor unit with a wired MA remote controller, such as  $\mathsf{PAR-41MAAB}$ 

### **Group connection**

- The MA remote controller can simultaneously control up to 16 sets of room AC units.
- Up to two MA remote controllers can be connected in a group. Notwithstanding, only one remote controller can be connected when using PAR-CT0 MA.

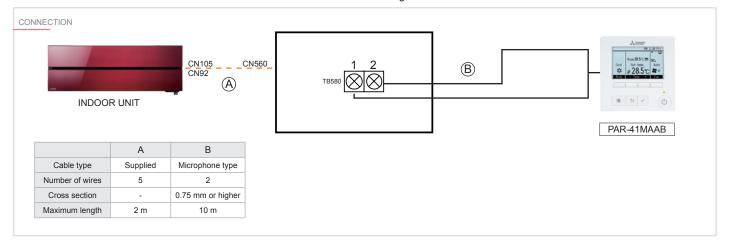

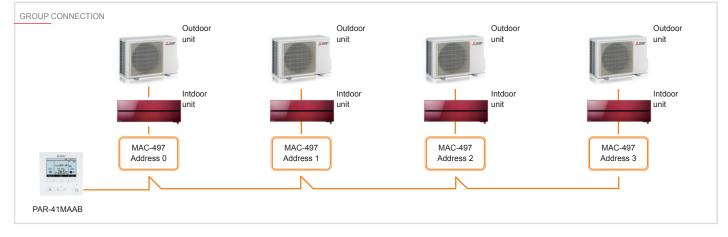





## **MAC-334IF**

#### M-NET INTERFACE FOR RESIDENTIAL / COMMERCIAL LINE INDOOR UNITS




### **Connection with M-NET system**


The AC unit can be managed centrally or individually from the system controller using M-NET communication control.


MAC-334IF-E system control interface specifications for M series indoor units

- Allows M Series indoor units to communicate with the CITY MULTI® controls network via M-Net
- Ambient temperature setting of 0.5°C (1°F) for the M-NET connection. • Setting of Dual Auto mode configured via dip switches
- External heater on/off based on the set temperature and ambient temperature
- Provides two outputs to allow the following control scenarios:
- Note: an external 12VDC power supply is required
- Unit status and error
- Unit and auxiliary heat source status
- Unit status and humidifier control
- Auxiliary heat source and humidifier control

- Features an input to allow remote control ON / OFF of the indoor unit (3-wire adapter included)
- Allows M Series indoor units to connect to the CN105 interface via CN505 on the MAC-334IF-E when using other functions of the MAC-334IF
- Note: an external 12VDC power supply is required
- Note: the CN105 interfaces that can be used are the wireless interface (1 or 2) or  $\ensuremath{\mathsf{MHK1}}$
- · Allows the M Series indoor units to connect to an MA remote controller
- Operating conditions: only indoors (ambient temperature from 0° C to 40° C [from 32° F to 104° F], without condensation)
- Indoor unit connection cable: dedicated CN105 cable I included
- To configure a MAC-334IF-E in the same group as a MAC-333IF-E, dip switch 502-7 must be set to ON

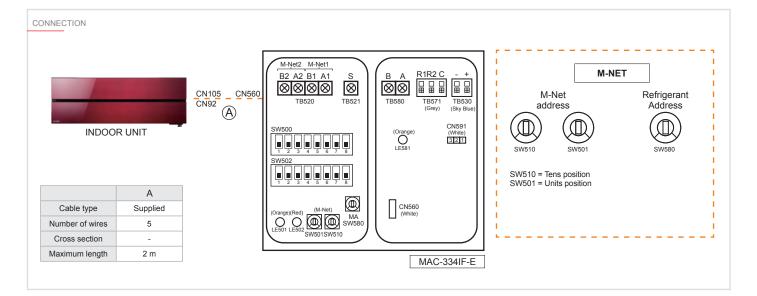

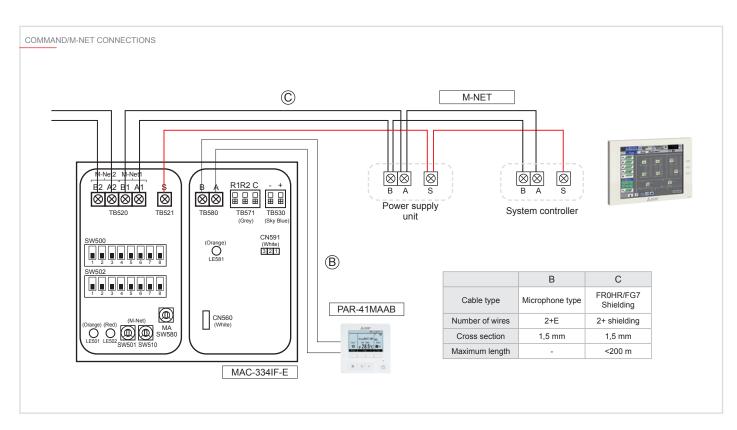


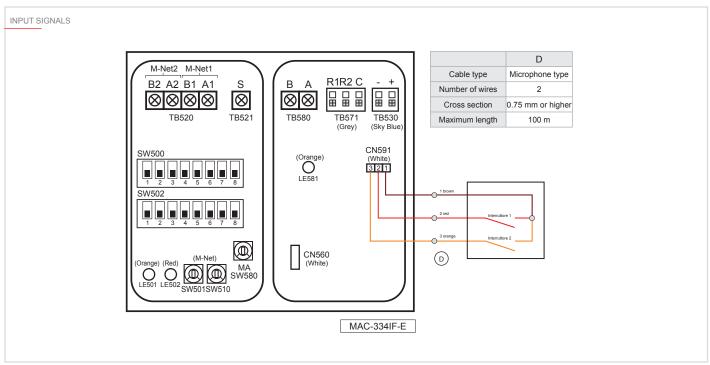



### Interface for M/NET systems

Interface MAC-333IF-E allows inverter indoor units (except MSZ-HC) to be connected to the M/NET system and thus to a central controller. Also, using the GB50 allows the operating parameters to he checked and set up via the WEB. The unit can also be started from an external contact (such as a window contact or home automation controller) with status or error output signals.

## EXTERNAL SIGNAL INTEGRATION / MAC-334IF

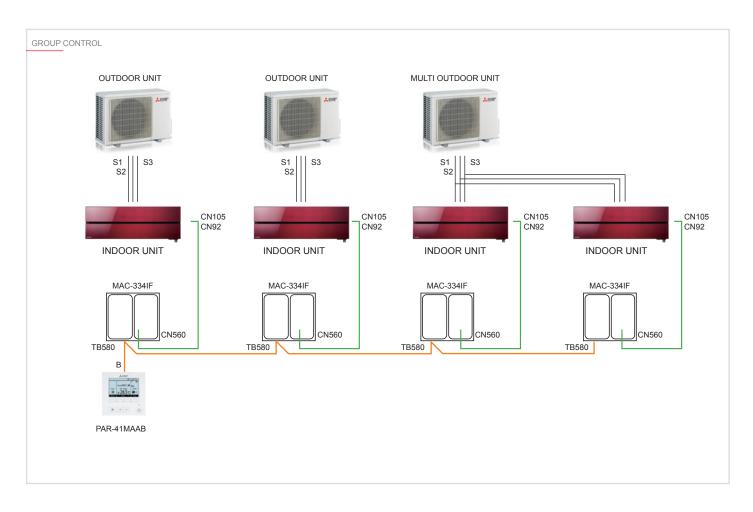

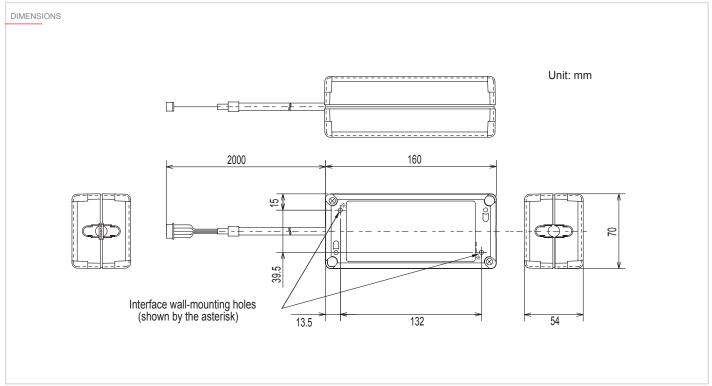

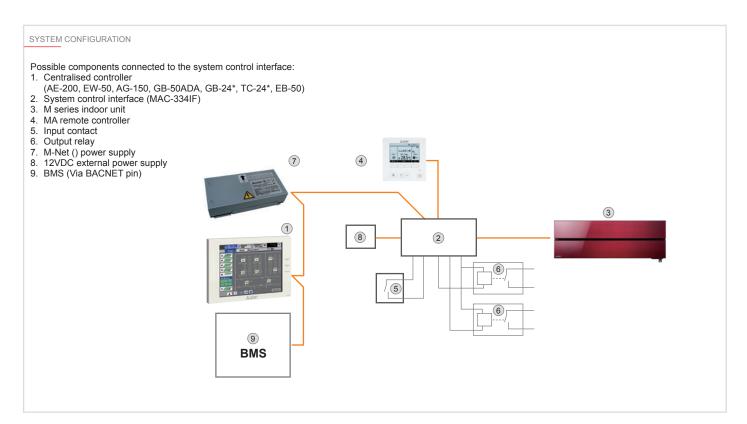


|                       | ADVANCED INTERFACE  | MAC-334IF                                   |  |
|-----------------------|---|---|--|
| Description           |   | M-NET adapter<br>and converter for M Series |  |
| Connect to            |   | Indoor unit                                 |  |
| Max number of units   |   | 1   |  |
| Compatibility         |   | M and Mr Slim Series                        |  |
| Power supply          |   | -   |  |
| Dimensions (mm) (V    | VxDxH)  | 160 x 55 x 70                               |  |
| Remote controller     | On/Off<br>Mode<br>Set point<br>Fan speed<br>Airflow direction<br>Operation permitted/prohibited<br>Filter signal                                      | ✓<br>×<br>×<br>×<br>×<br>×<br>×             |  |
| Monitor               | On/Off<br>Mode<br>Set point<br>Fan speed<br>Airflow direction<br>Operation permitted/prohibited<br>Filter signal<br>Fault code<br>Ambient temperature | ✓<br>×<br>×<br>×<br>×<br>×<br>×<br>×<br>×   |  |
| On/Off but centrally  | controlled  | ×   |  |
| On/Off but not centra | ally controlled   | ✓   |  |
| Operating output      |   | ×   |  |
| Fault output          |   | ×   |  |
| Energy saving         |   | ×   |  |
| Heating/cooling/ther  | mo output   | ×   |  |
| Pulse weight          |   | ×   |  |

Notes: VFC: Voltage-free contact. ✓=Yes, ×= No, - = Not applicable

### Scenario 1 - Badge contact

Room maintenance management from centralised controller

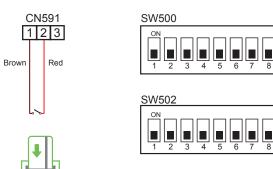

#### NOTES:


this means the indoor unit will remain manageable from the centralised controller so the pre check-in can be carried out from the reception

#### Behaviour of contact CN591 (1-2):

- pin 1-2 closed: indoor unit always ON allowing manual operations on the remote controller
- pin 1-2 open: indoor unit always OFF allowing manual operations on the remote controller
- pin 1-3 open: contact dedicated to prohibitions management -> unit manageable from the remote controller

### Scenario 2 - Badge Contact or Window Contact

Indoor unit always OFF when contact is closed

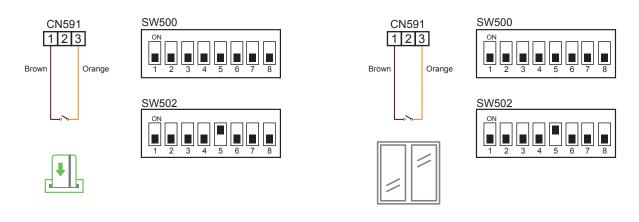


#### Behaviour of contact CN591 (1-3):

- pin 1-3 closed: indoor unit always OFF, not permitting manual operations on the remote controller
- pin 1-3 open: indoor unit OFF, the unit must be restarted
- by means of a command (indoor unit will be enabled for operation)
- pin 1-2 open

### Scenario 3 - Badge contact

Indoor unit always ON when contact is closed

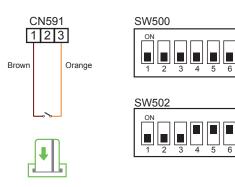

#### Behaviour of contact CN591 (1-2):

- pin 1-3 closed: indoor unit always ON (set point same as set point programmed in the previous status)
- pin 1-3 open: indoor unit always OFF; not permitting manual operations on the remote controller
- pin 1-2 open

### Scenario 4 - Badge Contact and Switching


ON/OFF management and switching from external contact



#### Behaviour of contact CN591 (1-2) ON/OFF:

- pin 1-2 closed: indoor unit ON (non-priority contact), the unit be manageable from the remote controller
- pin 1-2 open: indoor unit OFF, the unit will continue to be manageable from a remote controller

- Behaviour of contact CN591 (1-3) Switching: pin 1-3 closed: indoor unit on Heat: unit manageable from the remote controller (including switching)
- pin 1-3 open: indoor unit on Cool: unit remains manageable from the remote controller (including switching)

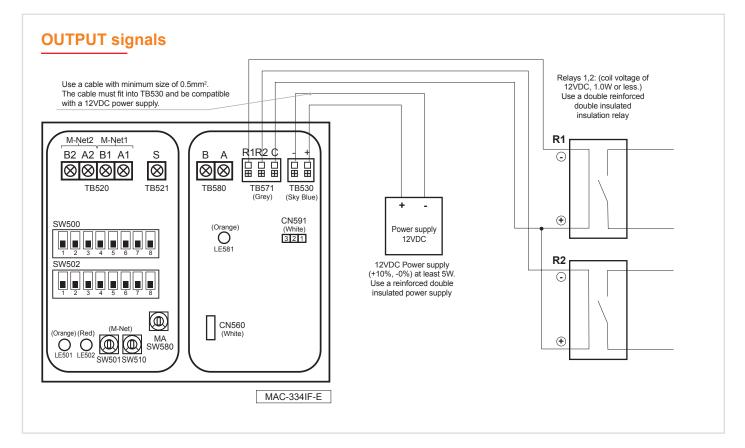

| No. | Function   | N. SW  | Method of use   |
|-----|--|--|---|
| 1   | ON/OFF,<br>Error output/ Normal<br>operation               | SW500<br>SW502   | <ul> <li>SW502-1: OFF</li> <li>Relay 1 is energised when the room AC unit is switched on and is de-energised when the AC unit is switched off.</li> <li>Relay 2 is energised when the room AC unit is in error status and de-energised when the AC unit is running normally.</li> <li>SW502-1: ON</li> <li>The behaviour of relays 1 and 2 is inverted with respect to the above description.</li> </ul>  |
| 2   | ON/OFF,<br>output<br>heater<br>control                     | $SW500$ $ \begin{array}{c}             1 \\             1 \\         $ | <ul> <li>SW502-1: OFF</li> <li>Relay 1 is energised when the room AC unit is on and de-energised when the AC unit is off.</li> <li>When the AC unit is operating in heating mode (automatic heating) and the room temperature drops by 2.5 °C with respect to the set point temperature, relay 2 (heater) is energised. When the AC unit is operating in a mode other than heating (automatic heating) or is set to OFF, or when the room temperature is above the set point temperature, relay 2 (heater) is de-energised.</li> <li>SW502-1: ON</li> <li>The behaviour of relays 1 and 2 is inverted with respect to the above description.</li> </ul>   |
| 3   | ON/OFF,<br>output<br>humidifier<br>control                 | SW500  | <ul> <li>SW502-1: OFF</li> <li>Relay 1 is energised when the room AC unit is on and de-energised when the AC unit is off.</li> <li>When the AC unit is operating in heating mode (automatic heating), relay 2 (humidifier) is activated. When the AC unit is operating in a mode other than heating (automatic heating) or is set to OFF, relay 2 (humidifier) is de-activated.</li> <li>SW502-1: ON</li> <li>The behaviour of relays 1 and 2 is inverted with respect to the above description.</li> </ul>   |
| 4   | Heater control,<br>humidifier<br>control<br>output         | $SW500$ $ \begin{array}{c ccccccccccccccccccccccccccccccccccc$         | <ul> <li>SW502-1: OFF</li> <li>When the AC unit is operating in heating mode (automatic heating) and the room temperature drops by 2.5 °C with respect to the set point temperature, relay 1 (heater) is energised. When the AC unit is operating in a mode other than heating (automatic heating) or is set to OFF, or when the room temperature is above the set point temperature, relay 1 (heater) is de-energised.</li> <li>When the AC unit is operating in heating mode (automatic heating), relay 2 (humidifier) is activated. When the AC unit is operating in a mode other than heating (automatic heating) or is set to OFF, relay 2 (humidifier) is de-activated.</li> <li>SW502-1: ON</li> <li>The behaviour of relays 1 and 2 is inverted with respect to the above description.</li> </ul>   |
| 5   | ON/OFF,<br>heater control<br>output<br>(single operation)* |  | Relay 1 is energised when ON is set from the system controller, from the ME remote controller or from the MA remote controller, and is de-energised when OFF is set from any of these devices. When the room temperature is the same as or lower than the temperature set point in heating mode (automatic heating), relay 2 (heater) is energised. When a mode other than heating (automatic heating) or OFF is set from the system controller, the ME remote controller or from the MA remote controller, or when the room temperature rises to above the set point themperature is the same controller or from the MA remote controller, or when the room temperature rises to above the set point temperature is the cancel controller. This function is used to operate the heater instead of the AC unit in heating mode. The AC unit stops in heating mode. Do not use the remote controller applied to the AC unit. If used, operation may not be in accordance with the setting. The room temperature reading position is the place where the MA remote controller is located, so make sure it is connected to the interface unit. |

For additional management functions/information, refer to the MAC-334 interface technical manual

## PAC-YG60MCA

### M-NET INTERFACE FOR DIGITAL IMPULSE CONSUMPTION METERS



### **M-NET Interfaces**

M-Net interfaces were developed to permit the connection of a wide variety of input and output signals (i.e. for monitoring and control) to the MELANS management and supervision system. These interfaces are connected directly to the M-Net data transmission bus. The modular concept of these interfaces means that multiple interfaces can be connected to the same network. To connect interfaces, a 24V DC auxiliary power feed must be provided with an additional power supply unit (purchased separately). The following M-Net interfaces are available:

- PAC-YG60MCA: Digital meter interface (Pulse Input).
- PAC-YG63MCA: Analogue sensor interface (Analogue Input).
- PAC-YG66DCA: Digital sensor interface (DIDO).


### PAC-YG60MCA – Pulse Input

The PAC-YG60MCA M-Net interface is a device for acquiring the output signals from wall or electrical cabinet mounted digital impulse consumption meters. This interface makes it possible to monitor the consumption of the installation with any electric power (WHM), water, and gas consumption meters and calorimeters producing an impulse type output signal. Up to 4 digital meters may be connected to each individual interface.

In order to use the interface, a WEB Server 3D (TOUCH or BLIND) centralised controller must be included in the installation to monitor the status of the system and enable the following functions:

- · View real time consumption values
- View consumption graphs
- Export consumption billing data in CSV format for consumption apportioning (CHARGE).

| Technical specifications |                        |        |  |                              |                              |
|--------------------------|------------------------|--------|--|------------------------------|------------------------------|
| MODEL                    | DIMENSIONS (L X H X W) | WEIGHT | ELECTRIC POWER                                       | M-NET CONNECTION             | No. OF CONNECTIBLE<br>INPUTS |
| PAC-YG60MCA              | 200 x 120 X 45         | 0.6 kg | 24V DC, provided locally with auxiliary power supply | 1.5 mm <sup>2</sup> shielded | 4                            |

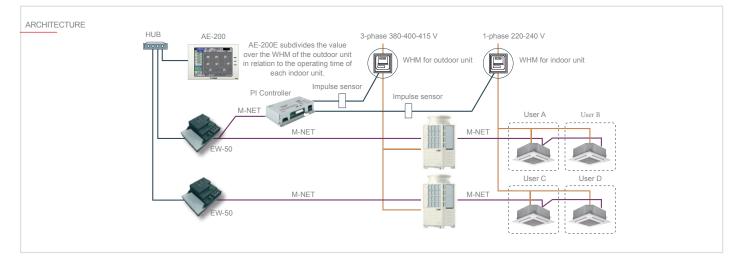





### PAC-YG63MCA M-NET INTERFACE FOR ANALOGUE SENSORS



### **M-NET Interfaces**

\_

M-Net interfaces were developed to permit the connection of a wide variety of input and output signals (i.e. for monitoring and control) to the MELANS management and supervision system. These interfaces are connected directly to the M-Net data transmission bus. The modular concept of these interfaces means that multiple interfaces can be connected to the same network. To connect interfaces, a 24V DC auxiliary power feed must be provided with an additional power supply unit (purchased separately). The following M-Net interfaces are available:

- PAC-YG60MCA: Digital meter interface (Pulse Input).
- PAC-YG63MCA: Analogue sensor interface (Analogue Input).
- PAC-YG66DCA: Digital sensor interface (DIDO).


### PAC-YG63MCA – Analogue Input

The PAC-YG60MCA M-Net interface is a device for acquiring the output signals from wall or electrical cabinet mounted analogue temperature or humidity sensors. This interface makes it possible to acquire measurements from active analogue temperature and humidity sensors. A WEB Server 3D (TOUCH or BLIND) centralised controller is required to use the interface.

The following functions are available via a web browser:

- View real time sensor readings
- · View graphs of sensor readings
- · Export data in CSV format
- · View alarm thresholds for e-mail notification function
- · Alarm output to relay (on board interface) for cut-off if alarm thresholds are exceeded
- · Interlock with air conditioner operation and with other input/output interfaces if alarm thresholds are exceeded
- · View units as icons on installation layout maps

| Technical specifications |                        |        |  |                              |                              |
|--------------------------|------------------------|--------|--|------------------------------|------------------------------|
| MODEL                    | DIMENSIONS (L X H X W) | WEIGHT | ELECTRIC POWER                                       | M-NET CONNECTION             | No. OF CONNECTIBLE<br>INPUTS |
| PAC-YG60MCA              | 200 x 120 X 45         | 0.6 kg | 24V DC, provided locally with auxiliary power supply | 1.5 mm <sup>2</sup> shielded | 2                            |

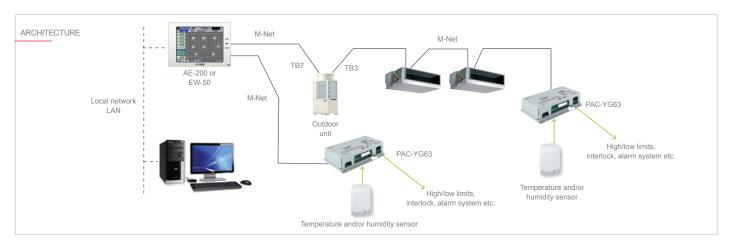

### PAC-YG66MCA M-NET INTERFACE FOR DIGITAL SENSORS



### **M-NET Interfaces**

M-Net interfaces were developed to permit the connection of a wide variety of input and output signals (i.e. for monitoring and control) to the MELANS management and supervision system. These interfaces are connected directly to the M-Net data transmission bus. The modular concept of these interfaces means that multiple interfaces can be connected to the same network. To connect interfaces, a 24V DC auxiliary power feed must be provided with an additional power supply unit (purchased separately). The following M-Net interfaces are available:

- PAC-YG60MCA: Digital meter interface (Pulse Input).
- PAC-YG63MCA: Analogue sensor interface (Analogue Input).
- PAC-YG66DCA: Digital sensor interface (DIDO).

### PAC-YG66MCA – DIDO

The PAC-YG60MCA M-Net interface is a device for acquiring signals from wall or electrical cabinet mounted digital input/output sensors. The interface is connected directly to the M-Net network (TB3-TB7), and occupies the same address as the indoor units (from 01-50) for each of the external devices connected (up to 6 external device).

- Each external device may have the following inputs and outputs:
- 1 ON/OFF command signal output
- 1 ON/OFF status input
- 1 malfunction status input

A WEB Server 3D (TOUCH or BLIND) centralised controller and, if required, a supervisor system, are needed to use the interface. The following functions are available:

- · View state of ON/OFF or malfunction status inputs
- Control ON/OFF output
- · Interlock with air conditioner functions


Interlock with other digital inputs/outputs (even relative to other interfaces)


· View units as icons on installation layout map

The interface also includes a relay and terminal boards integrated on the electronic board of the interface itself for connecting two external devices. Two additional PAC-YG10HA accessory modules must be installed to permit connection of the remaining four external devices to the interface. These accessory modules enable additional open collector output signals. The relative connector terminal boards and control relays, however, must be obtained and installed separately.

| Technical specifications |                        |        |   |                              |                              |
|--------------------------|------------------------|--------|---|------------------------------|------------------------------|
| MODEL                    | DIMENSIONS (L X H X W) | WEIGHT | ELECTRIC POWER  | M-NET CONNECTION             | No. OF CONNECTIBLE<br>INPUTS |
| PAC-YG66MCA              | 200 x 120 x 45         | 0.6 kg | 24V DC, provided locally with<br>auxiliary power supply | 1.5 mm <sup>2</sup> shielded | 2+4                          |




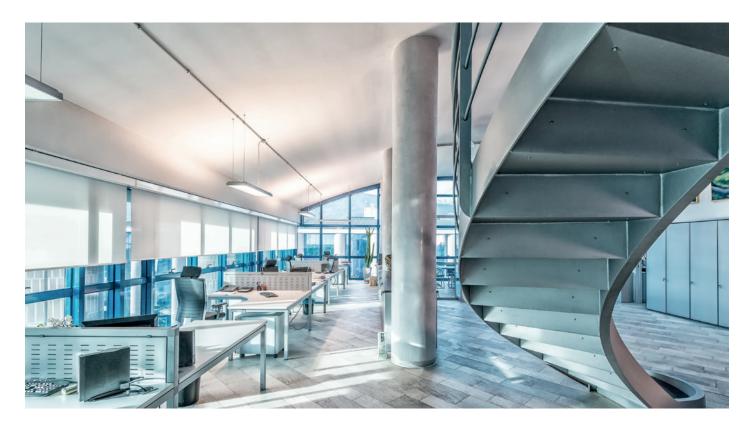

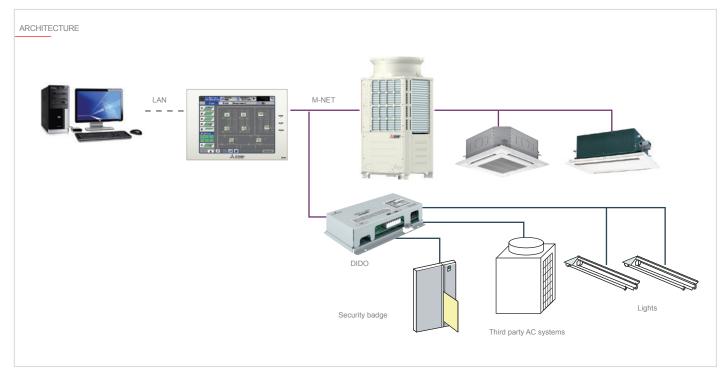





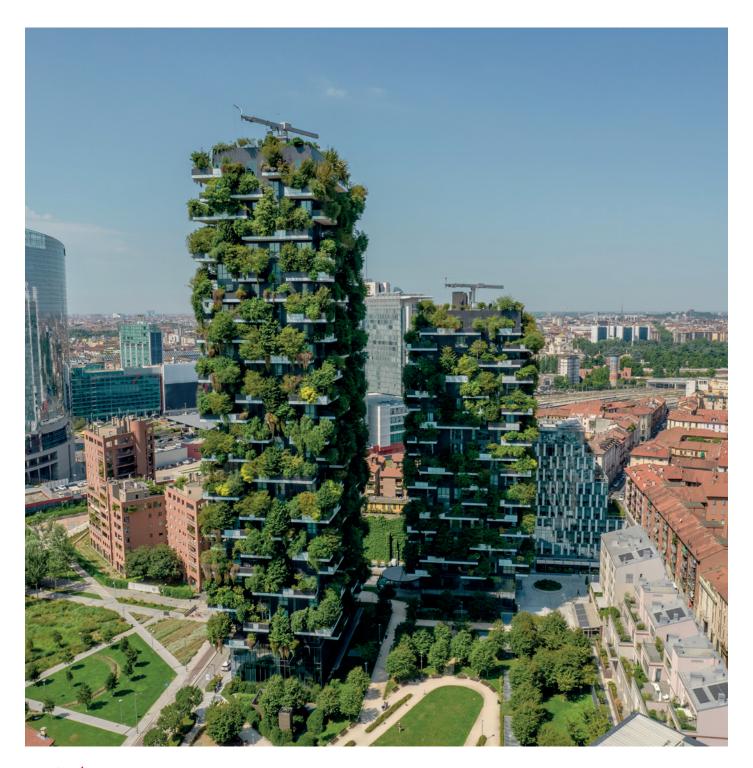

## **PROCON A1M**

#### MODBUS AND BACNET INTERFACE FOR INDOOR UNITS



### Product description

The MelcoBEMS MINI (A1M) Procon protocol converter is used for remote monitoring and control of Air-Air products (split AC units, M, S and P series) and Air-Water products (CAHV, CRHV, PWFY) and functions as a gateway between the system and external third-party equipment.

MelcoBEMS MINI (A1M) reads continuously from the system and changes the configuration if necessary. Since reading occurs in continuous mode, the data stored in MelcoBEMS MINI (A1M) are always up to date.

The data are then made available to external devices via the RS-485 port by means of the Modbus RTU software protocol. The data can be read and edited by means of this connection. For more information, consult the Modbus section.


MelcBEMS MINI (A1M) is activated with connector CN105/ CN92; an external power supply is therefore not required.

### Compatibility

Air-air units

- Air-water units
- Lossnay unit
- E-Series chillers
- Ecodan geothermal heat pumps:
- Ecodan air-cooled heat pump:
- City Multi
- Hybrid City Multi
- Important:

When the MelcoBEMS MINI (A1M) is connected, it is not possible to connect MAC-397IF and MAC-399IF units because they use the same connector CN105/CN92.

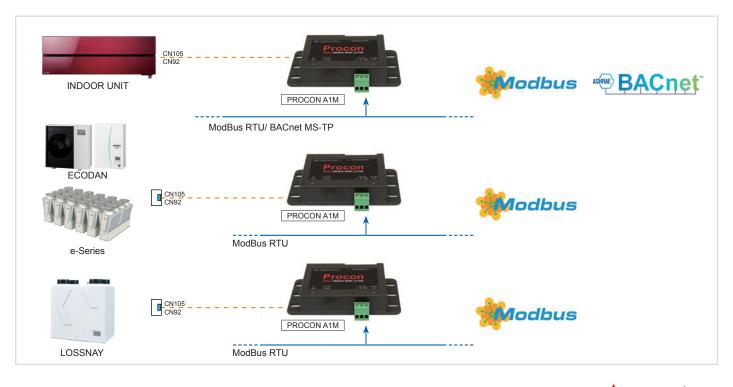



### **PROCON A1M**

PROCON A1M is a point-to-point interface for ModBus RTU and BACNet MS/TP (max 1 unit per interface). PROCON A1M is used for monitoring and control, functioning as a gateway between individual units and third-party external equipment.


| Variables           | PROCON A1M   | ME-AC-KNX-1-V2 |
|---------------------|--------------|----------------|
| On/Off              | •            | •              |
| Mode                | •            | •              |
| Set Point           | Single       | Single         |
| Fan speed           | •            | •              |
| Ambient temperature | •            | •              |
| Alarm presence      | •            | •              |
| Alarm code          | •            | •              |
| Variable addresses  | Fixed layout | ETS Database   |

| Features          | ATA | ATW         | Lossnay |
|-------------------|-----|-------------|---------|
| Modbus RTU        | •   | •           | •       |
| BACnet MS/TP      | •   |             |         |
| Virtual set point |     | •           |         |
| Modalità Deadband |     | •           |         |
| Firmware update   |     | Over RS-485 |         |

\* on ECODAN/LOSSNAY only Modbus RTU

### FOR COMMERCIAL APPLICATIONS

Connection diagrams for ME-Series line chillers

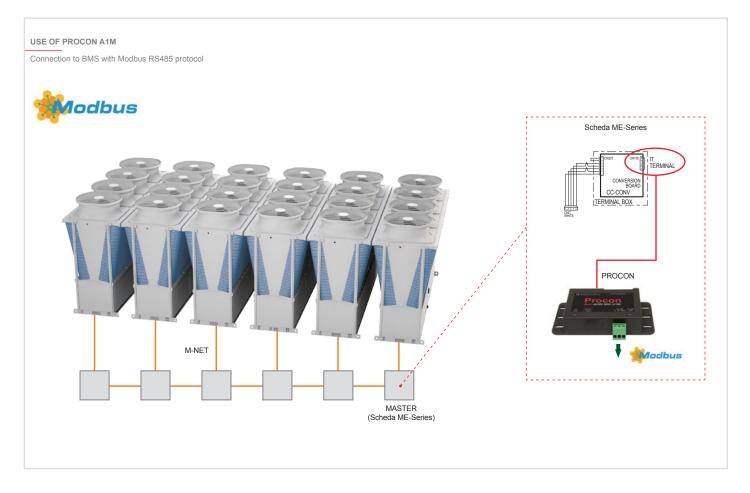





### **Product description**

New ModBus point-to-point interface compatible with direct expansion HVAC systems such as RAC, Mr.Slim and VRF systems. The above interface joins the existing PROCON A1M.

Unlike PROCON A1M, the new ME-AC-MBS-1 cannot be connected to Ecodan or Lossnay units in 1:1 mode (connection to CN105).

Note also that the Modbus communication addresses are different from those of existing product PROCON A1M.

(The MODBUS addresses table is annexed in the internal part of the professionals area.)  $% \label{eq:constraint}$ 

The RAC and SLIM units connectible to ME-AC-MBS-1 are the same as those connectible to PROCON A1M, i.e. all units equipped with CN105.












### **Product description**

ME-AC-KNX-1-v2 is a point-to-point interface for the KNX protocol (max 1 unit per interface). It is used for remote monitoring and control, functioning as a gateway between individual indoor units and third-party external equipment.

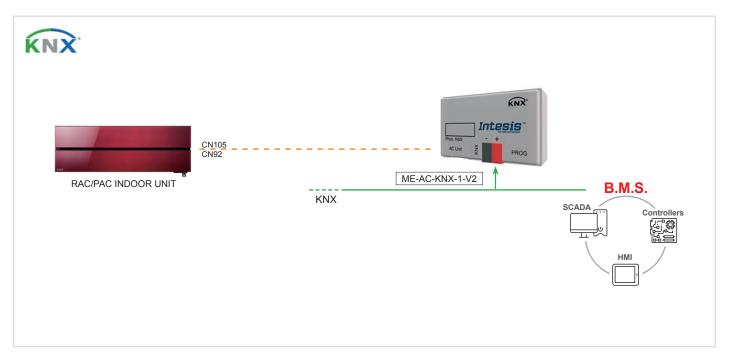


## **CONNECTION DIAGRAMS**

CONNECTION DIAGRAMS FOR INDOOR UNITS


## **M SERIES - Indoor unit**

CONNECTORS

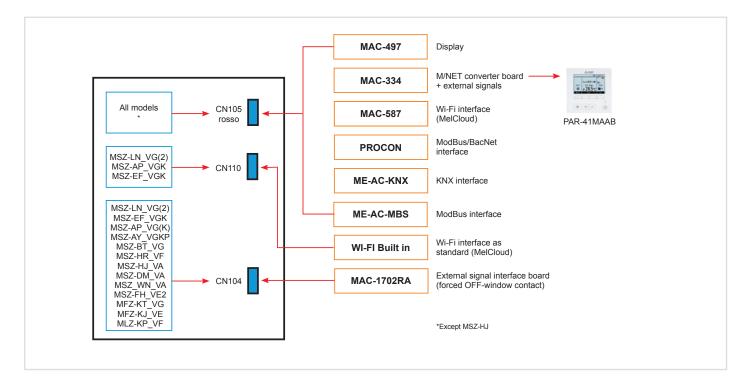

## S SERIES - Indoor unit


CONNECTORS

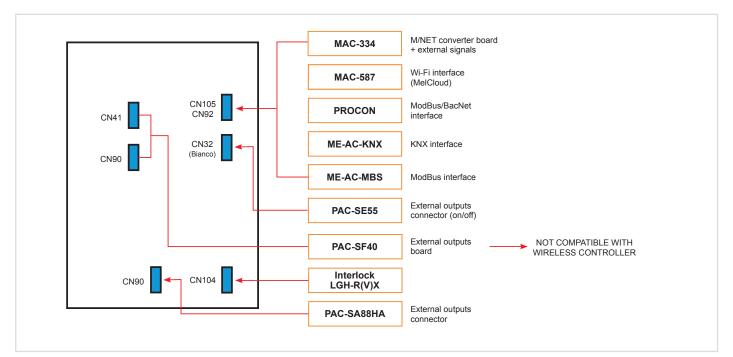






# P SERIES - Indoor unit

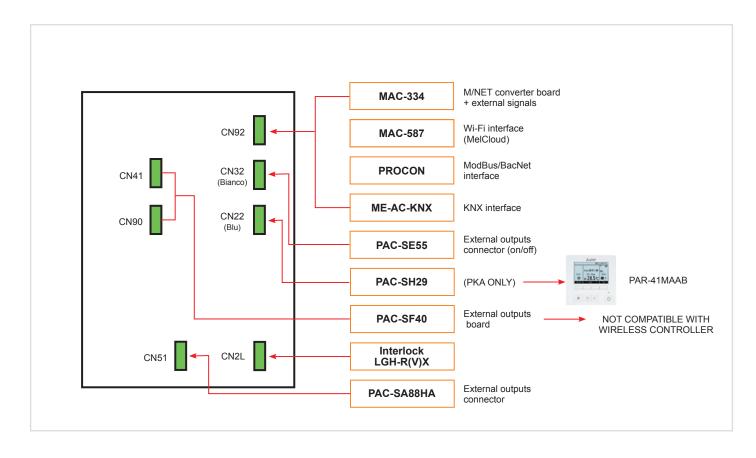

## **P SERIES - Outdoor unit**

CONNECTORS

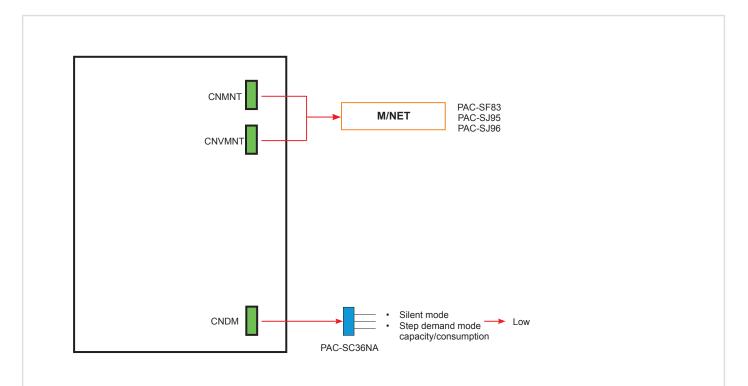



## **Ancillary functions**

|          |               | Wired Control<br>Connection | Window contact*           | Remote ON/OFF                       | Group control      | M/NET                               | Start/Stop<br>OK/Error              |
|----------|---------------|-----------------------------|---------------------------|-------------------------------------|--------------------|-------------------------------------|-------------------------------------|
| M Series | All modelsi** | MAC-497<br>MAC-334          | MAC-334<br>MAC-1702RA *** | MAC-334                             | MAC-497<br>MAC-334 | MAC-334                             | MAC-334                             |
| S Series | SLZ-M         | direct connection           | MAC-334<br>PAC-SE55       | MAC-334<br>PAC-SE55RA<br>PAC-SA88HA | MAC-497<br>MAC-334 | MAC-334                             | MAC-334<br>PAC-SF40RM<br>PAC-SA88HA |
| obernes  | SEZ-M         | direct connection           |                           |                                     |                    |                                     |                                     |
| P Series | PKA-M         | PAC-SH29                    | MAC-334<br>PAC-SE55RA     | MAC-334<br>PAC-SE55RA<br>PAC-SA88HA | direct connection  | MAC-334<br>PAC-SJ95MA<br>PAC-SJ96MA | MAC-334<br>PAC-SF40RM<br>PAC-SA88HA |
| P Series | Other models  | direct connection           | FAC-SESSINA               |                                     |                    |                                     |                                     |

\* WARNING check reset options \*\* current models. For earlier models, consult the sales network \*\*\* see compatibility list For P and S series, set and SW5-8 to OFF or cut JP if PAR-FL32, PAC-YT52 or PAR-33 are used (including other past models)








# ETHERNET BASED BMS INTEGRATION



### XML - Ethernet based BMS integration


XML is an innovative new communication system developed specifically for exchanging data over the web. XML makes it possible to create custom software extremely simply, which can even be used with a standard internet browser. The XML protocol makes it possible to integrate with a BMS system using the AE-200E/EW-50 WEB Server centralised controllers, with no additional dedicated hardware interfaces. As all the information necessary for the BMS system is available in XML format directly over the Ethernet communication port of the AE-200E / EW-50 controller, it is simply necessary to connect both the AE-200E / EW-50 WEB Server centralised controllers and the BMS computer system to the same network. Connecting to a BMS system with the XML protocol is extremely simple, as the Ethernet network platform is used. No dedicated conversion or interface hardware is needed, as shown in the typical layout schematic.

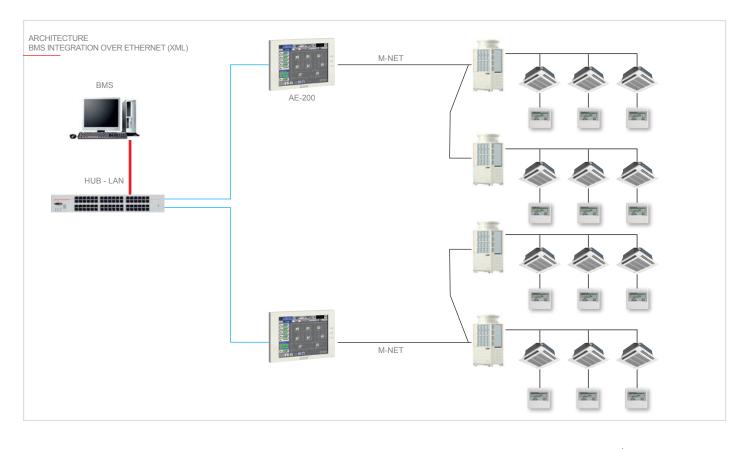



## **BACnet®** Pin code

**BMS INTEGRATION FOR BACNET® NETWORKS** 

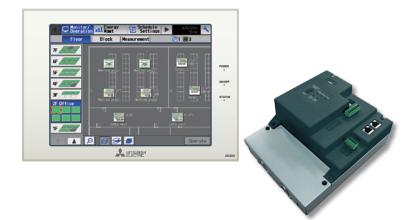

## PIN code for interfacing with BACnet<sup>®</sup> network

The BACnet<sup>®</sup> protocol was originally developed by ASHRAE in North America specifically for HVAC applications (Heat, Ventilation, Air Conditioning).


It was subsequently also adopted in Europe as one of the standard communication solutions for air conditioning systems, together with Lon-Works<sup>®</sup>, and other protocols. The capabilities of the BACnet<sup>®</sup> protocol make it the ideal system for large installations and for complex, multi-level building management processes.

A new function developed for WEB Server 3D centralised controllers

(AE-200 and EW-50) now makes it possible to interface Mitsubishi Electric systems directly with the BACnet<sup>®</sup> network of the building without installing additional hardware components.

The centralised controller is connected to the network via a dedicated Ethernet port on the back of the controller itself, included in addition to the port already used for connection to a LAN local network

A BACnet<sup>®</sup> PIN code license must be purchased for each individual centralised controller. Each centralised controller enabled with a BACnet<sup>®</sup> PIN code license may manage up to 50 indoor units and 50 groups.

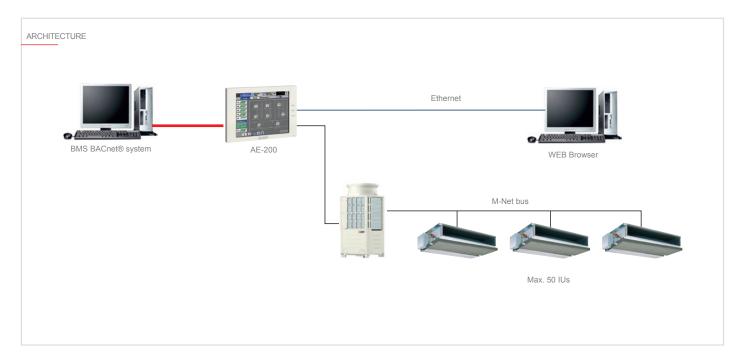

### Functions

| Functions                            |  |  |  |  |  |
|--------------------------------------|--|--|--|--|--|
| OPERATION                            | OPERATION  |  |  |  |  |
| FUNCTION                             | DESCRIPTION  |  |  |  |  |
| On/Off                               | Switch unit on/off   |  |  |  |  |
| Mode                                 | Set operating mode   |  |  |  |  |
| Fan speed                            | Set fan speed  |  |  |  |  |
| Set temperature                      | Set temperature setpoint   |  |  |  |  |
| Set Temperature (Cool)               | Set temperature in cooling mode for Dual Setpoint function             |  |  |  |  |
| Set Temperature (Heat)               | Set temperature in heating mode for Dual Setpoint function             |  |  |  |  |
| Set Temperature (Auto)               | Set temperature in Auto mode for Dual Setpoint function                |  |  |  |  |
| Set Setback Temp (High)              | Set upper limit for maintenance temperature function                   |  |  |  |  |
| Set Setback Temp (Low)               | Set lower limit for maintenance temperature function                   |  |  |  |  |
| Reset filter indicator               | Reset filter indicator   |  |  |  |  |
| Disable local On/Off                 | Disable local On/Off control   |  |  |  |  |
| Disable local mode selection         | Disable/enable local operating mode selection                          |  |  |  |  |
| Disable local filter indicator reset | View status of Disable filter indicator reset function                 |  |  |  |  |
| Disable temperature setting          | Disable/enable setpoint setting  |  |  |  |  |
| MONITORING                           |  |  |  |  |  |
| FUNCTION                             | DESCRIPTION  |  |  |  |  |
| Force off                            | Force unit to off state  |  |  |  |  |
| On/Off                               | View unit on/off state   |  |  |  |  |
| Mode                                 | View unit operating mode   |  |  |  |  |
| Fan speed                            | View fan speed   |  |  |  |  |
| Set temperature                      | View temperature setpoint  |  |  |  |  |
| Set Temperature (Cool)               | View setpoint temperature for cooling mode with Dual Setpoint function |  |  |  |  |
| Set Temperature (Heat)               | View setpoint temperature for heating mode with Dual Setpoint function |  |  |  |  |
| Set Temperature (Auto)               | View setpoint temperature for Auto mode with Dual Setpoint function    |  |  |  |  |
| Set Setback Temp (High)              | View upper limit set for maintenance temperature function              |  |  |  |  |
| Set Setback Temp (Low)               | View lower limit set for maintenance temperature function              |  |  |  |  |
| Filter indicator                     | View filter indicator signal   |  |  |  |  |
| Indoor temperature                   | View indoor ambient temperature  |  |  |  |  |
| Disable local On/Off                 | View status of Disable local On/Off function                           |  |  |  |  |
| Disable local mode selection         | View status of Disable local mode selection function                   |  |  |  |  |
| Disable local filter indicator reset | View status of Disable filter indicator reset function                 |  |  |  |  |
| Disable temperature setting          | View status of Disable temperature setpoint setting function           |  |  |  |  |
| Force off                            | View Force off function status   |  |  |  |  |
| Alarm signal                         | View alarm signal  |  |  |  |  |
| Error code                           | View error code  |  |  |  |  |
| Communication status                 | View communication status  |  |  |  |  |



## **ME-AC-MBS-KNX-100**

B.M.S. INTERFACE FOR MODBUS® AND KNX NETWORKS®






### **ME-AC-MBS-KNX-100**

With this gateway **ME-AC-MBS-KNX-100**, you can easily integrate Mitsubishi Electric's City Multi systems into an installation based on Modbus TCP, Modbus RTU, KNX, BACnet/IP. To do this, the gateway acts as a server device for the installation itself, accessing all signals from each air-conditioning unit and controlling the entire air-conditioning network.

The gateway is continuously interrogating the air conditioning network, storing in its memory the current status of each signal to be monitored and providing this data to the installation when requested.

In addition, when the status of a signal changes, the gateway sends a write telegram to the installation, waits for a response and performs the corresponding action. A non-response from a signal triggers a communication error, allowing you to know which signal from which airconditioning unit is malfunctioning.

The interface is connected to the Modbus supervisory system via an RS232/RS485 or TCP/IP over Ethernet connection and via Ethernet to the Mitsubishi Electric VRF CITY MULTI system.

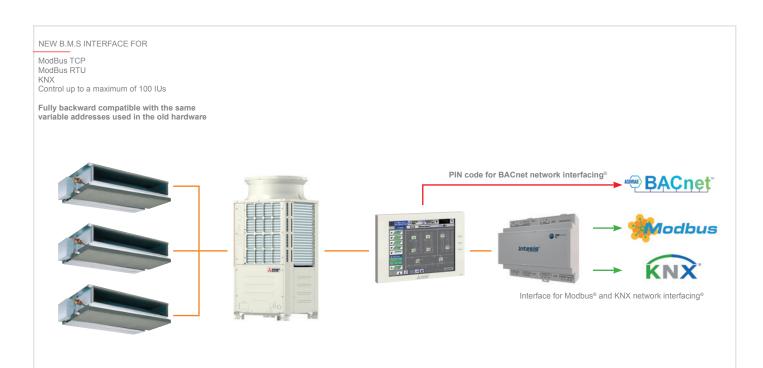

### B.M.S. interface - for Modbus networks®

The Modbus protocol is a communication protocol originally used for PLC networks. Mitsubishi Electric offers an interface for the management of up to 100 indoor units (ME-AC-MBS-KNX-100) for management via B.M.S. of the VRF CITY MULTI system.

The interface is connected to the Modbus supervisory system via either an RS232/RS485 or TCP/IP over Ethernet connection and via



| Eu  | nctio | n ta  | hle |
|-----|-------|-------|-----|
| I U | notio | 11 14 | NIC |

| OPERATION                          |   |  |  |
|------------------------------------|---|--|--|
| FUNCTION                           | DESCRIPTION                                       |  |  |
| On/Off                             | Unit on/off setting                               |  |  |
| Mode                               | Setting the operating mode                        |  |  |
| Set Temperature                    | Setpoint temperature setting                      |  |  |
| Air direction                      | Setting airflow direction                         |  |  |
| Fan speed                          | Setting ventilation speed                         |  |  |
| Prohibit remote control            | Remote control prohibition setting                |  |  |
| Prohibit Local On/Off              | Setting prohibition command On/Off                |  |  |
| Prohibit local mode change         | Operation mode change command prohibition setting |  |  |
| Prohibit Temperature Set           | Setpoint setting prohibition                      |  |  |
| Prohibit local filter signal reset | Filter signal reset prohibition setting           |  |  |
| Lossnay ventilation set            | Lossnay ventilation speed setting                 |  |  |
| Reset filter signalling            | Reset filter signal                               |  |  |
| Reset error status                 | Reset error status                                |  |  |
| Active polling                     | Activation/deactivation of group polling          |  |  |
| Forced off                         | Forced shutdown                                   |  |  |




### **Function table**

| MONITORING                         |   |  |  |
|------------------------------------|---|--|--|
| FUNCTION                           | DESCRIPTION                                       |  |  |
| On/Off                             | Unit on/off setting                               |  |  |
| Communication error                | Communication error with centraliser              |  |  |
| Mode                               | Setting the operating mode                        |  |  |
| Set Temperature                    | Setpoint temperature setting                      |  |  |
| Air direction                      | Airflow direction setting                         |  |  |
| Fan speed                          | Setting ventilation speed                         |  |  |
| Prohibit remote control            | Remote control prohibition setting                |  |  |
| Prohibit Local On/Off              | Setting prohibition command On/Off                |  |  |
| Prohibit local mode change         | Operation mode change command prohibition setting |  |  |
| Prohibit Temperature Set           | Setpoint setting prohibition                      |  |  |
| Prohibit local filter signal reset | Filter signal reset prohibition setting           |  |  |
| Lossnay ventilation set            | Lossnay ventilation speed setting                 |  |  |
| Signal filter                      | Dirty filter signal                               |  |  |
| Error signal                       | Unit signal in error                              |  |  |
| Internal temperature               | Indoor room temperature display                   |  |  |
| Reset filter signalling            | Reset filter signal                               |  |  |
| Reset error status                 | Reset error status                                |  |  |
| Group communication error          | Group communication error                         |  |  |
| Active polling                     | Polling on/off display per group                  |  |  |
| Forced off                         | Forced shutdown                                   |  |  |

### B.M.S. interface - for KNX networks®

KNX is one of the world's standard protocols for home and building control. This open protocol ensures product interoperability and compatibility of third-party products.Mitsubishi Electric offers an interface for the management of up to 100 indoor units (ME AC KNX - 100) for

management via B.M.S. of the VRF CITY MULTI system. The interface is connected directly to the EIB bus to the KNX world and via Ethernet to Mitsubishi Electric's VRF CITY MULTI system.

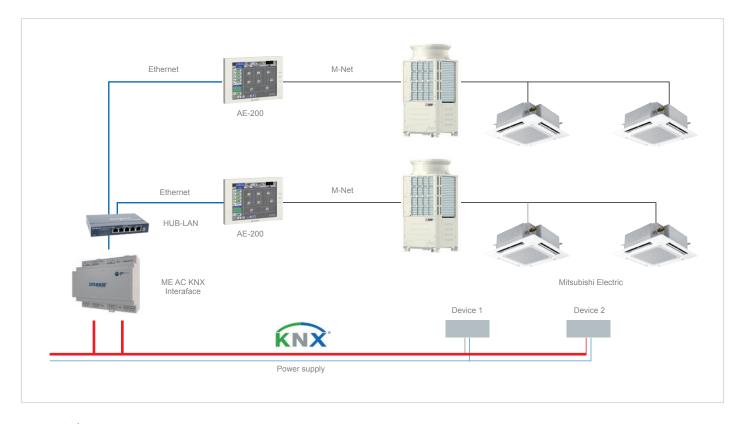

### Function table

| OPERATION                          |  |  |  |  |
|------------------------------------|--|--|--|--|
| FUNCTION                           | DESCRIPTION  |  |  |  |
| On/Off                             | Unit on/off setting                                    |  |  |  |
| Mode                               | Setting the operating mode                             |  |  |  |
| Set Temperature                    | Setpoint temperature setting                           |  |  |  |
| Air direction                      | Setting airflow direction                              |  |  |  |
| Fan speed                          | Setting ventilation speed                              |  |  |  |
| Prohibit remote control            | Remote control prohibition setting                     |  |  |  |
| Prohibit Local On/Off              | Setting prohibition command On/Off                     |  |  |  |
| Prohibit local mode change         | Operation mode change command prohibition setting      |  |  |  |
| Prohibit Temperature Set           | Setpoint setting prohibition                           |  |  |  |
| Prohibit local filter signal reset | Filter signal reset prohibition setting                |  |  |  |
| Lossnay ventilation set            | Lossnay ventilation speed setting                      |  |  |  |
| Reset filter signalling            | Reset filter signal                                    |  |  |  |
| Reset error status                 | Reset error status                                     |  |  |  |
| Inlet Temp                         | Virtual setpoint setting (temperature supplied by KNK) |  |  |  |
| MONITORING                         |  |  |  |  |
| FUNCTION                           | DESCRIPTION  |  |  |  |
| On/Off                             | Unit on/off setting                                    |  |  |  |
| Communication error                | Communication error with centraliser                   |  |  |  |
| Mode                               | Setting the operating mode                             |  |  |  |
| Set Temperature                    | Setpoint temperature setting                           |  |  |  |
| Air direction                      | Setting airflow direction                              |  |  |  |
| Fan speed                          | Setting ventilation speed                              |  |  |  |
| Prohibit remote control            | Remote control prohibition setting                     |  |  |  |
| Prohibit Local On/Off              | Setting prohibition command On/Off                     |  |  |  |
| Prohibit local mode change         | Operation mode change command prohibition setting      |  |  |  |
| Prohibit Temperature Set           | Setpoint setting prohibition                           |  |  |  |
| Prohibit local filter signal reset | Setting prohibition reset filter signalling            |  |  |  |
| Lossnay ventilation set            | Lossnay ventilation speed setting                      |  |  |  |
| Signal filter                      | Dirty filter signal                                    |  |  |  |
| Error signal                       | Unit signal in error                                   |  |  |  |
| Internal temperature               | Indoor room temperature display                        |  |  |  |
| Reset filter signalling            | Reset filter signalling                                |  |  |  |
| Reset error status                 | Reset error status                                     |  |  |  |
| Group communication error          | Group communication error                              |  |  |  |
| Inlet Temp                         | Virtual temperature display (provided by KNK)          |  |  |  |

### **Compatibility list**

### MONITORING

| G-50     | AE-200  |
|----------|---------|
| G-50A    | AE-50   |
| GB-50A   | AG-150A |
| GB-50ADA | EW-50   |
| AB-150   | EB-50GU |





Mitsubishi Electric Europe B.V. Italian Branch

Via Energy Park, 14 20871 Vimercate (MB) Phone: +39 039 60531 Fax: +39 039 6057694 e-mail: clima@it.mee.com

The equipment described in this catalogue contain fluorinated gasses such as HFC-32 (GWP 675), HFC-410A (GWP 2088). Installation of those equipment must be executed by professional installer based on EU reg. 303/2008 and 517/2014

#### CONTROL SYSTEMS CATALOGUE 2024 E-2407235 (18729) replaces E-2204235 (17370)

Specifications are subject to change without notice

